Back

FURUNO

OPERATOR'S MANUAL

GPS/PLOTTER/SOUNDER

MODEL GP-1640F

FURUNO ELECTRIC CO., LTD.
NISHINOMIYA, JAPAN

PRINTED IN JAPAN

© FURUNO ELECTRIC CO., LTD.

9-52 Ashihara-cho,
Nishinomiya, Japan

Telephone : 0798-65-2111
Telefax : 0798-65-4200

All rights reserved. Printed in Japan

PUB.No. OME-44231

(HIMA) GP-1640F

Your Local Agent/Dealer

FIRST EDITION : JUN. 2002
B : AUG. 28,2002

00080930100

OME44231B00

⚠ SAFETY INSTRUCTIONS

⚠ WARNING

Do not open the equipment.

Hazardous voltage which can cause electrical shock, burn or serious injury exists inside the equipment. Only qualified personnel should work inside the equipment.

Do not disassemble or modify the equipment.

Fire, electrical shock or serious injury can result.

Turn off the power immediately if water leaks into the equipment or the equipment is emitting smoke or fire.

Continued use of the equipment can cause fire or electrical shock.

Do not place liquid-filled containers on the top of the equipment.

Fire or electrical shock can result if a liquid spills into the equipment.

Do not operate the equipment with wet hands.

Electrical shock can result.

Keep heater away from equipment.

Heat can alter equipment shape and melt the power cord, which can cause fire or electrical shock.

⚠ CAUTION

Do not use the equipment for other than its intended purpose.

Use of the equipment as a stepping stool, for example, can result in personal injury or equipment damage.

No one navigation device should ever be solely replied upon for the navigation of a vessel.

Always confirm position against all available aids to navigation, for safety of vessel and crew.

GPS position and velocity accuracies are controlled by the U.S. Department of Defense. Position may be degraded up to 100 meters.

Confirm that the power supply voltage is compatible with the voltage rating of the equipment.

Connection to the wrong power supply can cause fire or equipment damage.

A warning label is attached to the equipment. Do not remove the label. If the label is missing or illegible, contact a FURUNO agent or dealer.

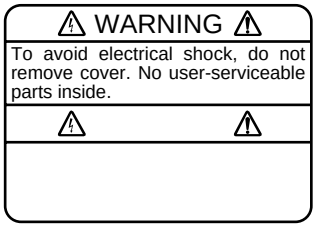

Name: Warning Label (1)
Type: 86-003-1011-0
Code No.: 100-236-230

⚠ NOTICE

Install the equipment in accordance with the recommended procedures set forth is this manual.

Intended performance cannot be expected unless the equipment is installed properly.

Risk of explosion if battery is replaced by an incorrect type.
Dispose of used batteries according to the instructions.

About the STN LCD

The STN is constructed using the latest STN techniques, and displays 99.99% of its pixels. The remaining 0.01% of the pixels may drop out or blink, however this is not an indication of malfunction.

TABLE OF CONTENTS

FOREWORD v

SYSTEM CONFIGURATION vi

WHAT IS WAAS? vii

1. OPERATIONAL OVERVIEW

1.1 Display Unit Controls 1-1
1.2 Inserting Mini Chart Card 1-2
1.3 Turning the Power On/Off 1-2
1.4 Adjusting Tone and Brilliance 1-3
1.5 Plotter Displays 1-3
1.6 Sounder Display 1-4
1.7 Menu Operation, Soft Keys 1-4
1.8 Demonstration Display 1-5

2. VIDEO SOUNDER OPERATION

2.1 Principle of Operation 2-1
2.2 Sounder Display Description 2-2
2.3 Plotter/Sounder Display 2-4
2.4 Dual-frequency Display 2-4
2.5 Automatic Sounder Operation 2-5
2.6 Manual Sounder Operation 2-5
2.7 Measuring Depth 2-6
2.8 Suppressing Interference 2-7
2.9 Suppressing Low Level Noise 2-7
2.10 Erasing Weak Echoes 2-8
2.11 Selecting Picture Advance Speed . 2-8
2.12 Alarms 2-9

3. PLOTTER DISPLAYS

3.1 Presentation Modes 3-1
3.2 Cursor 3-2
3.3 Shifting the Display 3-2
3.4 Selecting Chart Scale/Range 3-2
3.5 Mini Chart Cards 3-2
3.6 Navigation Data Display 3-5
3.7 Steering Display 3-6
3.8 Highway Display 3-7
3.9 Changing Operation Mode 3-8
3.10 Navigation Trip Distance 3-8

4. TRACK

4.1 Displaying Track 4-1
4.2 Stopping/Restarting Plotting of Track 4-2
4.3 Track Plotting Method, Interval 4-2
4.4 Changing Track Memory Capacity . 4-3
4.5 Erasing Track 4-3

5. MARK

5.1 Entering Marks 5-1
5.2 Changing Mark Attributes 5-2
5.3 Changing Mark Size 5-2
5.4 Erasing Marks 5-3
5.5 Displaying Track and Mark Points .. 5-3

6. WAYPOINTS

6.1 Entering Waypoints 6-1
6.2 Erasing Individual Waypoints 6-4
6.3 Changing Waypoint Data 6-4
6.4 Waypoint Mark Size 6-5
6.5 Changing Waypoint Position on the Plotter Display 6-5
6.6 Searching Waypoints 6-5

7. ROUTES

7.1 Entering Routes 7-1
7.2 Connecting Routes 7-2
7.3 Inserting, Removing Waypoints 7-3
7.4 Creating Track-based Routes 7-4
7.5 Erasing Routes 7-5

8. NAVIGATION

8.1 Navigating to “Quick Points” 8-1
8.2 Navigating to Waypoints (waypoint list) 8-2
8.3 Navigating to Ports, Port Services .. 8-2
8.4 Following a Route 8-4
8.5 Canceling Navigation 8-6

9. PLOTTER ALARMS

9.1 Introduction 9-1
9.2 Audio Alarm On/Off 9-1
9.3 Arrival Alarm 9-1
9.4 Anchor Watch Alarm 9-2

9.5 XTE (Cross Track Error) Alarm 9-2
9.6 Speed Alarm 9-3
9.7 Proximity Alarm.....9-3
9.8 Alarm Information 9-4

10. SAVING AND LOADING DATA TO/FROM MEMORY CARD

10.1 Formatting Memory Cards 10-1
10.2 Saving Data to Memory Card.....10-2
10.3 Loading Data from Memory Card.10-3

11. CUSTOMIZING YOUR UNIT

11.1 CHART SETUP OPTIONS menu 11-1
11.2 DISPLAY OPTIONS menu 11-2
11.3 GPS/DGPS/TD OPTIONS menu.. 11-5
11.4 SOUNDER SETUP OPTIONS menu 11-8
11.5 CONFIGURATION menu 11-10

12. USING C-MAP NT MODEL

12.1 Inserting Chart Card 12-1
12.2 Cursor and Data Display 12-1
12.3 Tidal Information 12-2
12.4 Navigating to Ports, Port Services.12-3
12.5 Setting Chart Setup Options.....12-5
12.6 Selecting Chart Scale/Range 12-6
12.7 Displaying Program Number 12-7

13. MAINTENANCE & TROUBLESHOOTING

13.1 Maintenance 13-1
13.2 Replacement of Fuse, Battery.....13-2
13.3 Simple Troubleshooting 13-2
13.4 Error Messages 13-3
13.5 Diagnostic Tests.....13-4
13.6 Clearing Memories.....13-6

APPENDIX

Menu Tree A-1
Loran C Chains..... A-3
Decca Chains A-4
World Time..... A-5
Geodetic Chart List A-6

SPECIFICATIONS..... SP-1

INDEX..... IN-1

DECLARATION OF CONFORMITY

FOREWORD

A Word to GP-1640F Owners

Congratulations on your choice of the FURUNO GP-1640F GPS PLOTTER/SOUNDER. We are confident you will see why the FURUNO name has become synonymous with quality and reliability.

For over 50 years FURUNO Electric Company has enjoyed an enviable reputation for innovative and dependable marine electronics equipment. This dedication to excellence is furthered by our extensive global network of agents and dealers.

This equipment is designed and constructed to meet the rigorous demands of the marine environment. However, no machine can perform its intended function unless installed, operated and maintained properly. Please carefully read and follow the recommended procedures for operation and maintenance.

We would appreciate hearing from you, the end user, about whether we are achieving our purposes.

Thank you for considering and purchasing FURUNO equipment.

Features

The main features of the GP-1640F are

- Comprehensive navigation data displays.
- Bright 5.6-inch LCD with temperature compensated tone and brilliance control.
- Automatic coastline chart loading.
- Position display in latitude and longitude, Loran C or Decca TDs.
- Accepts both FURUNO and NAVIONICS or C-MAP NT mini chart cards.
- Alarms: Arrival, Anchor Watch, Cross-track Error, Speed, Proximity.
- Man overboard feature records latitude and longitude coordinates at time of man overboard.
- “Highway” display provides graphic presentation of ship’s track and is useful for monitoring cross track error.
- WAAS capability
- Automatic or manual video sounder operation

.

SYSTEM CONFIGURATION

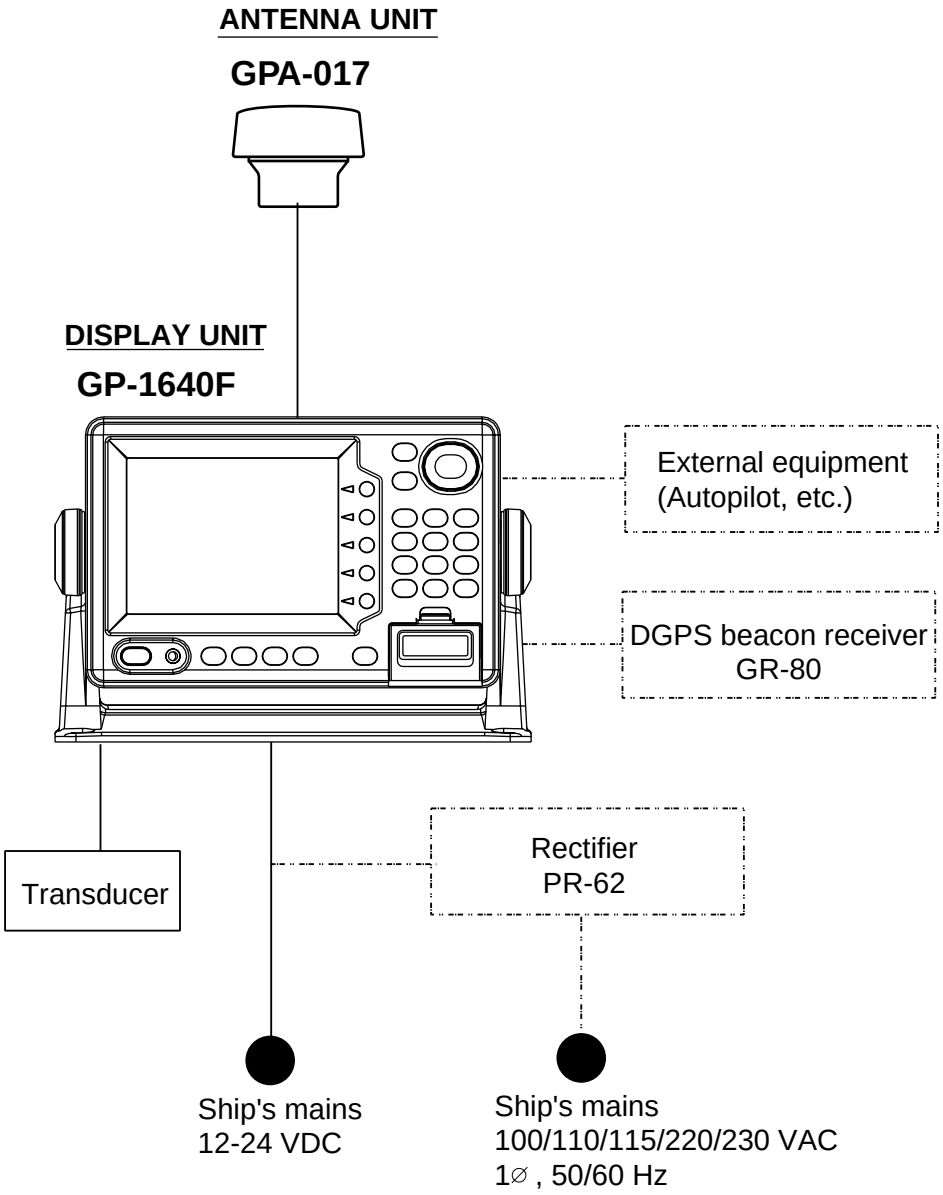

WHAT IS WAAS?

WAAS, available in North America, is a provider in the worldwide SBAS (Satellite Based Augmentation System) navigation system. SBAS provides GPS signal corrections to SBAS users, for even better position accuracy, typically better than three meters. Two more SBAS providers are also currently under development, MSAS (Multi-Functional Satellite Augmentation System) for Japan and EGNOS (Euro Geostationary Navigation Overlay Service) for Europe. All providers will be compatible with one another, thus providing “seamless” position fixes to SBAS users.

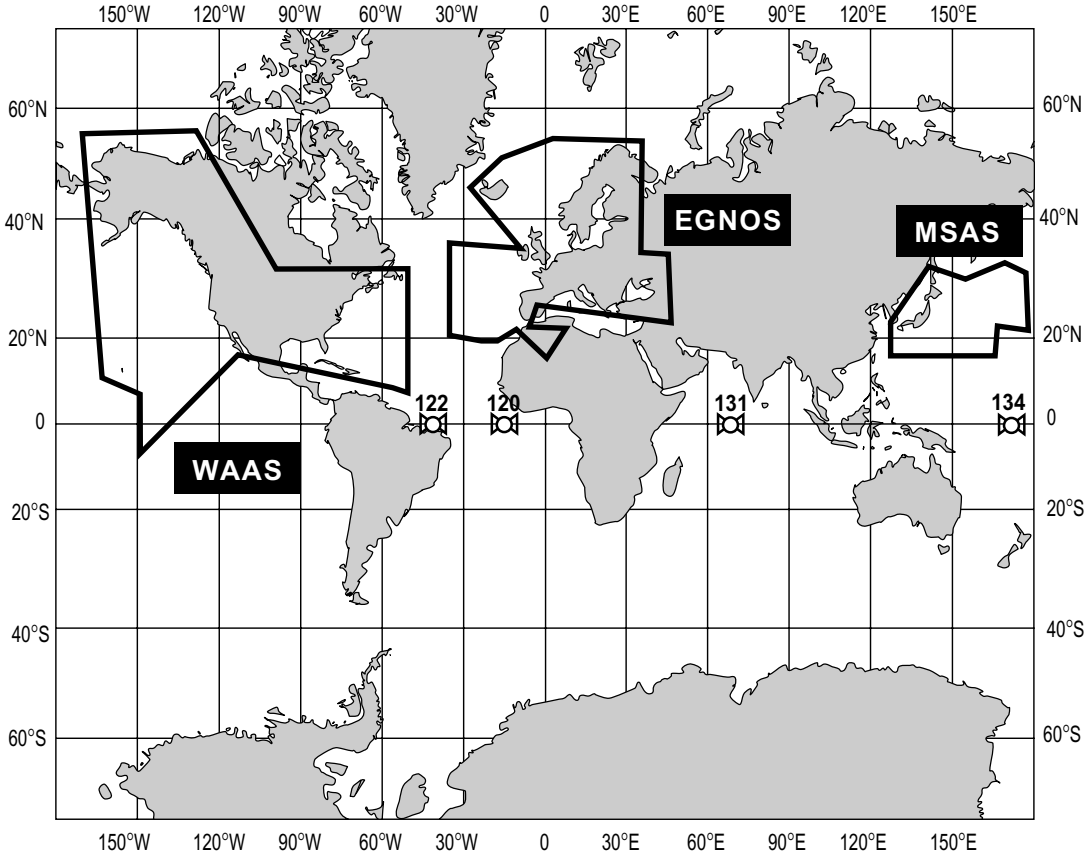

Satellite, Region	Position
120, AOR-E	15.5°W
122, AOR-W	54°W
131, IOR	64.5°E
134, POR	178°E

Initial operation time
WAAS: 2003 EGNOS: 2004 MSAS: 2005

At the time of this software release, SBAS is still under development (Providers are expected to have initial operations capability from the times shown above.) During this developmental period, which may last for several years, there is no guarantee of the accuracy, integrity, continuity, or availability of the SBAS signal. Furuno will accept no responsibility for the use of the signal for other than the above stated purpose. It is the user's responsibility to exercise common prudence and navigational judgment while using the SBAS signal.

Note: This manual uses “WAAS” when referring to any SBAS provider.

This page is intentionally left blank.

1. OPERATIONAL OVERVIEW

This chapter acquaints you with the basics of your unit - from turning on the power to the soft key menu operation.

1.1 Display Unit Controls

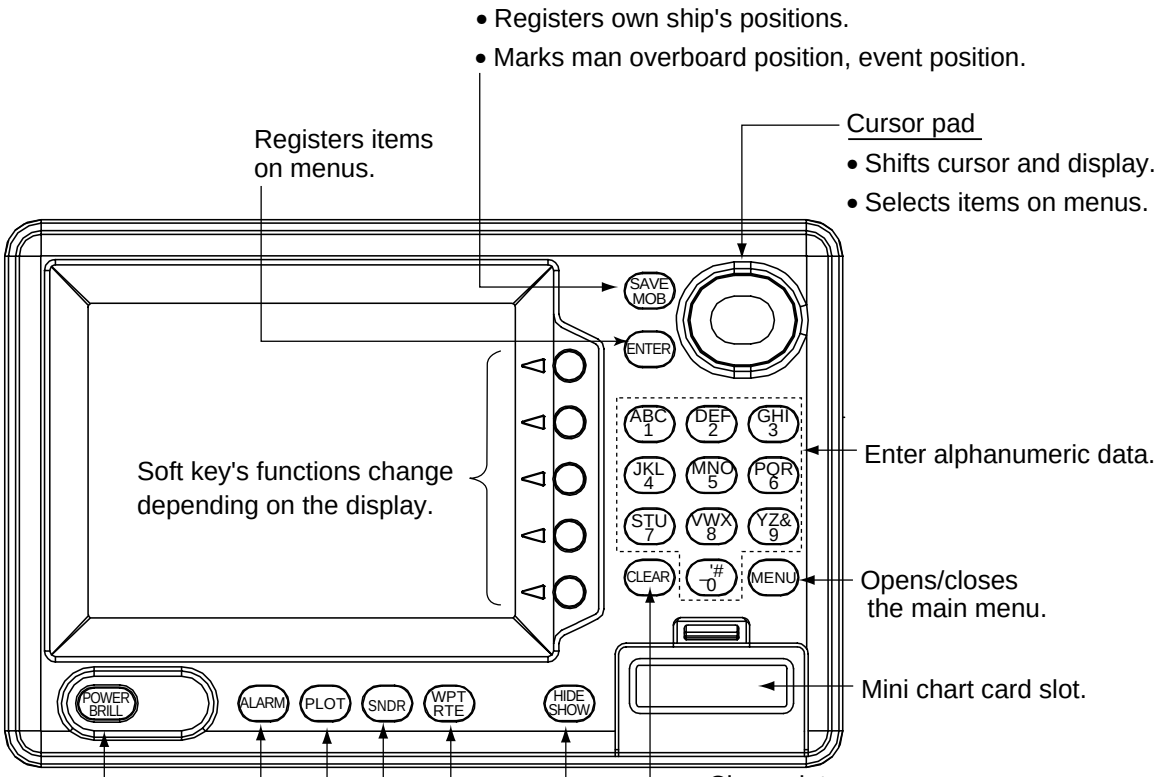

Display unit

1.2 Inserting Mini Chart Card

Insert appropriate mini chart card before turning on the power.

1. Push down the lid catch to open the mini chart card slot cover.

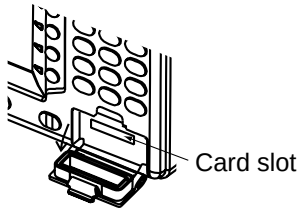

Location of mini chart card slot cover

2. Insert appropriate mini chart card groove side up.
3. Close the slot cover to protect the chart drive. (Keep the slot cover closed at all times.)

Note: Turn off power before inserting or ejecting the mini chart card.

1.3 Turning the Power On/Off

Press the [POWER/BRILL] key at bottom left-hand side of the display unit to turn on the power. When the unit is turned on, it proceeds in the sequence shown below, after displaying the FURUNO information display.

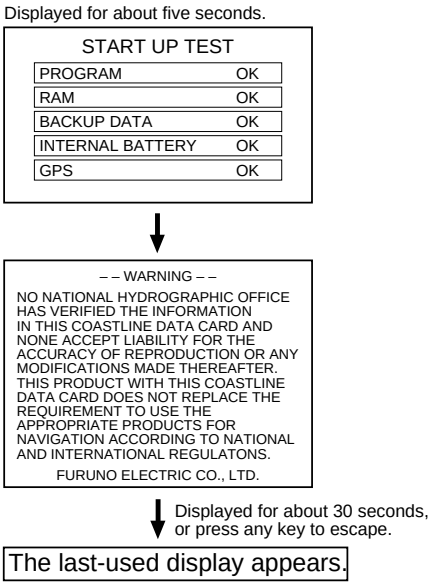
Displayed for about five seconds.
START UP TEST
PROGRAM OK
RAM OK
BACKUP DATA OK
INTERNAL BATTERY OK
GPS OK
– – WARNING – –
NO NATIONAL HYDROGRAPHIC OFFICE HAS VERIFIED THE INFORMATION IN THIS COASTLINE DATA CARD AND NONE ACCEPT LIABILITY FOR THE ACCURACY OF REPRODUCTION OR ANY MODIFICATIONS MADE THEREAFTER. THIS PRODUCT WITH THIS COASTLINE DATA CARD DOES NOT REPLACE THE REQUIREMENT TO USE THE APPROPRIATE PRODUCTS FOR NAVIGATION ACCORDING TO NATIONAL AND INTERNATIONAL REGULATONS.
FURUNO ELECTRIC CO., LTD.
Displayed for about 30 seconds, or press any key to escape.
The last-used display appears.

Start-up sequence

Your equipment takes about 90 seconds to find its position when turned on for the very first time. This is because the equipment has no satellite data, called the Almanac, in its database. If you want to lessen the time needed to find position you may enter your position manually (default position: San Francisco, USA) on the GPS SETUP OPTIONS menu.

Thereafter it takes about 12 seconds to find position each time the power is turned on.

When the satellite signal is being received normally, the equipment displays various abbreviations at the bottom left-hand corner of the display which show GPS receiver status. The following table shows these abbreviations and their meanings.

Display abbreviations

Indication	Meaning
GPS 2D	Normal 2D (dimension) GPS position fix
GPS 3D	Normal 3D GPS position fix
NO FIX	Position can not be found.
DEMO	Simulation mode
DOP	DOP error
DGPS 2D*	Normal 2D differential GPS position fix
DGPS 3D*	Normal 2D differential GPS position fix
GPS W2D	2D WAAS position fix
GPS W3D	3D WAAS position fix

*: Only when connecting with the external DGPS beacon receiver.

Turning the power off

Press and hold down the [POWER/BRILL] key until the screen goes blank. The time remaining until the power is turned off is shown on the screen.

1.4 Adjusting Tone and Brilliance

1. Press the [POWER/BRILL] key with a touch-and-release action. The tone and brill window appears.

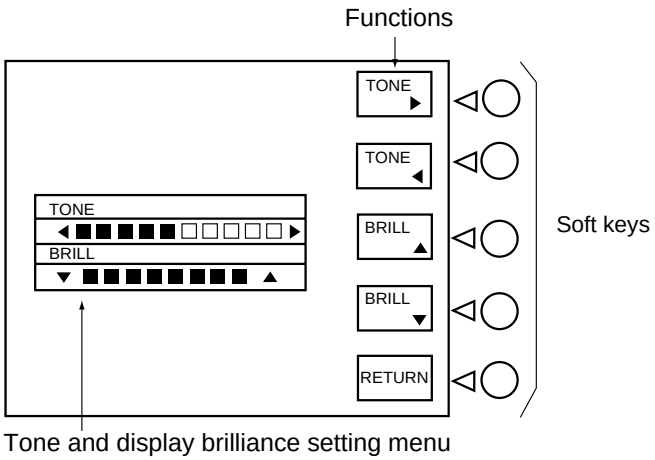

Tone and brill window

2. Press ◄ or ► to adjust display tone.
3. Press ▲ or ▼ to adjust display brilliance.

Note that tone and brilliance can also be adjusted by soft keys. After pressing the [POWER/BRILL] key, use the appropriate soft key to adjust tone or brilliance. Tone can be adjusted by pressing the [POWER/BRILL] key continuously.

Note: Tone or brilliance must be adjusted within 10 seconds after pressing the [POWER/BRILL] key or the tone and brilliance adjustment screen will be erased.

1.5 Plotter Displays

There are four types of plotter displays: Plotter display, Navigation data display, Steering display and Highway display. For details, refer to Chapter 3.

Selecting display

Press the [PLOT] key. Each time this key is pressed, the display mode changes in the sequence shown below.

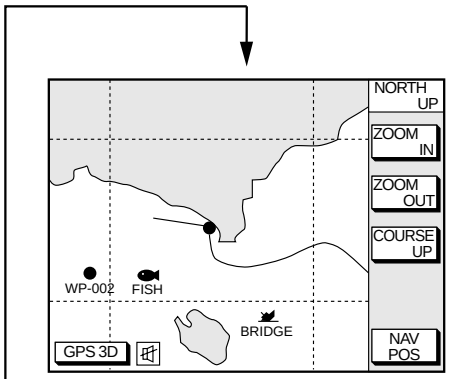

[Plotter Display]

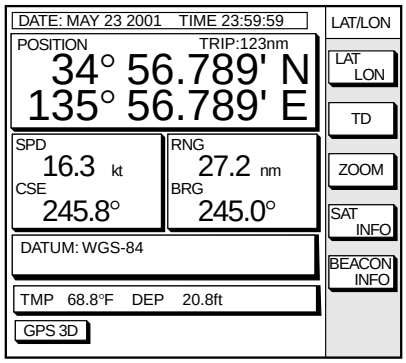

[Nav Data Display]

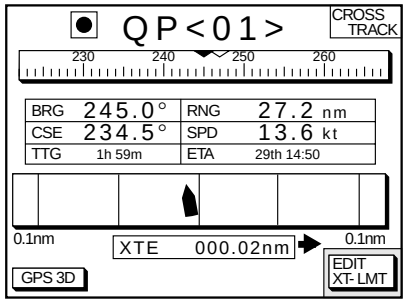

[Steering Display]

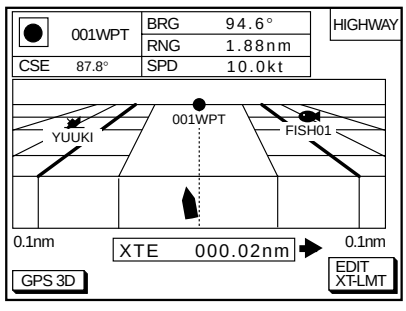

[Highway Display]

Display modes (plotter)

1.6 Sounder Display

Three sounder displays are available: Normal, Dual-frequency display and Plotter/Sounder display. You may select a sounder display with the [SNDR] key.

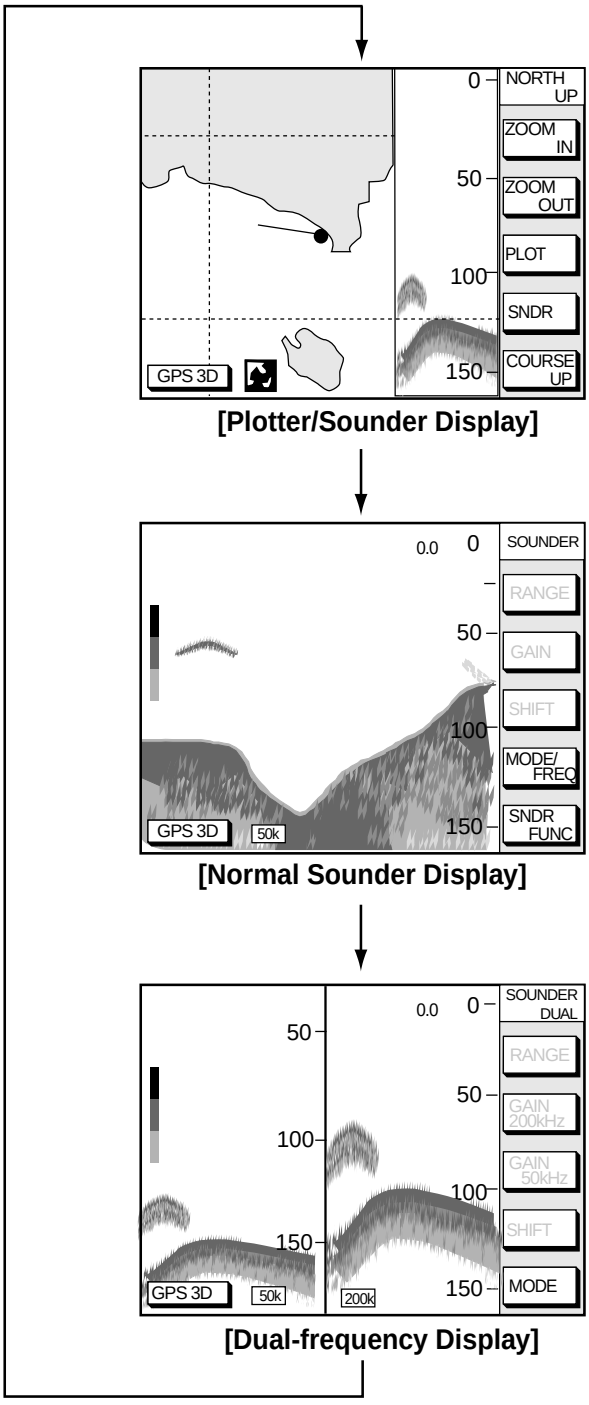

Display mode (Sounder display)

1.7 Menu Operation, Soft Keys

Most operations are carried out through the menu. The menu is opened and closed with the [MENU] key. Menus may be selected with the five soft keys to the right of menus. Options are selected with the cursor pad.

1. Press the [MENU] key to display the main menu.

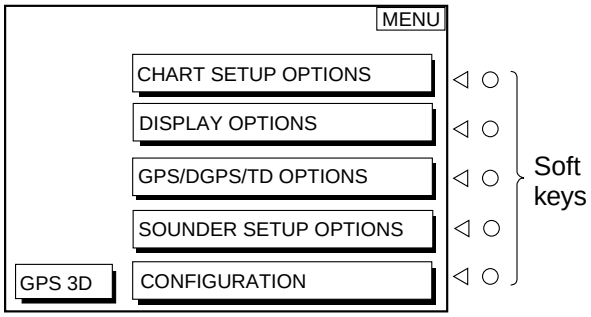

Main menu

2. Press appropriate soft key to display desired menu. For example, press the CHART SETUP OPTIONS soft key. The menu in use appears at the top right corner of the display.

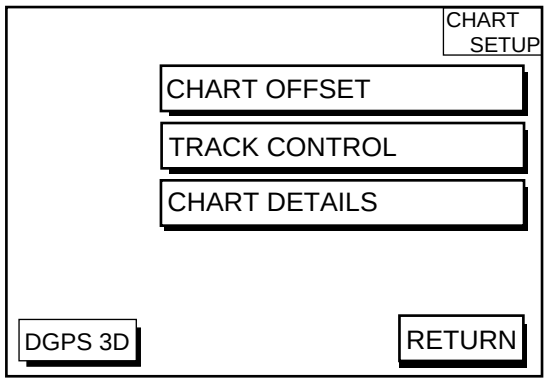

Chart setup menu

3. Select menu with the soft keys. For examples press the TRACK CONTROL soft key to display the TRACK CONTROL menu.

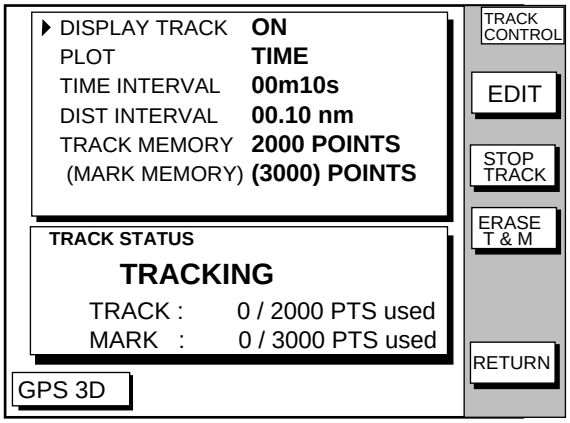

Track control menu

4. Use the cursor pad to select item, and then press the EDIT soft key. For example, select PLOT. The plot window appears.

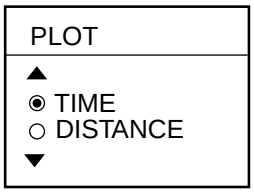

Plot window

5. Use the cursor pad to select option, and then press the ENTER soft key.
6. Press the [MENU] key to finish.

1.8 Demonstration Display

The demonstration display provides simulated operation of this unit. On the plotter display, own ship tracks, at the speed selected, a figure eight course or any course you enter, starting from position entered. All controls are operative; you may set destination, enter waypoints, etc.

1. Press the [MENU] key, followed by the CONFIGURATION and SYSTEM MENU soft keys to open the system menu.
2. Press the DEMONSTRATION MODE key to open the DEMO MODE menu.

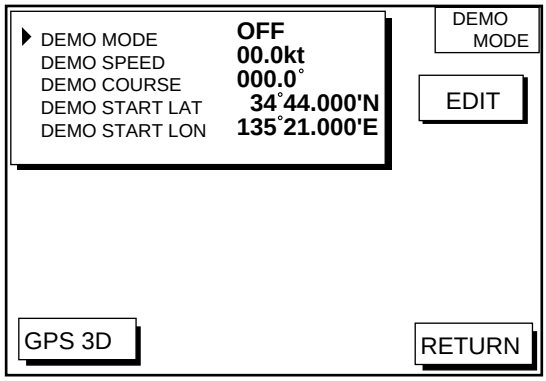

Demo setting screen

3. Press ▲ or ▼ to select DEMO MODE.
4. Press the EDIT soft key to show the demo mode window.

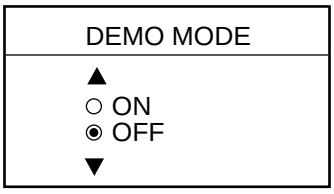

Demo mode window

5. Press ▲ to select ON.
6. Press the ENTER soft key or the [ENTER] key.
7. Select DEMO SPEED and press the EDIT soft key. Enter speed. Select digit with ◄/►and enter value with numeric key.
8. Press the ENTER soft key or the [ENTER] key.
9. Select DEMO COURSE and press the EDIT soft key. Select how you want the courseline to be traced; by FIGURE 8 or DIR.(direction). For DIR., enter course.
10. Press the ENTER soft key or the [ENTER] key.
11. Select DEMO START LAT., and press the EDIT soft key. Enter any latitude.
12. Press the ENTER soft key or the [ENTER] key.
13. Select DEMO START LONG., and press the soft key EDIT. Enter any longitude.
14. Press the ENTER soft key or the [ENTER] key.
15. Press the [MENU] key.
16. Press the [PLOT] key to finish.

To cancel the demonstration display, set DEMO MODE to OFF.

This page is intentionally left blank.

2. VIDEO SOUNDER OPERATION

2.1 Principle of Operation

The video sounder determines the distance between its transducer and underwater objects such as fish, lake bottom or seabed and displays the results on screen. It does this by utilizing the fact that an ultrasonic wave transmitted through water travels at a nearly constant speed of 4800 feet (1500 meters) per second. When a sound wave strikes an underwater object such as fish or sea bottom, part of the sound wave is reflected back toward the source (transducer). Thus by calculating the time difference between the transmission of a sound wave and the reception of the reflected sound wave, the depth to the object can be determined. The entire process begins in the display unit. Transmitter power is sent to the transducer as a short pulse of electrical energy. The electrical signal produced by the transmitter is converted into the water. Any returning signals from intervening objects (such as a fish school) are received by the transducer and converted into an electrical signal. The signals are then amplified in the amplifier section, and finally, displayed on screen.

The picture displayed is made up of a series of vertical scan lines, one for each transmission. Each line represents a snapshot of what has occurred beneath the boat. A series of snapshots are accumulated side by side across the screen, and the resulting contours of the bottom and fish between the bottom and surface are displayed.

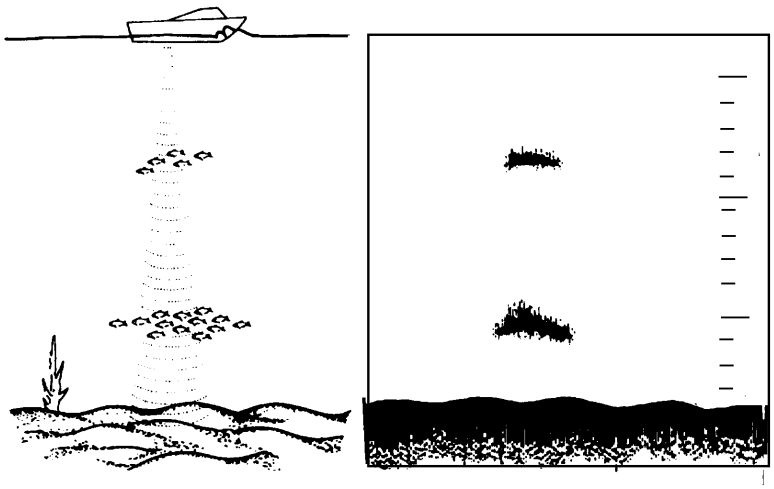

Underwater conditions and video sounder display

2.2 Sounder Display Description

The figure below shows all indications and marks which may appear on the normal sounder display.

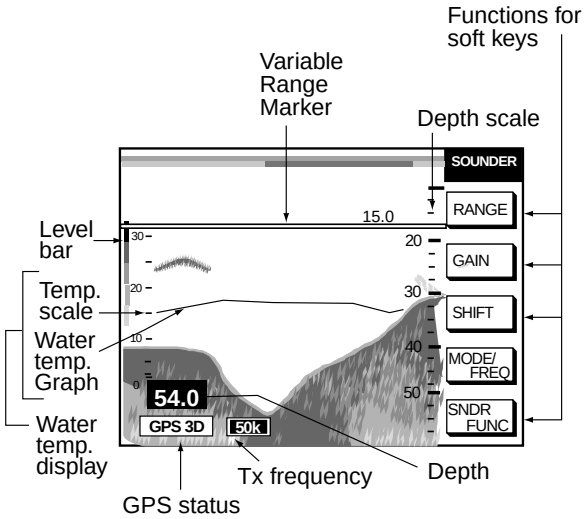

Indications on the normal sounder display

Note: The water temperature graph can be set on or off. The temperature scale is fixed between 20-80°F (0 to 30°C).

The normal sounder display shows either the 50 kHz picture or 200 kHz picture. To switch between these pictures, do the following:

1. Press the [SNDR] key several times to show the normal sounder display.

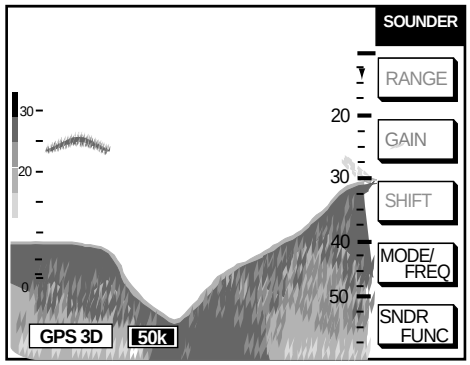

Normal sounder display

2. Press the MODE/FREQ soft key.
   The display changes as shown in the right column.

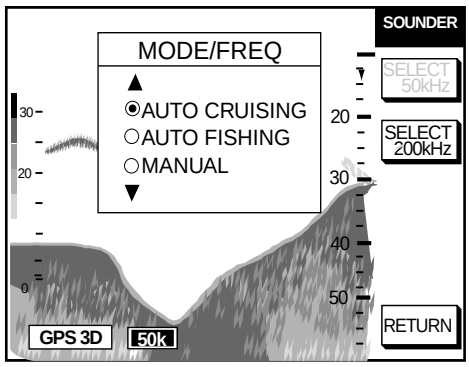

Mode/freq window

3. Press the SELECT 200kHz (or SELECT 50kHz) soft key.
4. Press the RETURN soft key to manually close the window, or wait 10 seconds and the window automatically closes.

50 kHz picture

The sounder uses ultrasonic pulses to detect bottom conditions. The lower the frequency of the pulse, the wider the detection area. Therefore, the 50 kHz frequency is useful for general detection and judging bottom condition.

200 kHz picture

The higher the frequency of the ultrasonic pulse the better the resolution. Therefore, the 200 kHz frequency is ideal for detailed observation of fish school.

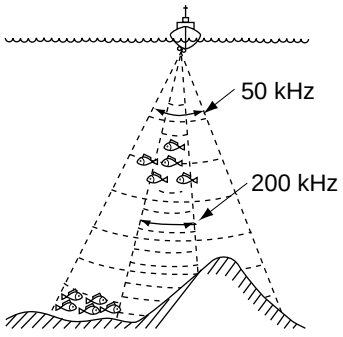

Comparisons of transducer frequencies

Selecting sounder display mode

There are five display modes from which to choose: normal, marker zoom, bottom zoom, bottom lock and A-scope. To select a display, press the soft key SNDR FUNC on the normal sounder display to show the sounder function window, and press ▲ or ▼ to select the display. Press the RETURN soft key to close the window.

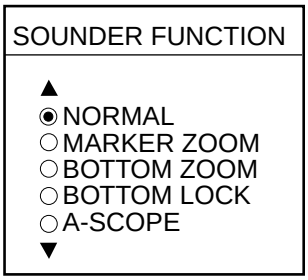

Sounder function window

Marker zoom display

This mode expands a selected area of the normal sounder picture to full vertical size of the screen on the left-half window. You may specify the portion to expand by operating the VRM (Variable Range Marker), which you can shift with ▲ or ▼. The area between the VRM and zoom marker is expanded. The length of the segment is equal to one division of the depth scale.

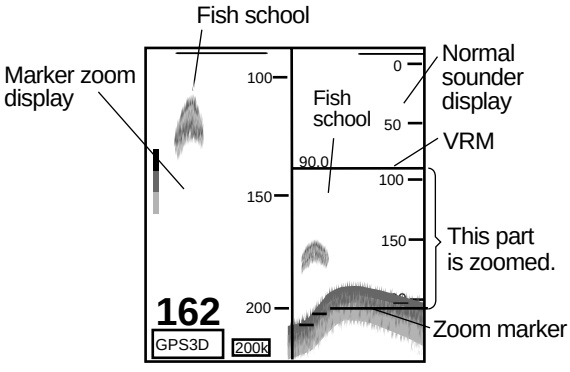

Marker-zoom display
plus normal sounder display

Bottom-zoom display

This mode expands bottom and bottom fish echoes two to five times to vertical size of the screen, and is useful for determining bottom hardness. A bottom displayed with a short echo tail usually means it is a soft, sandy bottom. A long echo tail means a hard bottom.

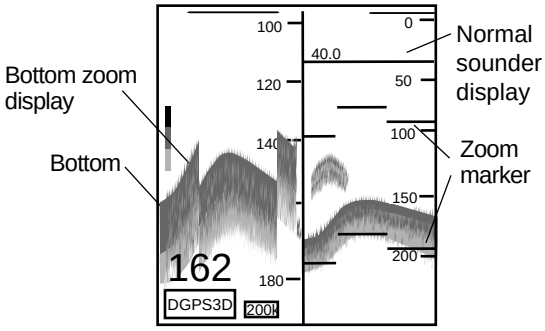

Bottom-zoom display plus normal sounder display

Bottom-lock display

The bottom-lock display provides a compressed normal picture on the right half of the screen and a 5 or 10 meter (10 or 20 feet) wide layer in contact with the bottom is expanded onto the left half of the screen. This mode is useful for bottom discrimination.

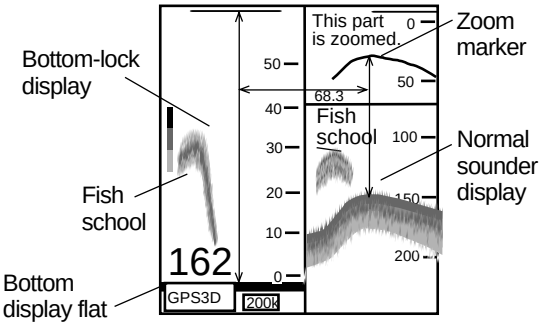

Bottom-lock display
plus normal sounder display

Note: The zoom marker is not displayed in the default setting. It may be turned on in the DISPLAY SETUP2 menu.

A-scope display

This display shows echoes at each transmission with amplitudes and tone proportional to their intensities, on the right 1/3 of the screen. It is useful for estimating the kind of fish school and seabed composition.

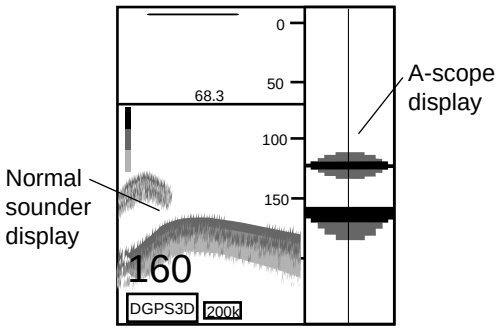

A-scope display plus normal sounder display

2.3 Plotter/Sounder Display

This display provides the plotter display on the left part of the screen and the normal sounder display on the right part. It is useful for searching fish schools at cruising speed. The width of the sounder display can be selected between standard (approx. 20 mm) and wide (approx. 40 mm).

1. Press the [MENU] key and the SOUNDER SETUP OPTIONS soft key. The sounder setup menu appears.
2. Press ▼ to select E/S WINDOW.
3. Press the EDIT soft key to show the E/S WINDOW window.

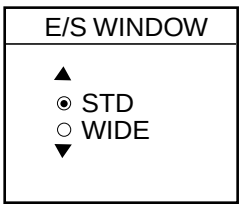

E/S window

4. Press ▲ or ▼ to select STD or WIDE.
   STD: The width of the sounder display is approx. 20 mm (Default setting).
   WIDE: The width is approx. 40 mm.
5. Press the [ENTER] key or the ENTER soft key.

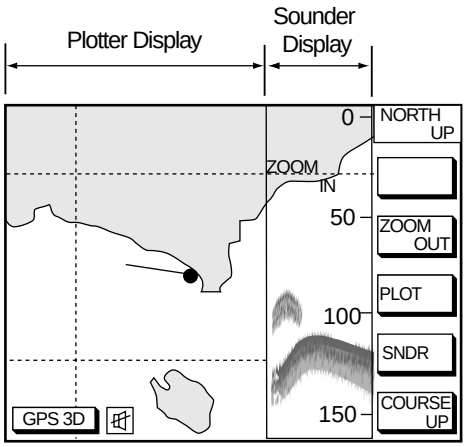

Plotter/Sounder display

2.4 Dual-frequency Display

The 50 kHz picture appears on the left; the 200 kHz picture on the right. This display is useful for comparing the same picture with two different sounding frequencies.

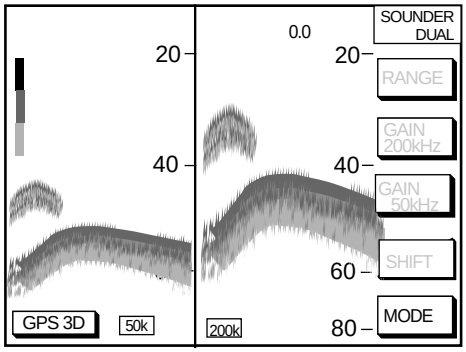

Dual-frequency display

2.5 Automatic Sounder Operation

Automatic sounder operation is useful when you are preoccupied with other tasks and do not have time to adjust the display.

How the automatic sounder works

The automatic sounder function automatically selects the proper gain, range scale and clutter suppression level according to depth. It works as follows:

- Range changes automatically to locate the bottom on the lower half of screen. It jumps to one step shallower range when bottom echoes reach a half way point of the full scale from top and to one step deeper range when they come to the lower edge of scale.
- The gain is automatically adjusted to display the bottom echo in the color in the darkest tone.
- Clutter, which suppresses low level noise, is automatically adjusted.

Two types of automatic modes

Two types of automatic sounder modes are available: CRUISING and FISHING. CRUISING is for tracking the bottom, and FISHING is for searching fish schools. CRUISING uses a higher clutter rejection setting than FISHING therefore it is not recommended for fish detection - weak fish echoes may be erased by the clutter suppression circuit.

How to enable automatic operation

1. To show the mode/freq window:

   Normal sounder display: Press the MODE/FREQ soft key.

   Plotter/sounder display: Press the SNDR, MODE/FREQ soft keys in order.

   Dual-frequency display: Press the MODE soft key.

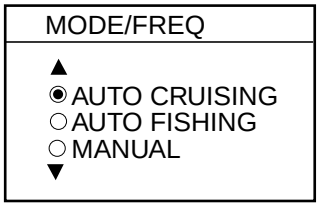

Mode/frequency window

2. Press ▲ or ▼ to select AUTO CRUISING or AUTO FISHING.
3. Press the RETURN soft key to close the window automatically, or wait 10 seconds and the window closes automatically.

2.6 Manual Sounder Operation

Manual operation is useful for observing fish schools and bottom using fixed gain setting. The gain, range and range shifting functions used together give you the means to select the depth you can see on screen. The basic range can be thought of as providing a “window” into the water column and range shifting as moving the “window” to the desired depth.

Selecting the manual mode

1. Press the appropriate soft key to show the mode/freq window.
2. Select MANUAL.
3. Press the RETURN soft key.

Selecting display range

Press the RANG soft key to show the range window, and select range by the cursor. Press the RETURN soft key to finish.

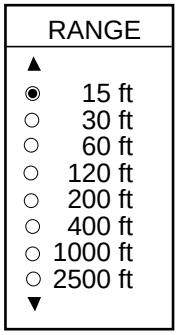

Range window

Adjusting the gain

Press the GAIN soft key to show the gain window, and press ▲ or ▼ to set the gain. Current level is shown above the bar. Press the RETURN soft key to finish.

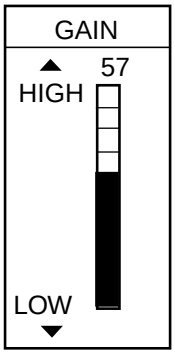

Gain window

Note: On the dual-frequency display, the gain can be independently set for 50 kHz and 200 kHz. This can be done with the GAIN 50kHz and GAIN 200kHz soft keys.

Normally, set the gain to the point where excessive noise does not appear on screen. Use a higher gain setting for greater depths and a lower setting for shallow waters.

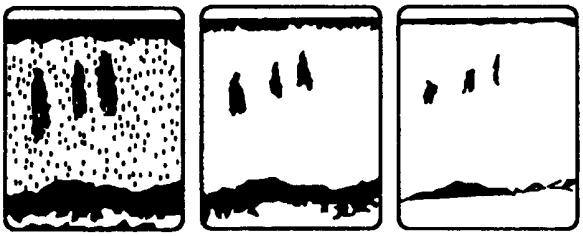

Gain too high Gain proper Gain too low

Examples of proper and improper gain

Range shifting

The basic range may be shifted up or down as desired.
Press the SHIFT soft key, and press ▲ or ▼ to shift the basic range. Press the RETURN soft key to finish.

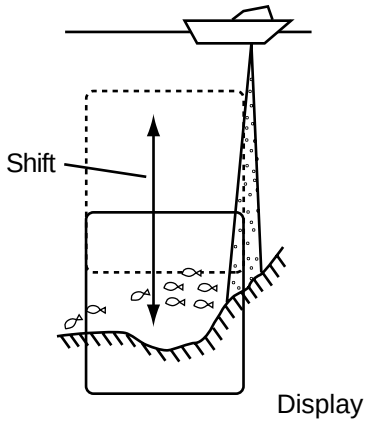

Shift concept

2.7 Measuring Depth

The VRM functions to measure the depth to fish schools, etc., and it is always displayed.

1. Press ▲ or ▼ to shift the VRM.
2. Depth is shown just above the VRM.

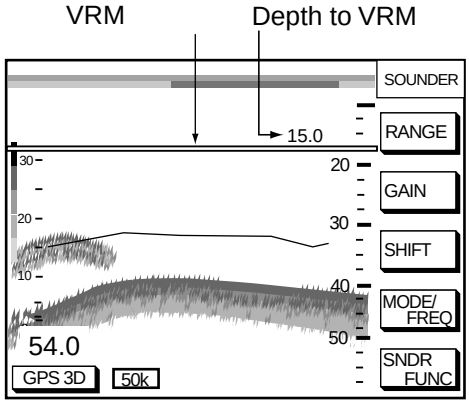

How to use the VRM

2.8 Suppressing Interference

Interference from other acoustic equipment operating nearby or other electronic equipment on your boat may show itself on the display as shown below.

To suppress interference, do the following:

1. Press the [MENU] key and the SOUNDER SETUP OPTIONS soft key.
2. Select NOISE LIMITER and press the EDIT soft key to show the noise limiter window.

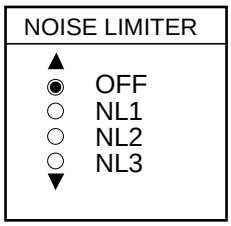

Noise limiter window

3. Press ▲ or ▼ to select degree of suppression desired; OFF, NL1, NL2 or NL3. The higher number the greater the degree of suppression.
4. Press the RETURN soft key and the [SNDR] key to finish.

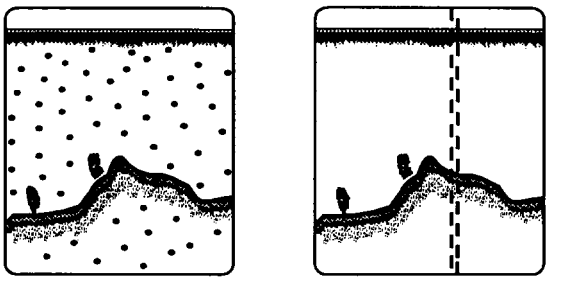

Types of interference

Turn the noise limiter circuit off when no interference exists, otherwise weak echoes may be missed.

2.9 Suppressing Low Level Noise

Dots may appear over most of screen. This is mainly due to dirty water or noise. This noise can be suppressed by adjusting CLUTTER on the SOUNDER SETUP OPTIONS menu.

When the sounder mode is Auto, the clutter suppression setting is fixed at AUTO. To suppress low level noise in manual sounder operation do the following:

1. Press the [MENU] key and the SOUNDER SETUP OPTIONS soft key.
2. Select CLUTTER and press the EDIT soft key to show the clutter window.

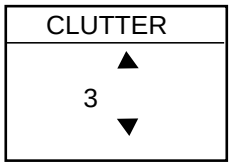

Clutter window

3. Press ▲ or ▼ to select clutter rejection level desired; 0 (OFF) through 9. The higher the number the higher the degree of suppression. Note that weak echoes may not be displayed when the clutter circuit is on.
4. Press the RETURN soft key and the [SNDR] key to finish.

2.10 Erasing Weak Echoes

Dirty water or reflections from plankton may be appeared on the display with small dots. These weak echoes may be erased as follows:

1. Press the [MENU] key and the SOUNDER SETUP OPTIONS soft key.
2. Select SIGNAL LEVEL, and press the EDIT soft key to show the signal level window.

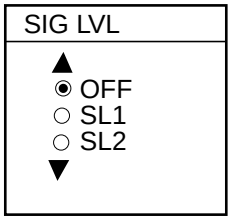

Signal level window

3. Press ▲ or ▼ to select level of erasure; OFF or signal level SL1 or SL3. The higher the number the stronger the echo will be erased.
4. Press the RETURN soft key and the [SNDR] key to finish.

2.11 Selecting Picture Advance Speed

The picture advance speed determines how quickly the vertical scan lines run across the screen. When selecting a picture advance speed, keep in mind that a fast advance speed will expand the size of the fish school horizontally on the screen and a slow advance speed will contract it.

1. Press the [MENU] key and the SOUNDER SETUP OPTIONS soft key.
2. Select PICTURE ADVANCE, and press the EDIT soft key to open the picture advance window.

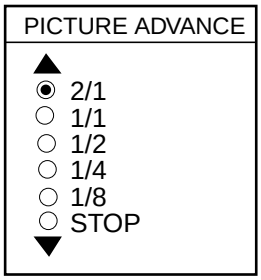

Picture advance window

The fractions in the window denote number of scan lines produced per transmission. For example, 1/8 means one scan line is produced every eight transmissions. STOP freezes the display and it is convenient for observing an echo.

3. Press ▲ or ▼ to select speed desired.
4. Press the RETURN soft key and the [SNDR] key to finish.

2.12 Alarms

Bottom alarm

The bottom alarm sounds when the bottom echo is within the alarm range set. To activate the bottom alarm the depth must be displayed.

Fish (B/L) alarm

The bottom-lock fish alarm sounds when a fish echo is within a predetermined distance from the bottom.

Fish (normal) alarm

The normal fish alarm sounds when a fish echo is within the preset alarm range.

Note: The sensitivity of the fish alarm can be set on the SOUNDER SYSTEM SETUP menu.

Water temperature alarm

There are two types of water temperature alarms: WITHIN and WITHOUT. The WITHIN alarm sounds when the water temperature is within the range set; the WITHOUT alarm sounds when the water temperature is higher or lower than the range set. This alarm requires water temperature data.

Activating/deactivating an alarm

1. Press the [ALARM] key to open the alarm menu.
2. Press the NEXT PAGE soft key to show the ALARM2 menu.

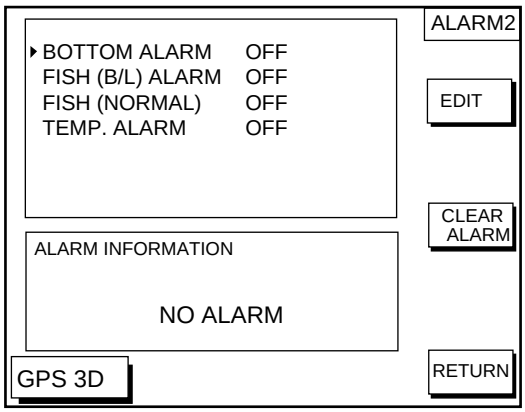

Alarm2 menu

3. Select the menu item, and press the EDIT soft key.
4. Select ON or OFF. For ON, use the cursor pad and the numeric keys to set range.
5. Press the ENTER soft key.

When an alarm setting is violated…

When an alarm setting is violated the buzzer sounds, and the speaker icon appears at the bottom of the screen. You can silence the buzzer with the [CLEAR] key. (However, the buzzer will sound whenever the alarm setting is violated.) Press the [ALARM] key to find out which alarm has been violated. The offending alarm is displayed in the ALARM INFORMATION window. Press the CLEAR ALARM soft key to erase the alarm indication. The alarm icon remains displayed until all violated alarms have been acknowledged.

This page is intentionally left blank.

3. PLOTTER DISPLAYS

3.1 Presentation Modes

The plotter display mainly shows chart, ship's track, waypoints, and navigation data.

Three types of display presentations are provided for the normal plotter display: north-up, course-up and auto course-up. To change the mode, use the presentation mode selection soft key, which is the 3rd soft key from the top on the plotter display this soft key changes NORTH UP, COURSE UP and AUTO C. U.

North-up

Press the NORTH UP soft key to show the north-up display. North (zero degree) is at the top of the display and own ship is at the center of the screen. Own ship marker is a filled circle. This mode is useful for long-range navigation.

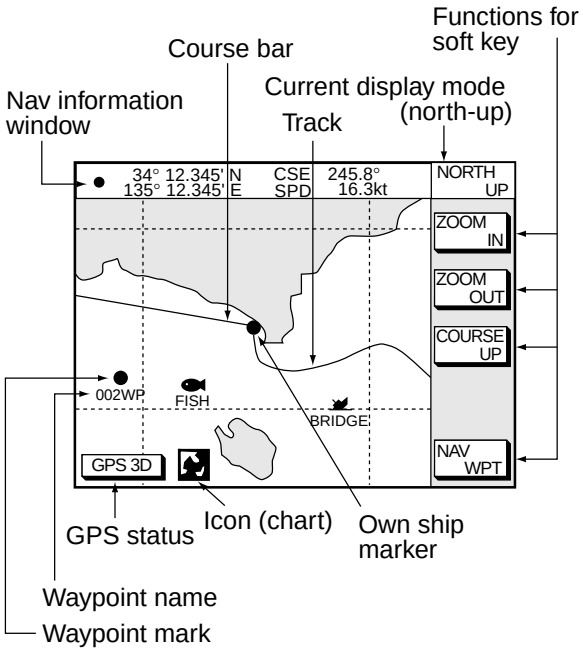

Plotter display, north-up mode

Course-up

Press the COURSE UP soft key to show the course-up display. When destination which is at the top of the screen is set, the north mark appears at the upper left side of the screen and points to north. A filled triangle marks own ship's position.

When destination is not set, the course or is upward on the screen at the moment the course-up mode is selected.

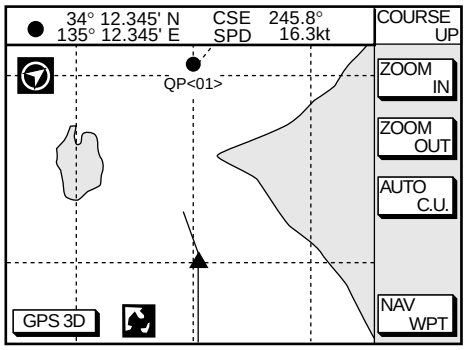

Plotter display, course-up mode

Auto course-up

Press the AUTO C.U. soft key to show the automatic course-up display. The course or heading is at the top of screen at the moment the course-up mode is selected. When own ship is off its intended course by 22.5° or more, it is automatically brought back to perpendicular.

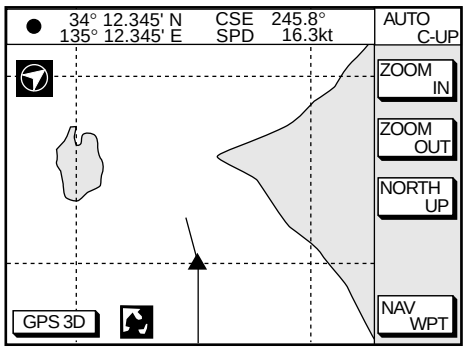

Auto course-up mode

3.2 Cursor

Turning on the cursor, shifting the cursor

Press the cursor pad to turn the cursor on, and the cursor appears at the own ship's position. Operate the cursor pad to shift the cursor. The cursor moves in the direction of the arrow or diagonal pressed on the cursor pad.

Cursor state determines what data is shown on the display. Cursor position is displayed in latitude and longitude or Loran or Decca TDs (depending on menu setting) at the top of the plotter display when the cursor is on.

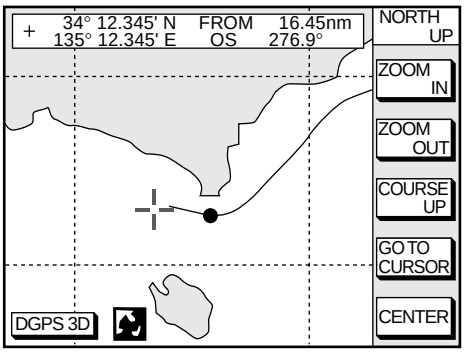

Data displayed on the plotter display when the cursor is on

Turning off the cursor, returning own ship marker to screen center

The CENTER soft key turns off the cursor and returns own ship marker to screen center.

3.3 Shifting the Display

The display can be shifted on the plotter display.

1. Press the cursor pad to display the cursor.
2. Locate the cursor at a screen edge. The screen shifts in the direction opposite of cursor location.

3.4 Selecting Chart Scale/Range

Chart scale (range) may be selected with the soft key ZOOM IN or ZOOM OUT. ZOOM IN expands the chart; ZOOM OUT shrinks it.

Note: When the display is expanded or shrunk beyond the range of the chart card in use NO CHART appears, along with the appropriate chart icon. See the table in below.

3.5 Mini Chart Cards

The mini chart cards contain nautical charts. When you insert a suitable mini chart card in the slot and your boat is near land, a chart appears.

When a wrong card is inserted or a wrong chart scale is selected, the land will be hollow. Insert the proper card and select a suitable chart scale. Chart icons appear to help you select a suitable chart scale. The following table shows the chart icons and their meanings.

Chart icons and their meanings

Icon	Meaning
	Proper card is not inserted or chart scale is too small. Press the soft key ZOOM IN to adjust chart scale.
	Chart scale is too large. Press the soft key ZOOM OUT to adjust chart scale.
	Suitable chart scale is selected.

Indices and chart enlargement

When the soft key ZOOM OUT is used, you will see several frames appear on the chart. These frames are called indices and they show you what parts of the chart can be enlarged in the current picture range. The areas circumscribed with smaller frames can be enlarged, but the area enclosed by the largest frame cannot.

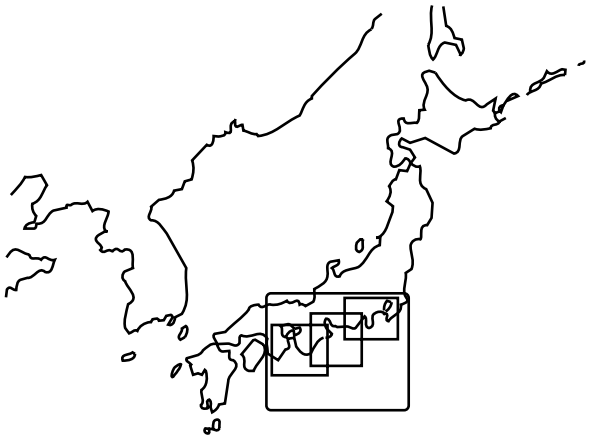

Sample chart (Japan and South Korea) showing indices

Remarks on chart display

A chart will not be displayed in the following conditions:

- When the chart scale is too large or too small.
- When scrolling the chart outside the indices.

When this happens, select proper chart scale.

Chart symbols

FURUNO mini chart card

The table below shows FURUNO mini chart symbols and their meanings.

FURUNO chart symbols

Symbol	Description
	Summit
	Wreck
	Lighthouse
	Lighted Buoy
	Buoy
	Radio Station
	Position of Sounding
	Obstruction
	Fishing Reef
	Platform
	Anchorage

Comparison of FURUNO and Nav-Charts™ chart cards

Item	FURUNO	Nav-Charts™
Dot scrolling capability	YES	YES
Course-up display	YES	YES
Lighthouse data presentation	YES *3	YES
Zoom at cursor position	YES	*1
Range at Equator	0.125, 0.5, 1, 2... 2048 nm	Same as left
Chart offset data entry	YES	YES
Centering	YES	*2

*1 Nav-Charts™ chart may not center the cursor perfectly.
*2 Nav-Charts™ chart may not center own ship's position perfectly.
*3 Newly designed chart cards containing lighthouse data. Chart cards for North America area are completed, and others are in production.
*4 Nav-Charts™ is the resistered trademark of NAVIONICS INC.

Aid to navigation data

Selected FURUNO and Nav-Charts™ mini chart cards can show buoy and lighthouse data. Simply place the cursor on the lighthouse or buoy mark.

Place the cursor on
a lighthouse or buoy mark.

Placing the cursor on the mark

Example of data displayed

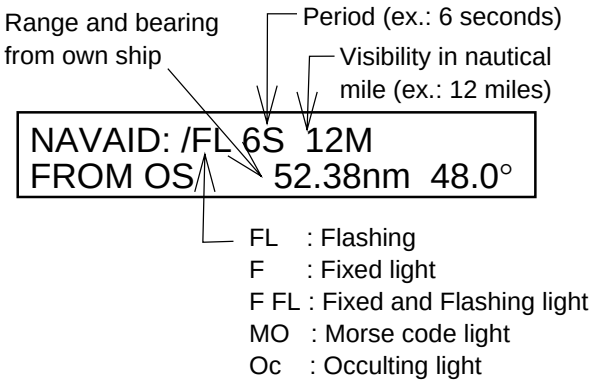
Range and bearing
from own ship
Period (ex.: 6 seconds)
Visibility in nautical
mile (ex.: 12 miles)
NAVAID: /FL 6S 12M
FROM OS 52.38nm 48.0°
FL : Flashing
F : Fixed light
F FL : Fixed and Flashing light
MO : Morse code light
Oc : Occulting light

Example of buoy, lighthouse data

Port service icons (Nav-Charts™ cards)

Selected Nav-Charts™ mini chart cards show by icons services available at ports. Use the cursor pad to place the cursor on the sailboat icon (denotes a port or harbor), and then press the [ENTER] key. The services available appear at the top of the display.

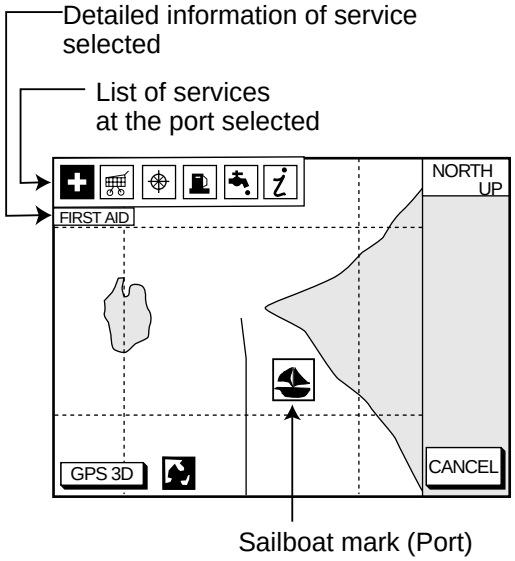

Plotter display showing
Nav-Charts™ port service display

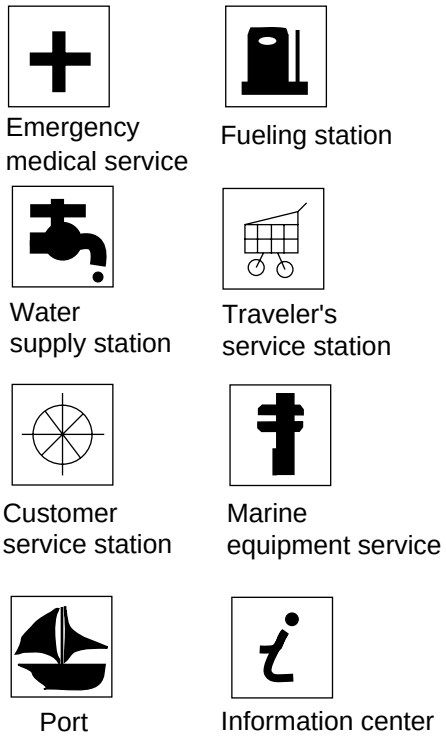

Port service icons

3.6 Navigation Data Display

The navigation data display provides generic navigation data and GPS information. Press the [PLOT] key several times to show the navigation data display.

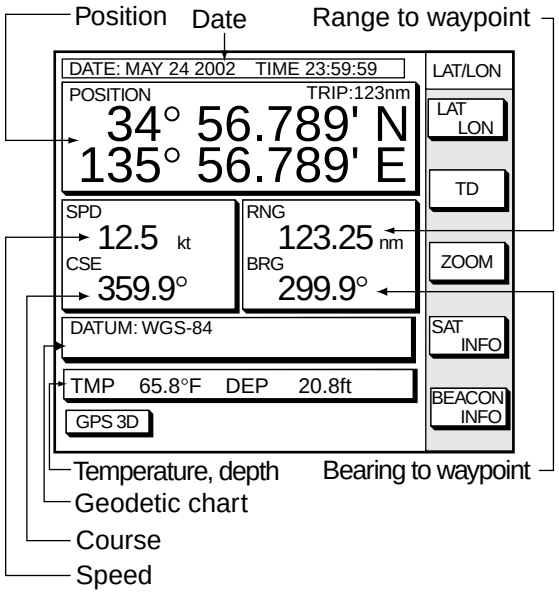

Navigation data display

Navigation data display shows the position by L/L or TD (Loran-C, Decca). To change position format, press the appropriate soft key LAT/LON or TD.

Enlarging an indication

An indication on the screen may be enlarged as follows:

1. Use the cursor pad to select the indication which you wish to enlarge. Selected indication is circumscribed with a thick cursor.
2. Press the soft key ZOOM. To return to the normal nav data display, press the RETURN soft key.

GPS satellite monitor display

The GPS satellite monitor display shows information about GPS satellites.

Press the SAT INFO soft key. Your display should look something like the following illustration.

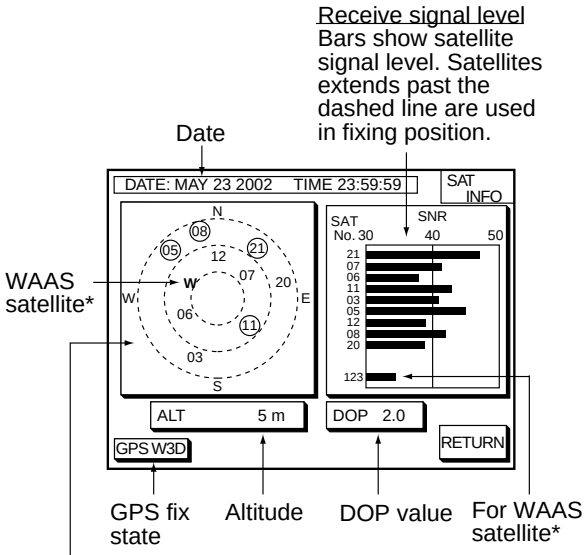

*Only when WAAS fix mode is used.

GPS satellite monitor display

To return to the normal navigation data display, press the RETURN soft key.

Beacon information display

Connected with a DGPS beacon receiver, your unit can show DGPS reference station information. Press the BEACON INFO soft key to show the DGPS reference station information.

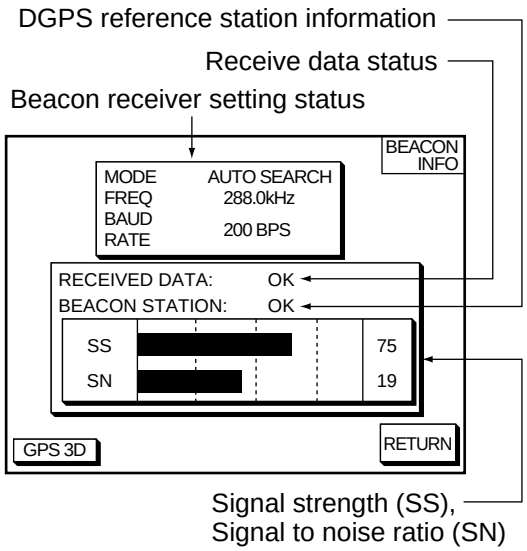

Beacon information display

SS: SS (Signal Strength) displays a numeric representation of field strength of the received signal on the selected frequency. The higher the number the stronger the received signal. If noise is present at reception band width, the figure gets bigger.

SN: SN (Signal-to-Noise) ratio displays the ratio between the desired signal and unwanted noise on the selected frequency. The higher the SN ratio the better the quality of the signal.

Note: If your equipment is not connected with a DPGS receiver, the message “NO DIFFERENTIAL DATA” appears when the BEACON INFO soft key is pressed.

3.7 Steering Display

The steering display provides steering information such as range, bearing, ETA to destination, course and speed.

Press the [PLOT] key to show the steering display.

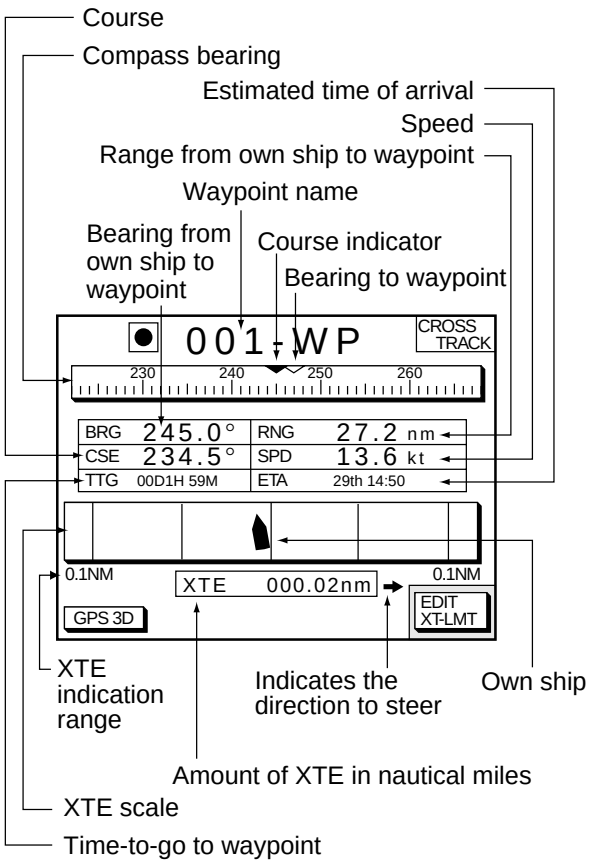

Steering display

How to read the compass display

The solid inverted triangle at the center of the compass shows own ship’s course. The hollow inverted triangle shows the bearing to destination waypoint. When own ship’s course is changed, the hollow inverted triangle moves with course change.

How to read the XTE scale

The black boat-shaped mark shows own boat's movement and direction, and amount to steer to return to course. Using the figure in the previous page as an example, you would steer right by 000.02 nautical miles to return to course. The range of the XTE scale can be set as shown below.

Setting the range of the XTE scale

1. Press the EDIT XT-LMT soft key to display the following window.

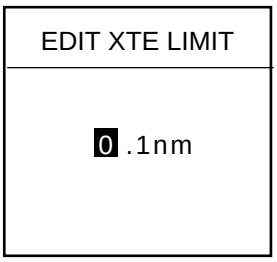

XTE range setting window

2. Use the cursor pad to select digit to change.
3. Press appropriate alphanumeric key.
4. Repeat steps 2 and 3.
5. Press the [ENTER] key. To cancel entry, press the CANCEL soft key.

Note that all digits may be cleared by pressing the [CLEAR] key.

3.8 Highway Display

The highway display provides a graphic presentation of ship's track along intended course. It is useful for monitoring XTE - the XTE scale shows direction and amount in nautical miles to steer to return to course. In the figure below, for example, you would steer right by 0.02 nm to return to course.

Press the [PLOT] key to show the highway display.

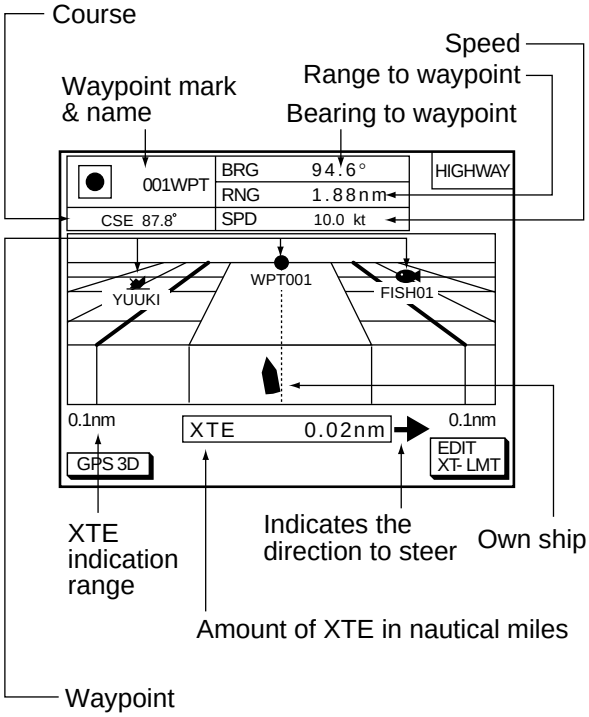

Highway display

3.9 Changing Operation Mode

Operation mode can be changed among PLEASURE, FISHING 1 and FISHING 2. FISHING 1/2 mode provides mark/line entry on the PLOTTER display. The mark can be entered up to 5000 points together with tracks. The apportion between track and mark memory can be changed at menu. Pressing the [HIDE/SHOW] key changes the function of soft keys. Holding track, changing track color, and selecting form of mark/line can be performed by the soft keys directly.

1. Press the [MENU] key and the DISPLAY OPTIONS soft key. The display setup1 menu appears.

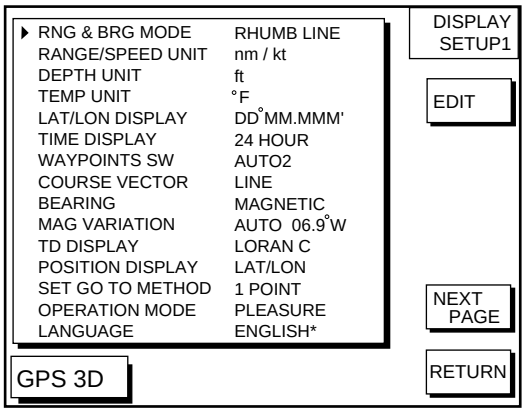

*Not available for C-map.

Display setup1 menu

2. Press ▼ to select OPERATION MODE.
3. Press the EDIT soft key to show the OPERATION MODE window.

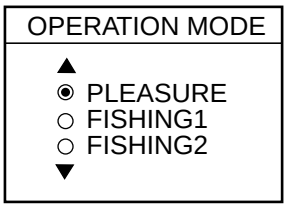

OPERATION MODE window

4. Press ▲ or ▼ to select PLEASURE, FISHING1 or FISHING2.
5. Press the ENTER soft key or the [ENTER] key to finish.

3.10 Navigation Trip Distance

The navigation trip distance is displayed at the navigation data display. Press the [PLOT] key several times to show the navigation data display.

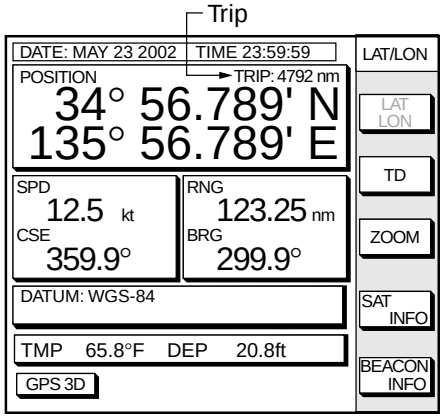

Navigation data display

Note: When you enlarge POSITION, TRIP is not displayed.

You can reset the trip distance as follows.

1. Press the [MENU] key followed by the CONFIGURATION and SYSTEM MENU soft keys.
2. Press the MEMORY/TRIP CLEAR soft key to open the clear memory menu.

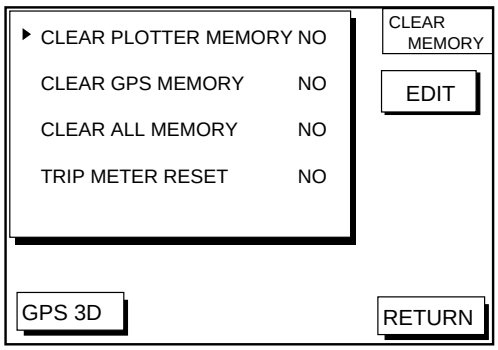

Clear memory menu

3. Press ▼ to select TRIP METER RESET.
4. Press the EDIT soft key.
5. Press ▲ to select YES.
6. Press the ENTER soft key or the [ENTER] key to clear memory selected.

4. TRACK

This section shows you what you can do with track, from turning it on or off to changing its plotting interval. Own ship's track is displayed in the default setting.

4.1 Displaying Track

1. Press the [MENU] key to open the main menu.

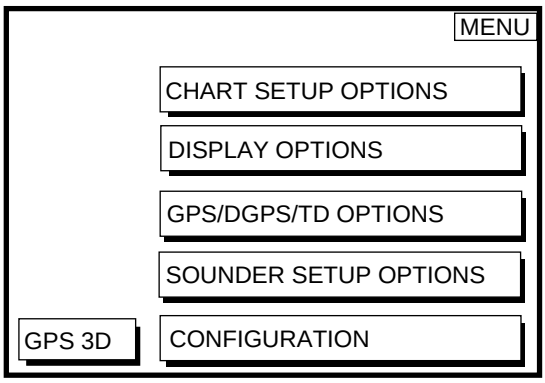

Main menu

2. Press the CHART SETUP OPTIONS soft key to open the chart setup menu.

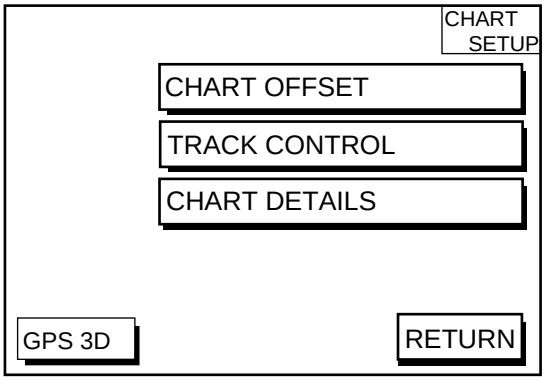

Chart setup menu

3. Press the TRACK CONTROL soft key to open the track control menu.

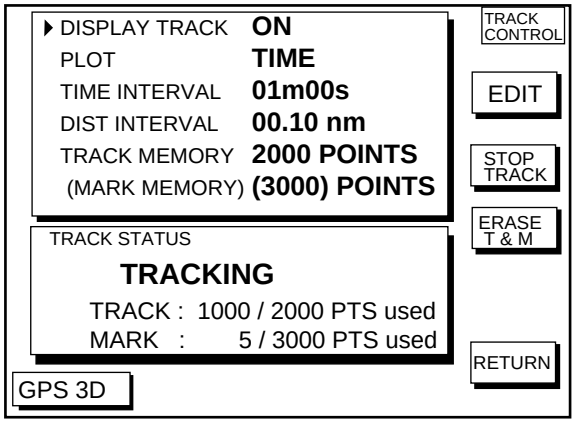

Track control menu

4. Press ▲ or ▼ to select DISPLAY TRACK.
5. Press the EDIT soft key to show the display track window.
6. Press ▲ or ▼to select ON or OFF as appropriate.
7. Press the ENTER soft key or the [ENTER] key.
8. Press the [PLOT] key to close the menu.

The default setting is ON which traces ship's track in accordance with ship's movements.

Number of track and mark points used appears at the TRACK STATUS window on the TRACK CONTROL display. In case of figure shown above, track memory is recorded 1000 points (max. 2000 points) and mark memory is recorded 5 points (max. 3000 points).

4.2 Stopping/Restarting Plotting of Track

When your boat is at anchor or returning to port you probably won't need to record its track. You can stop recording the track, to conserve the track memory, as follows:

1. Press the [MENU] key followed by the CHART SETUP OPTIONS and TRACK CONTROL soft keys.
2. Press the STOP TRACK soft key. The indication "TRACKING" in the TRACK STATUS window changes to "NOT TRACKING".

To restart recording the track, press the START TRACK soft key at step 2 in the above procedure.

When the fishing mode is selected, you can stop or restart plotting the track with the soft key only on the plotter display. Press the [HIDE/SHOW] key several times to show the STOP TRACK soft key. Press the STOP TRACK soft key on the plotter display to stop plotting of track. HOLD TRACK PLOTTING appears approx. 2 seconds and own ship mark changes to hollow circle. To restart plotting the track, press the START TRACK soft key. START TRACK PLOTTING appears approx. 2 seconds and the plotting restarts.

4.3 Track Plotting Method, Interval

In drawing the track, first the ship's position (fed from the GPS receiver) is stored into the unit's memory at an interval of time or distance. A shorter interval provides better reconstruction of the track, but the storage time of the track is reduced. When the track memory becomes full, the oldest track is erased to make room for the latest.

Track plotting method

1. Press the [MENU] key followed by the CHART SETUP OPTIONS and TRACK CONTROL soft key.
2. Press ▲ or ▼ to select PLOT.
3. Press the EDIT soft key to display the plot window.

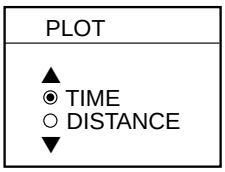

Plot window

4. Press to ▲ or ▼ select TIME or DISTANCE. Distance is useful for conserving track memory, since no track is recorded when the boat is stationary.
5. Press the ENTER soft key or the [ENTER] key.

Track plotting interval

1. Press the [MENU] key followed by the CHART SETUP OPTIONS and TRACK CONTROL soft key.
2. Press ▲ or ▼ to select TIME INTERVAL or DIST INTERVAL.
3. Press the EDIT soft key to display the interval window.

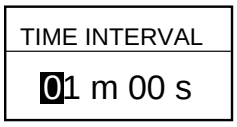

(When selecting TIME INTERVAL.)

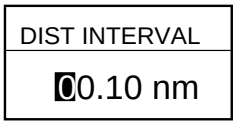

(When selecting DIST INTERVAL.)

Interval window

4. Use the cursor pad to place the cursor on the digit desired. The [CLEAR] key functions to clear an entire line of data.
5. Press appropriate alphanumeric key to enter value.
6. Repeat steps 4 and 5 to complete.
7. Press the ENTER soft key or the [ENTER] key.

4.4 Changing Track Memory Capacity

The equipment stores a total of 5000 points of track and marks. This total may be freely apportioned as desired. The default setting is 2000 points of track and 3000 marks. You can change the memory capacity for track and marks. **Note that when this is done all tracks and marks in the memory are erased.**

1. Press the [MENU] key followed by the CHART SETUP OPTIONS and TRACK CONTROL soft keys.
2. Press ▼ to select TRACK MEMORY.
3. Press the EDIT soft key to display the TRACK MEMORY window.

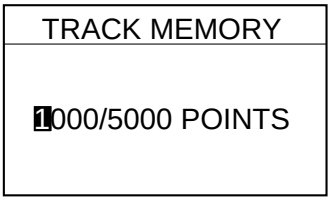

TRACK MEMORY window

The TRACK MEMORY window may be erased by pressing the CANCEL soft key to escape.

4. Enter number of track memory points desired with the alphanumeric keys.

   Note that all digits may be cleared by pressing the CLEAR soft key or the [CLEAR] key in entering track memory points.
5. Press the ENTER soft key or the [ENTER] key. The following window appears to ask you if you are sure to change the track memory capacity.

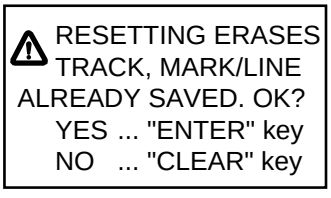

ERASE message

6. Press the [ENTER] key to change apportion, or press the [CLEAR] key to escape.

4.5 Erasing Track

You can erase all or partly track. Be absolutely sure you want to erase all track; erased track cannot be restored.

Erasing the track in an area

The following procedure erase tracks within a square whish you set.

1. Press the [MENU] key followed by CHART SETUP OPTIONS, TRACK CONTROL and ERASE T & M soft keys to show ERASE menu.

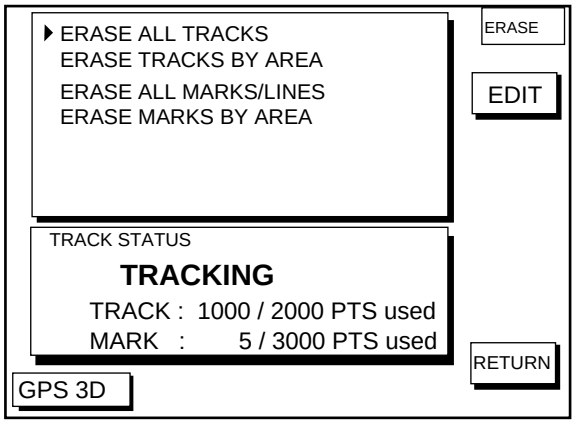

Erase menu

2. Select ERASE TRACKS BY AREA, and then press the EDIT soft key.

   Plotter display appears.
3. Use the cursor pad to move the cursor to the start position of area you want to set.
4. Press the START soft key.
5. Use the cursor pad to move the cursor to the end of area you want to set.

   An area is drawn on the display.
6. Press the END soft key.

   You are asked if you sure to erase tracks in the area.
7. Press the [ENTER] key.

   To escape, press the [CLEAR] key.

Erasing all track

1. Press the [MENU] key followed by the CHART SETUP OPTIONS, TRACK CONTROL and ERASE T & M soft keys.
2. Select the ERASE ALL TRACK, and then press the EDIT soft keys. You are asked if you sure to erase all track.
3. Press the [ENTER] key to erase, or press the [CLEAR] key to escape.

5. MARK

5.1 Entering Marks

Select the fishing 1 or 2 mode to enable entry of marks on the PLOTTER display. Select the location desired with the cursor, or turn off the cursor to enter the mark at own ship position. Pressing the [HIDE/SHOW] key changes the function of the soft keys. Press the MARK ENTRY soft key to enter the mark. The mark is entered in the shape selected from the MARK SHAPE window.

In the FISHING mode, pressing the [HIDE/SHOW] key changes the function of the soft keys as follows.

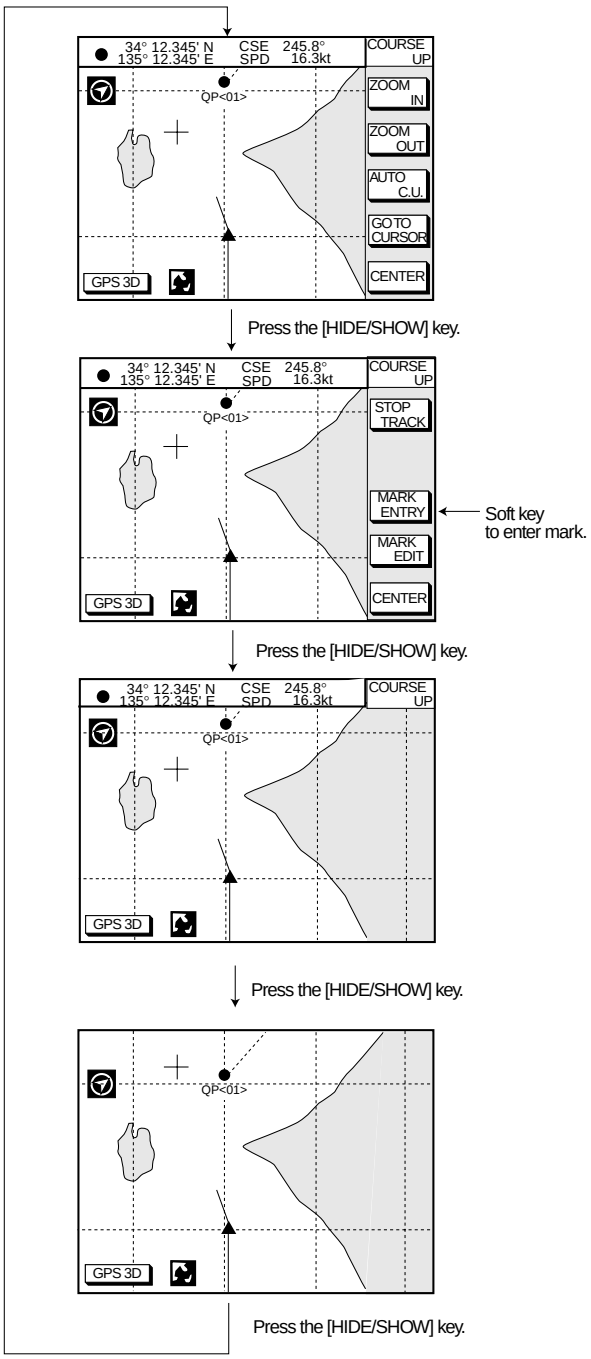

Changing displays (cursor on)

5.2 Changing Mark Attributes

You can select shape and line of mark/line.

1. Press the [HIDE/SHOW] key to show the MARK EDIT soft key.
2. Press the MARK EDIT soft key to show the MARK EDIT window.

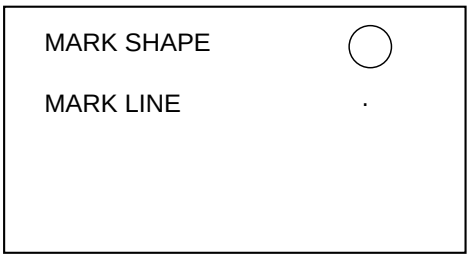

MARK EDIT window

3. Press the MARK SHAPE soft key to change mark shape, the MARK LINE soft key to change mark line.

Mark shape

Press the MARK SHAPE soft key to display the MARK SHAPE window. Press ▲ or ▼ to select mark shape desired. Press the [ENTER] key or ENTER soft key.

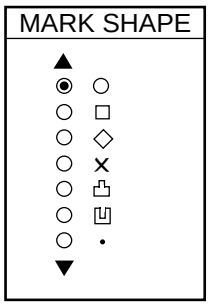

MARK SHAPE window

Mark line

Press the MARK LINE soft key to display the MARK LINE window. Press ▲ or ▼ to select mark line desired. Press the [ENTER] key or ENTER soft key.

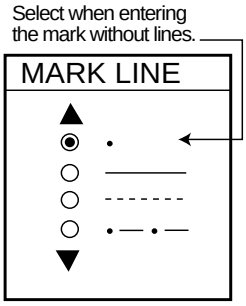

MARK LINE window

Marks/lines entered hereafter are inscribed in the shape and line type selected here.

5.3 Changing Mark Size

Mark size can be selected from STD (standard) and SMALL.

1. Press the [MENU] key to display the main menu.
2. Press the CHART SETUP OPTIONS soft key.
3. Press the CHART DETAILS soft key to open the CHART DETAIL menu.

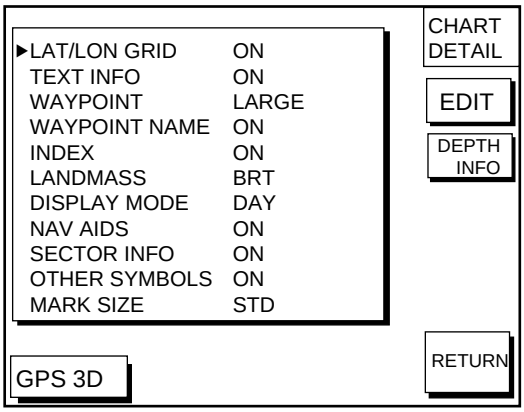

CHART DETAILS menu

4. Press ▼ to select MARK SIZE.
5 Press the EDIT soft key.
6. Press ▲ or ▼ to select STD (standard) or SMALL.
7. Press the [ENTER] key or ENTER soft key.

5.4 Erasing Marks

Erasing individual marks/lines

1. Operate the cursor pad to place the cursor on the mark you want to erase.
2. Press the [CLEAR] key. The mark selected is erased.

Note: To erase a line, place the cursor on an edge of the line. The line segment and the mark selected will be erased.

Erasing marks/lines in an area

You can erase marks and lines within a square.

1. Press the [MENU] key followed by the CHART SETUP OPTIONS, TRACK CONTROL and ERASE T & M soft keys.
2. Press ▲ or ▼ to select ERASE MARKS BY AREA, and then press the EDIT soft key.

   The plotter display appears.
3. Move the cursor to the starting point of the area to erase.
4. Press the START soft key.
5. Press the cursor pad to make a square.
6. Press the END soft key.

   You are asked if you sure to erase in the area which is set above.
7. Press the [ENTER] key, or press the [CLEAR] key to escape.

Erasing whole marks/lines

You can erase all marks and lines. Be absolutely sure you want to erase all marks and lines; erased marks and lines cannot be restored.

1. Press the [MENU] key followed by the CHART SETUP OPTIONS and TRACK CONTROL soft keys.
2. Press the ERASE T & M soft key.
3. Press ▲ or ▼ to select ERASE ALL MARKS/LINES, press the EDIT soft key.

   You are asked if you are sure to erase all marks and lines.
3. Press the [ENTER] key to erase, or press the [CLEAR] key to escape.

5.5 Displaying Track and Mark Points

Number of track and mark points used appears in the TRACK STATUS window on the TRACK CONTROL display. For further details see page 4-1.

This page is intentionally left blank.

6. WAYPOINTS

6.1 Entering Waypoints

In navigation terminology, a waypoint is a particular location on a voyage whether it be a starting, intermediate or destination point. A waypoint is the simplest piece of information your equipment requires to get you to a destination, in the shortest distance possible.

This unit has 835 waypoints (including quick waypoints) into which you can enter position information. There are five methods by which you can enter a waypoint: at own ship's position, at MOB position, by cursor, by range and bearing, and through the waypoint list (manual input of latitude and longitude).

Entering waypoints at own ship's position

You can save your current position as a waypoint. Press the [SAVE/MOB] key with a touch-and-release action to store your position. This new waypoint will automatically be saved in the waypoint list under the next consecutive waypoint number. For FISHING 2 mode, the waypoint data (comment, shape etc.) can be changed at this time. See the next page for how to change the mark. Note that press the SAVE soft key after a mark is changed.

Entering waypoints at MOB position

The MOB mark functions to mark man overboard position.

1. Press the [SAVE/MOB] key several seconds to display the following message.

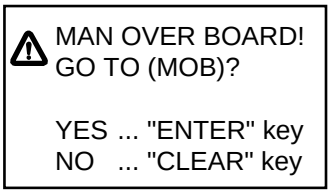

MOB message

Until this window displaying, "SAVING WAYPOINT XXX" appears for the normal waypoint.

2. Press the [ENTER] key to select MOB position as destination, or the [CLEAR] key to only mark MOB position.
3. To show range and bearing to the MOB position, press the NAV POS soft key.

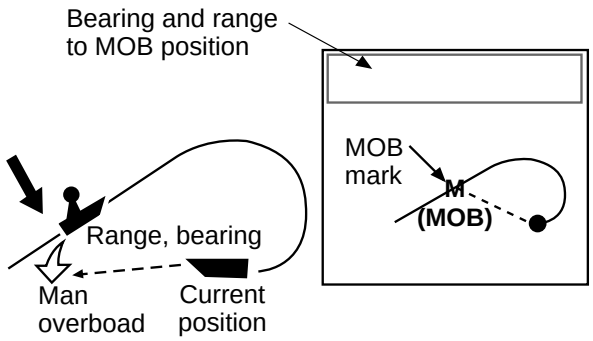

MOB concept

To erase a MOB mark, you must erase both the waypoint it is registered under and the MOB mark itself. Place the cursor on the MOB mark and press the [CLEAR] key followed by the [ENTER] key to erase the waypoint. (A flashing diamond appears over the waypoint when it has been correctly selected.) Repeat to erase the MOB mark.

Entering waypoints by the cursor

1. Press the [WPT/RTE] key to open the WPT & ROUTE menu.

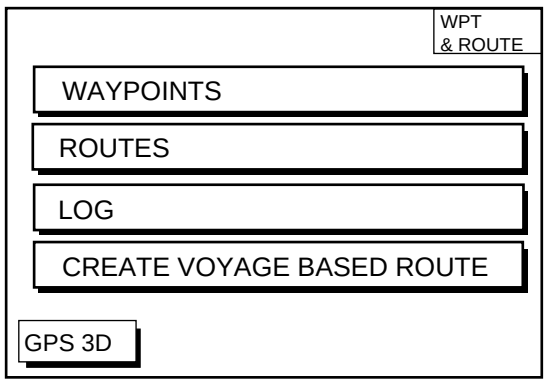

Waypoint & route menu

2. Press the WAYPOINTS soft key to display the WPT menu.

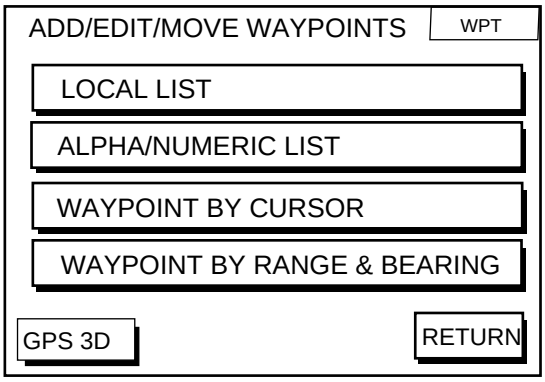

Waypoint menu

3. Press the WAYPOINT BY CURSOR soft key. The plotter display appears.
4. Operate the cursor pad to place the cursor on the location desired.
5. Press the NEW WPT soft key. The new waypoint window appears and it shows mark shape, waypoint name, comment (default: date), position of waypoint and proximity alarm radius.

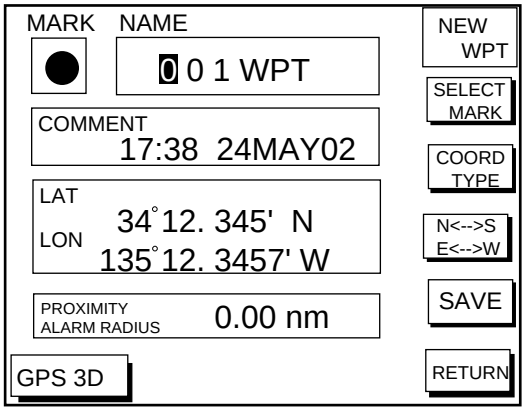

Waypoint window

6. If you do not need to change the waypoint data, simply press the SAVE soft key to register the waypoint and return to the plotter display. Be sure to press the SAVE soft key only after changing all data. Refer to the following procedures to change the waypoint data.

Changing the shape of waypoint mark

1. Press the SELECT MARK soft key to open the SELECT MARK window.

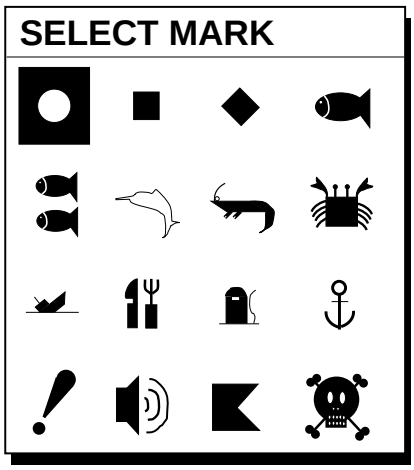

Select mark window

3. Operate the cursor pad to select shape desired.
4. Press the ENTER soft key or the [ENTER] key.

Changing waypoint name, comment, proximity alarm radius

1. If necessary, you can change the name (1 to 6 characters), comment (13 characters) and the proximity alarm radius (explained in detail in Chapter 8) as follows:
   a) Select the NAME, COMMENT or PROXIMITY ALARM RADIUS field.
   b) Use the cursor pad to select digit.
   c) Enter appropriate data with the alphanumeric keys.

Note: You cannot change shape of a waypoint when it has a proximity alarm radius entered. To change shape, enter all zeroes as the proximity alarm radius.

Changing waypoint position

1. Use the cursor pad to place the cursor in the LAT LON field.
2. Operate the cursor pad to place the cursor on digit to change. Enter appropriate data with the alphanumeric keys.
3. You can switch co-ordinates with the N<-->S/E<-->W soft key.

Entering waypoints by range and bearing

This method is useful when you want to enter a waypoint using range and bearing to a target found on a radar.

1. Press the [WPT/RTE] key to open the WPT & ROUTE menu.
2. Press the WAYPOINTS soft key to open the WPT menu.
3. Press the WAYPOINT BY RANGE & BEARING soft key. The plotter screen appears.

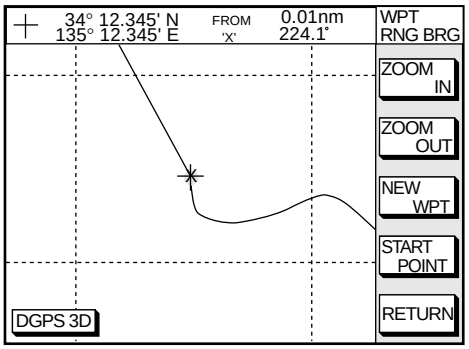

Plotter display, Range and bearing selected as waypoint entry method

4. Operate the cursor pad to place the cursor on the location desired. The range and bearing from own ship to cursor appear at the top of the screen.

   Note: The origin point of range and bearing can be shifted to the place you desire. Operate the cursor pad to select location, and then press the START POINT soft key. “X” appears at the cursor position.

5. Press the NEW WPT soft key. The screen should look something like the one shown in the Waypoint window on the previous page.
6. If necessary, change data as you did in “Entering waypoints by the cursor.”
7. Press the SAVE soft key to register the waypoint.

Entering waypoints by latitude and longitude position

1. Press the [WPT/RTE] key to open the WPT & ROUTE menu.
2. Press the WAYPOINTS soft key to open the WPT menu.
3. Press the LOCAL LIST (lists waypoints in order from nearest to furthest) or ALPHA/NUMERIC LIST soft key (lists waypoints in alphanumeric order).

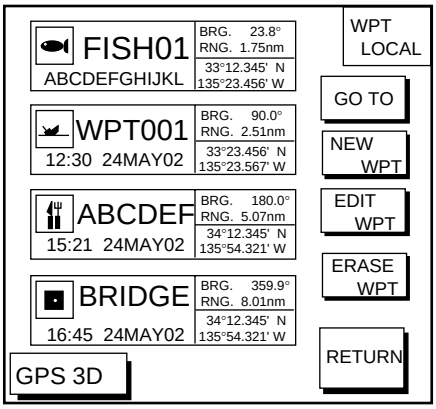

Local list

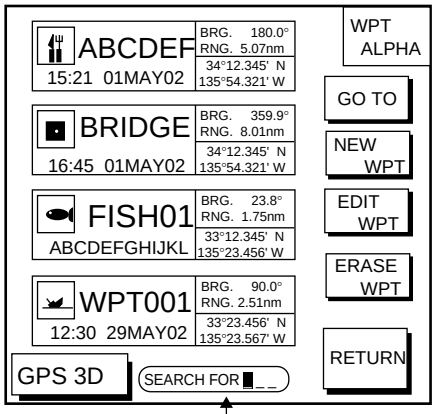

Alpha/numeric list

4. Press the NEW WPT soft key to show the NEW WPT window. Own ship's position is shown. Change the data similar to how you did in "Entering waypoints by the cursor."
5. Press the SAVE soft key.

6.2 Erasing Individual Waypoints

Individual waypoints can be erased by the cursor or through the waypoint list.

Erasing waypoints by the cursor

1. Press the cursor pad to turn on the cursor.
2. Operate the cursor pad to place the cursor on the waypoint you want to erase. A flashing diamond mark appears over the waypoint when it is correctly selected.
3. Press the [CLEAR] key. You are asked if you are sure to erase the waypoint.
4. Press the [ENTER] key. The waypoint is erased from both the plotter screen and the waypoint list.

Erasing waypoints through the waypoint list

1. Press the [WPT/RTE] key to open the WPT & ROUTE menu.
2. Press the WAYPOINTS soft key to open the WPT menu.
3. Press the LOCAL LIST or ALPHA/NUMERIC LIST soft key.
4. Press ▲ or ▼ to select the waypoint you want to erase.
5. Press the ERASE WPT soft key. You are asked if you are sure to erase the waypoint.
6. Press the [ENTER] key. The waypoint is erased from both the waypoint list and the plotter screen.

6.3 Changing Waypoint Data

You can change the waypoint data through the list.

1. Press the [WPT/RTE] key, WAYPOINTS, LOCAL LIST or ALPHA/NUMERIC LIST soft keys.
2. Press ▲ or ▼ to select the waypoint you want to change.
3. Press the EDIT WPT soft key.
4. Change data as you did in "Entering waypoints by the cursor."
5. Press the SAVE soft key.

6.4 Waypoint Mark Size

You may change the size of all waypoint marks to small or large (default), or turn them off.

1. Press the [MENU] key to open the main menu.
2. Press the CHART SETUP OPTIONS soft key.
3. Press the CHART DETAILS soft key to open the CHART DETAIL menu.

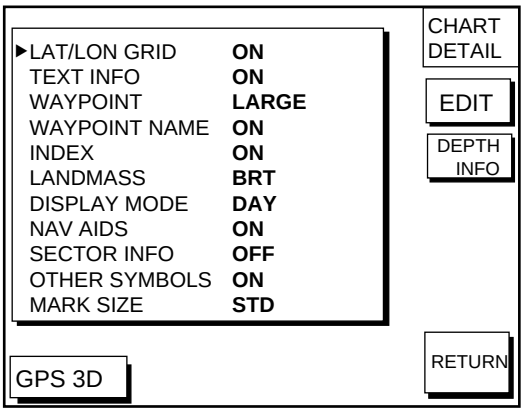

Chart details menu

4. Press ▲ or ▼ to select WAYPOINT.
5. Press the EDIT soft key.
6. Press ▲ or ▼ to select LARGE, SMALL or OFF. LARGE shows mark in actual shape. SMALL displays all waypoints with an "X" regardless of mark shape selected.
7. Press the ENTER soft key or [ENTER] key.

6.5 Changing Waypoint Position on the Plotter Display

You may change the latitude and longitude position of waypoints on the plotter display as follows:

1. Press the [WPT/RTE] key followed by the WAYPOINTS soft key to open the WPT menu.
2. Press the WAYPOINT BY CURSOR soft key. The plotter display appears.
3. Operate the cursor pad to place the cursor on the waypoint which you want to change. A flashing diamond mark appears on the waypoint when it is correctly selected.
4. Press the EDIT/MOVE soft key.
5. Press the MOVE WPT soft key.
6. Operate the cursor pad to place the cursor on the location desired.
7. Press the [ENTER] key.

The waypoint moves to the cursor position and its new position is recorded on the waypoint list. If the waypoint is set as destination or is part of a route, you are asked if you are sure to move the waypoint. In this case, press the [ENTER] key again, or the [CLEAR] key to cancel move.

6.6 Searching Waypoints

You can search for a waypoint through the alpha/numeric list as follows:

1. Press the [WPT/RTE] key, and then press the WAYPOINTS and ALPHA/NUMERIC LIST soft keys to show the alpha/numeric list. At the bottom of the display the search window appears.

Search window

2. Use the alphanumeric keys to enter the first 1 - 3 characters in the search window. The waypoint searched appears at the top of the screen.

This page is intentionally left blank.

7. ROUTES

Often a trip from one place to another involves several course changes, requiring a series of route points (waypoints) which you navigate to, one after another. The sequence of waypoints leading to the ultimate destination is called a route. Your unit can automatically advance to the next waypoint on a route, so you do not have to change the destination waypoint repeatedly.

You can store up to 200 routes. A route may consist of 35 points.

7.1 Entering Routes

Entering routes through the route list

This method constructs routes using existing waypoints.

1. Press the [WPT/RTE] key to open the WPT & ROUTE menu.
2. Press the ROUTES soft key to open the route menu.

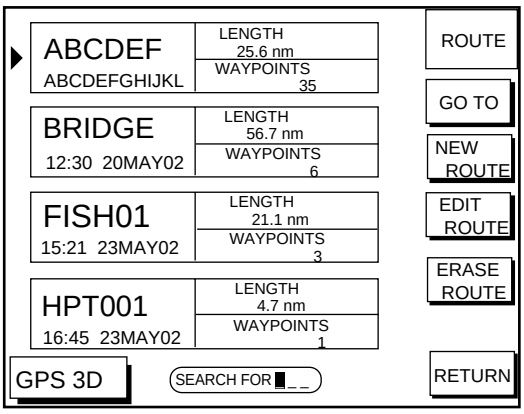

Route menu

3. Press the NEW ROUTE soft key to open the NEW ROUTE window.

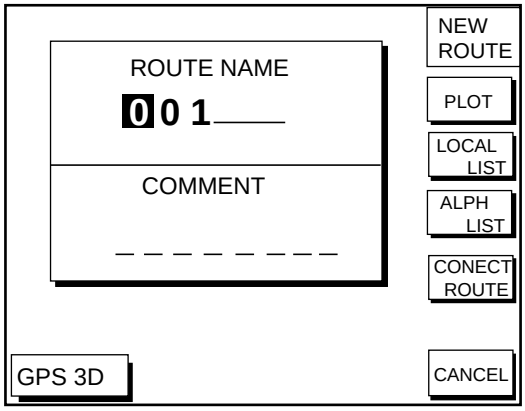

New route window

4. If desired you can change the route name shown and/or add a comment. To change route name, use the cursor pad to locate the cursor and then press appropriate alphanumeric key. To enter a comment, place the cursor in the COMMENT window. Use the cursor pad and alphanumeric keys to enter your comment. A route name may consist of six characters; comment, 13 characters.
5. Press the LOCAL LIST or ALPH LIST soft key to open the waypoint list.
6. Press ▲ or ▼ to select a waypoint, and press the ADD WPT soft key to add it to the route.
7. Repeat step 6 to complete the route.

   When you want to clear a waypoint selected, press the ERASE LST WP soft key. Each pressing of this key deletes the last waypoint entered.
8. Press the SAVE soft key to register the route.

Entering routes by the cursor

This method allows you to construct a route directly on the plotter display, using existing waypoints or new locations. Any new location will be saved as a waypoint, under the next consecutive waypoint number.

1. Follow step 1-4 in “Entering routes through the route list.”
2. Press the PLOT soft key. The plotter display appears.
3. Operate the cursor pad to place the cursor on an existing waypoint (ADD WPT soft key appears) or new location (ADD NEW WPT soft key appears).
4. Press the ADD WP soft key (ADD NEW WPT) key.
5. Repeat steps 3 and 4 to complete the route.
6. Press the [ENTER] key to register the route.

7.2 Connecting Routes

Two routes can be connected as follows:

1. Press the [WPT/RTE] key followed by the ROUTES and NEW ROUTE soft keys to open the new route menu.
2. Enter the name for new route.
3. Press the CONECT ROUTE soft key.
4. Enter the registered route name for the first route beneath FIRST in the CONNECT ROUTE window.

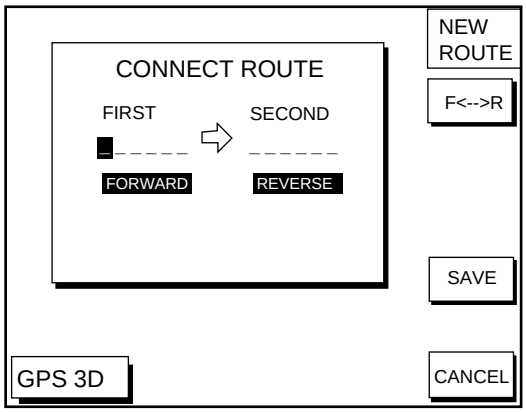

NEW ROUTE window for connection

5. Press the F<-->R soft key to select direction to transverse the waypoints of the route.
6. Enter the route name of the second route similar to how you did for the first route.
7. Press the SAVE soft key.

Note: The maximum number of waypoints in a route is 35. If this number is exceeded an error message appears. In this case, if desired, delete waypoints in one or both routes so the total number of waypoints does not exceed 35.

7.3 Inserting, Removing Waypoints

Inserting waypoints through the route list

Waypoints can be inserted in routes as follows:

1. Press the [WPT/RTE] key followed by the ROUTES soft key to open the ROUTE menu.
2. Select a route by pressing ▲ or ▼.
3. Press the EDIT ROUTE soft key. The EDIT ROUTE window appears.
4. Press the LOCAL LIST soft key. All waypoints in the route are displayed.

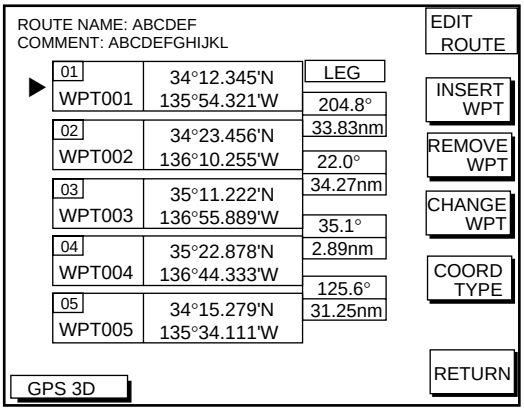

Edit route menu

5. Press ▲ or ▼ to place the cursor at the location where you want to insert a waypoint.
6. Press the INSERT WPT soft key to show the waypoint list.

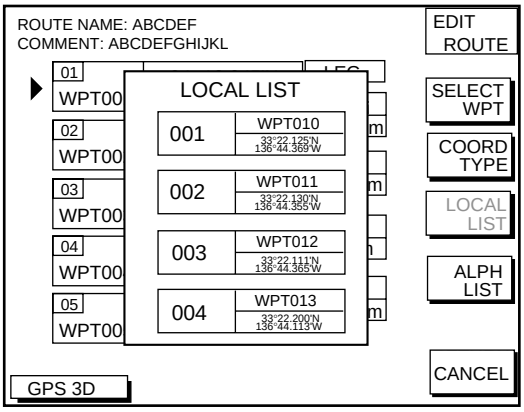

Waypoint list for editing a route (Local list)

7. Press ▲ or ▼ to select the waypoint you want to insert. You can switch between the local list and alphanumeric list by pressing the LOCAL LIST or ALPH LIST soft key.
8. Press the SELECT WPT soft key.

Inserting waypoints on the plotter display

Inserting waypoints before the first waypoint or after the last waypoint

1. Press the [WPT/RTE] key followed by the ROUTES soft key to open the ROUTE menu.
2. Press ▲ or ▼ to select the route desired.
3. Press the EDIT ROUTE soft key.
4. Press the PLOT soft key to show the plotter screen.
5. Operate the cursor pad to place the cursor on the starting/ending waypoint of the selected route which you want to insert.
6. Press the ADD TO START soft key.
7. Operate the cursor pad to place the cursor on an existing waypoint (ADD WPT soft key appears) or new location (ADD NEW WPT soft key appears).
8. Press the ADD WPT soft key (ADD NEW WPT).
9. Press the [ENTER] key.

When you want to insert waypoints after the last waypoint, press the “ADD TO END” soft key at the step 6.

Inserting waypoints in an intermediate location within a route

1. Follow steps 1 through 4 in “Inserting waypoints before the first waypoint or after the last waypoint.”
2. Operate the cursor pad to place the cursor on a line connecting waypoints.
3. Press the SPLIT LEG soft key. The selected line becomes solid.
4. Operate the cursor pad to place the cursor on an existing waypoint (INSERT WPT soft key appears) or new location (INSERT NEW WPT soft key appears). Press the appropriate soft key.

Removing waypoints from routes

Removing route waypoints through the route list

1. Press the [WPT/RTE] key followed by the ROUTES soft key to open the ROUTE menu.
2. Press ▲ or ▼ to select the route desired.
3. Press the EDIT ROUTE soft key and then LOCAL LIST soft keys to show the waypoint list.
4. Press ▲ or ▼ to select the waypoint you want to delete.
5. Press the REMOVE WPT soft key.

Removing route waypoints from the plotter display

1. Press the [WPT/RTE] key followed by the ROUTES soft key to open the ROUTE menu.
2. Press ▲ or ▼ to select the route desired.
3. Press the EDIT ROUTE soft key.
4. Press the PLOT soft key to show the plot screen.
5. Operate the cursor pad to place the cursor on the waypoint you want to remove from the route.
6. Press the REMOVE WPT soft key.

7.4 Creating Track-based Routes

You can create routes based on your ship's track by entering waypoints at own ship's position. This feature is useful when you wish to retrace a track.

1. Press the [WPT/RTE] key to open the WPT & ROUTE menu.
2. Press the CREATE VOYAGE BASED ROUTE soft key to show the SAVE ROUTE menu.

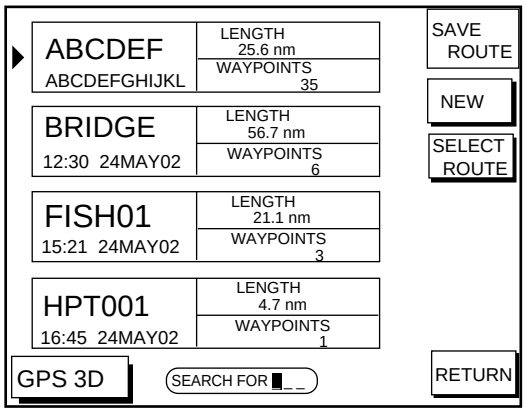

Save route menu

3. Press the NEW soft key to show the new route number.

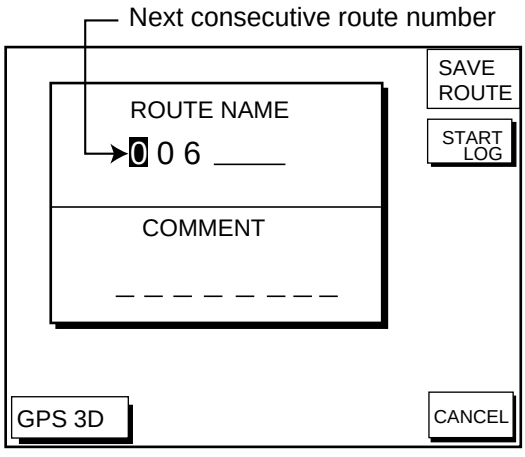

Save route menu for new route

4. If required, you may change the route name and enter a comment, using the cursor pad and alphanumeric keys.

5. Press the START LOG soft key to show the waypoint list. If you entered an existing route name at step 4, you are asked if you want to add track-based waypoints to the existing route. Then, press the [ENTER] key to select YES, or the [CLEAR] key to escape.

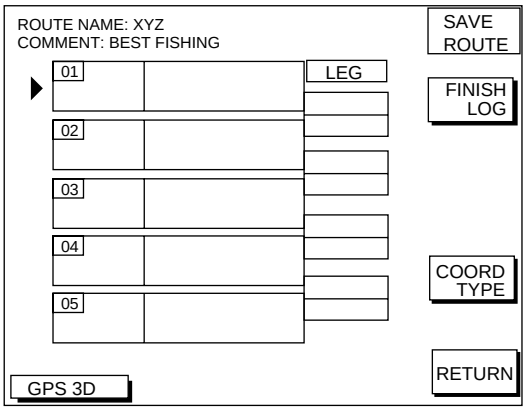

Save route menu w/waypoint list

6. Press the [PLOT] key to show the plot display. The SAVE icon appears at the bottom of the screen.

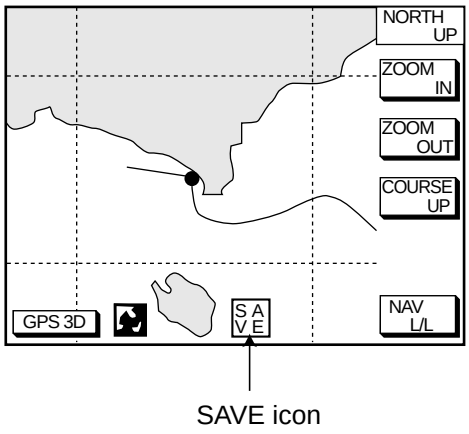

SAVE icon appearance on the plotter display

7. Press the [SAVE/MOB] key with a touch-and-release action to enter a waypoint mark at own ship position. A new waypoint is created under the next consecutive waypoint number and that waypoint is added to the route.
8. Repeat step 7 as necessary. 35 waypoints can be entered.
9. Press the [WPT/RTE] key followed by the CREATE VOYAGE BASED ROUTE soft key.
10. Press the FINISH LOG soft key to register the route. The SAVE icon disappears.

7.5 Erasing Routes

1. Press the [WPT/RTE] key followed by the ROUTES to open the ROUTE menu.
2. Press ▲ or ▼ to select a route you want to erase.
3. Press the ERASE ROUTE soft key. You are asked if you are sure to erase the route.
4. Press the [ENTER] key to erase the route.

This page is intentionally left blank.

8. NAVIGATION

8.1 Navigating to "Quick Points"

The "quick point" feature allows you to navigate to point(s) without retaining the data indefinitely in your unit's memory. Each time a quick point is entered the previous quick points having the same quick point numbers are written over.

Selecting quick point entry method

You need to tell your unit how to set the quick point: 1 POINT, 35 POINT (up to 35 points) or WPT/PORT SERV. (For WPT/PORT SERV, see the next page.)

1. Press the [MENU] key.
2. Press the DISPLAY OPTIONS soft key.
3. Select SET GO TO METHOD and press the EDIT soft key. The following display appears.

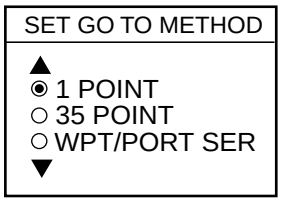

Set go to method window

4. Select method desired.
5. Press the ENTER soft key.
6. Press the RETURN soft key to finish.

Navigating to a single quick point

1. Select 1 POINT in the "selecting quick point entry method," and return to the plotter display.
2. Press the [PLOT] key.
3. Place the cursor on an existing waypoint (GO TO WPT soft key appears) or a new location (GO TO CURSOR soft key appears).
4. Depending on the selection you made at step 3, press the GO TO CURSOR or GO TO WPT soft key.

A line with arrow connects between own ship and destination, marked "QP<01>" for new position, and it shows the shortest course to the destination. Arrows on the line show the direction to follow to the quick point. Range and bearing from own ship to the destination appears at the top of screen. This location is saved to the waypoint list as waypoint "QP01" when new location is selected.

Navigating to multiple quick points

1. Select 35 POINT in the "selecting quick point entry method," and return to the plotter display.
2. Press the GO TO soft key.
3. Place the cursor on an existing waypoint (SELECT WPT soft key appears) or a new location (ADD QP soft key soft key).
4. Depending on the selection you made at step 3, press the SELECT WPT or ADD QP. "QP<01>" appears at the cursor location. To erase last-entered waypoint press the ERASE LST WPT soft key.
5. Repeat steps 3 and 4 to complete.
6. Press the [ENTER] key to register the route.

A line connects between own ship and all quick points, and it shows the shortest course to destination. Arrows on the line show the direction to follow the route. Quick points are numbered in sequential order from QP<01> and are saved to the waypoint list. Range and bearing from own ship to the first destination appears at the top of screen. The unit saves the points as a route, under the name "Q>RTE" (Quick Route).

8.2 Navigating to Waypoints (waypoint list)

1. Press the [WPT/RTE] key to open the WPT & ROUTE menu.
2. Press the WAYPOINTS soft key to open the WPT menu.
3. Press the LOCAL LIST or ALPHA/NUMERIC LIST soft key to show corresponding waypoint list.
4. Select a waypoint.
5. Press the GO TO soft key. The plotter display appears. A line runs between destination selected and own ship's position. Arrows on the line show the direction to the follow. Waypoint data appear at the top of screen.

8.3 Navigating to Ports, Port Services

Some Nav-Charts™ mini chart cards have a port service list which shows services available at ports or harbors. (See page 3-4.) You can use the list to set destination as follows:

1. Press the [MENU] key to open the main menu.
2. Press the DISPLAY OPTIONS soft key.
3. Press ▲ to select SET GO TO METHOD and press the EDIT soft key. The SET GO TO METHOD window appears.
4. Press the ▲ or ▼ to select WPT/PORT SER and press the [ENTER] key or the ENTER soft key.
5. Press the [PLOT] key to return to the plotter display.
6. Press the GO TO. Soft key Soft key titles change as in the figure at the top of the right column.

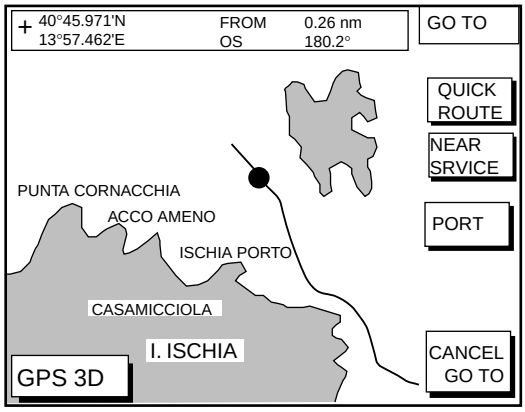

Plotter display

7. Press the PORT or NEAR SRVICE soft key depending on objective. PORT shows a list of ports in your area. NEAR SRVICE displays the port service list.

SELECT PORT
- ▸ ACCIAROLI
- ACQUAMORTA
- AGNONE S. NICOLA
- AGROPOLI
- AMALFI
- BAIA
- CAPRI
- CASA MICCIOLA-ISCHIA

Select port window (ex. southern Italy)

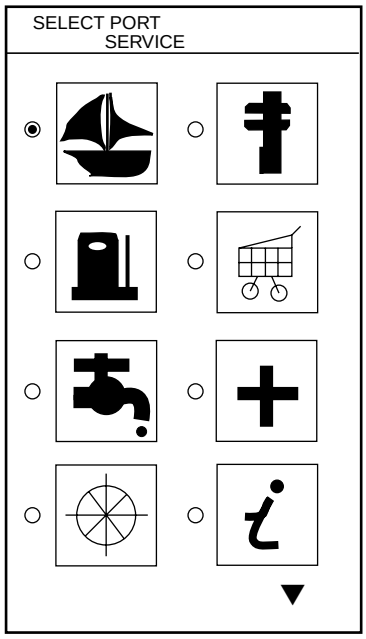

Sample port service list

8. **If you selected PORT in step 7,** use the cursor pad to select a port and press the [ENTER] key. Make a route using the soft keys and press the [ENTER] key. (If you want to go directly to that port, simply press the ADD QP soft key followed by the [ENTER] key.)

   If you selected NEAR SERVICE in step 7, select service mark desired and then press the ENTER soft key. Then, the display shows the locations of those services nearest you. (The figure in below shows location of filling stations in an area in southern Italy.) Use ▲ or ▼ to place the “hand cursor” on the port service icon desired and press the ENTER soft key. Make a route using the soft keys and press the [ENTER] key. (If you want to go directly to location selected, simply press the ADD QP soft key followed by the [ENTER] key.)

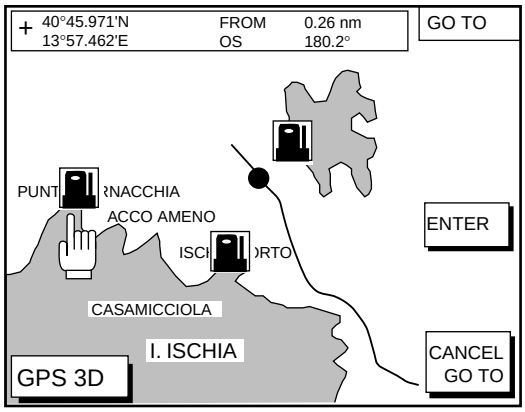

Go to screen (ex. southern Italy)

8.4 Following a Route

1. Press the [WPT/RTE] key followed by the ROUTE soft key to open the ROUTE menu.
2. Press ▲ or ▼ to select a route.
3. Press the GO TO soft key to show the plotter display.

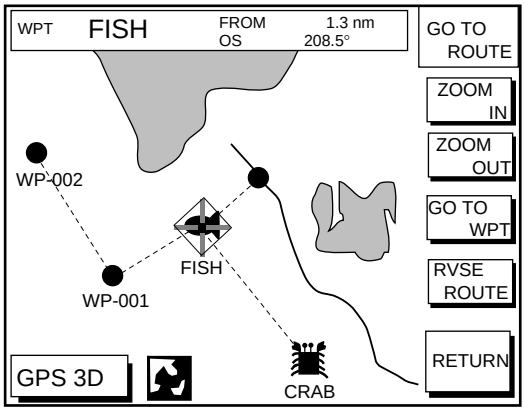

Plotter display, route selected as destination

The cursor is on the route waypoint nearest own ship.

4. Operate the cursor pad to place the cursor on the waypoint or leg desired in the route.
5. Press the GO TO WPT or FOLLOW LEG soft key (depending on the choice at step 4).

Lines connect all route waypoints and arrows on the lines point in the direction to traverse the route.

Navigate route waypoints in reverse order

Press the RVSE ROUTE soft key to reverse the order to traverse waypoints. The arrows on the route line point in direction selected.

Navigate directly to a route waypoint

If you want to go directly to a route waypoint, place the cursor on the waypoint to show the flashing diamond, and then press the GO TO WPT soft key.

Navigate along specific leg of route

Place the cursor on the leg to display it in a flashing line, and then press the FOLLOW LEG soft key.

Restarting navigation

When you steer to avoid an obstacle or the vessel drifts, you may go off your intended course (Line 1 in figure). Use the steering or highway display to return to course.

Also, if you don't need to return to the original course, you can go directly to the waypoint (Line 2 in figure) using the restart function as on the next page.

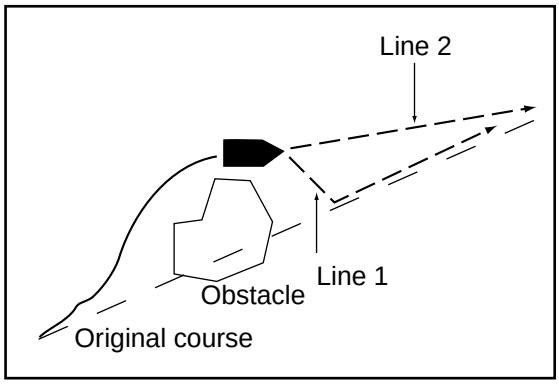

Example of when to restart navigation

1. Set a destination.
2. Press the [WPT/RTE] key to open the WPT & ROUTE menu.
3. Press the LOG soft key.

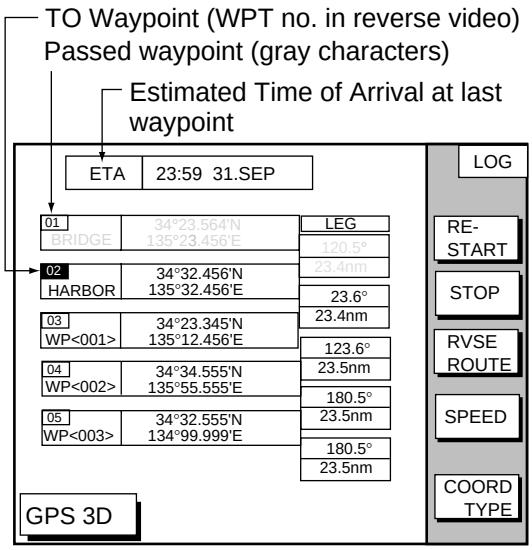

Log display

4. Press the RESTART soft key.

Setting speed for ETA calculation

Speed, which may be input manually or automatically, is required to calculate ETA (Estimated Time of Arrival) to a waypoint.

1. Press the [WPT/RTE] key to display the WPT & ROUTE menu.
2. Press the LOG soft key.
3. Press the SPEED soft key.

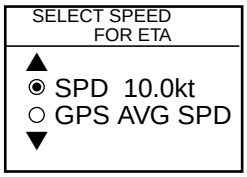

Select speed for ETA window

4. Key in speed manually in the SPD field, or use GPS speed data by selecting GPS AVG SPD.
5. Press the ENTER soft key to register your selection.

Switching waypoints

When you arrive to a waypoint on a route, you can switch to the next waypoint three ways: AUTO1, AUTO2 and MANUAL.

AUTO1: Automatically switches the TO waypoint when your boat is within the arrival alarm area. For how to set the arrival alarm area, see “9.3 Arrival Alarm” on page 9-1.

AUTO2: Automatically switches the TO waypoint when the boat enters the arrival alarm range or the boat passes an imaginary perpendicular line passing through the center of the destination waypoint.

MANUAL: When the boat enters the arrival alarm area, the TO waypoint may be switched by using the RESTART soft key (on the LOG display). If the arrival alarm is not set, the waypoint will not be switched. To be alerted when you arrive at a waypoint turn on the audio alarm. For further details, see “9.2 Audio Alarm On/Off” on page 9-1.

To select waypoint switching method do the following:

1. Press the [MENU] key.
2. Press the DISPLAY OPTIONS soft key.
3. Select WAYPOINTS SW.
4. Press the EDIT soft key to show the WAYPOINTS SW window.
5. Select appropriate waypoint switching method.
6. Press the ENTER soft key to close the window.

8.5 Canceling Navigation

1. Press the [WPT/RTE] key.
2. Press the LOG soft key.
3. Press the STOP soft key.
4. Press the [ENTER] key to go stand by.
5. Press the RELEASE soft key.
6. Press the [ENTER] key.

9. PLOTTER ALARMS

9.1 Introduction

There are five plotter-related alarms which generate both audible and visual alarms: Arrival alarm, Anchor Watch alarm, XTE (Cross Track Error) alarm, Proximity alarm, and Speed alarm.

When an alarm setting is violated the buzzer sounds, and the speaker icon (🔊) appears. You may silence the alarm by pressing the [CLEAR] key. The icon remains on the screen until the cause of the alarm is removed or the alarm is deactivated.

9.2 Audio Alarm On/Off

The audio alarm sounds whenever an alarm setting is violated. You can enable or disable the audio alarm as follows:

1. Press the [ALARM] key to show the alarm menu.

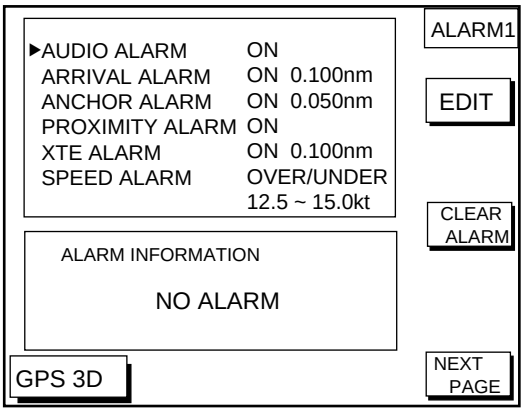

Alarm menu

2. Press ▲ or ▼ to select AUDIO ALARM.
3. Press the EDIT soft key to show the audio alarm window.

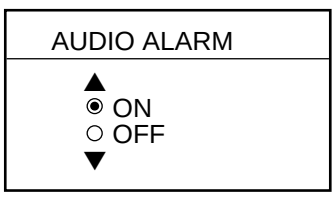

Audio alarm window

4. Press ▲ or ▼ to select ON or OFF.
5. Press the ENTER soft key or the [ENTER] key to register your selection.

9.3 Arrival Alarm

The arrival alarm informs you that your boat is approaching a destination waypoint. The area that defines an arrival zone is that of a circle which you approach from the outside of the circle. The alarm will be released if your boat enters the circle. When the arrival alarm is active a dashed circle marks the arrival alarm area.

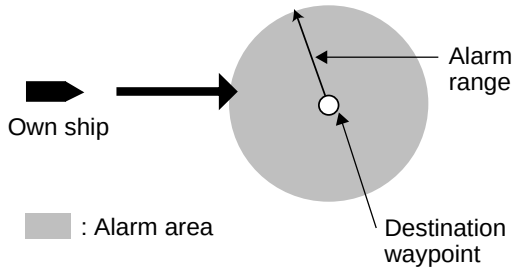

How the arrival alarm works

1. Press the [ALARM] key to open the alarm menu.
2. Press ▲ or ▼ to select ARRIVAL ALARM.
3. Press the EDIT soft key to show the arrival alarm window.

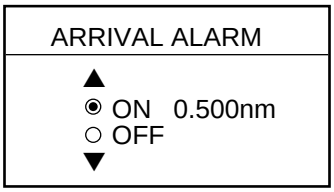

Arrival alarm window

4. Press ▲ to select ON.
5. Operate the cursor pad to place the cursor on the digit desired.
6. Key in the alarm range desired. The arrival alarm range is 0.001 to 9.999 miles.
7. Press the ENTER soft key or the [ENTER] key.

9.4 Anchor Watch Alarm

The anchor watch alarm informs you that your boat is moving when it should be at rest. When the anchor watch is active, a dashed circle marks the anchor watch area.

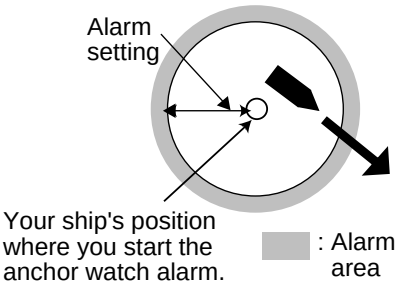

How the anchor watch alarm works

1. Press the [ALARM] key to open the alarm menu.
2. Press ▲ or ▼ to select ANCHOR ALARM.
3. Press the EDIT soft key to open the anchor alarm window.

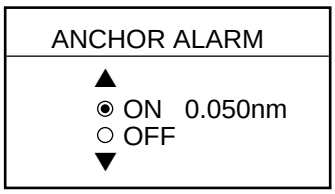

Anchor watch alarm window

4. Press ▲ to select ON.
5. Key in the alarm range desired. The anchor watch range is 0.001 to 9.999 miles.
6. Press the ENTER soft key or the [ENTER] key to register your selection.

9.5 XTE (Cross Track Error) Alarm

The XTE alarm warns you when your boat is off its intended course. When the XTE alarm is active two dashed lines mark the XTE alarm area.

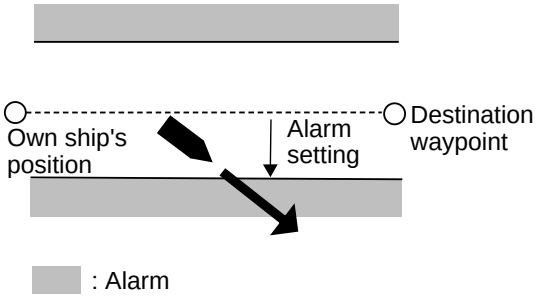

How the XTE alarm works

1. Press the [ALARM] key to open the alarm menu.
2. Press ▲ or ▼ to select XTE ALARM.
3. Press the EDIT soft key to open the XTE alarm window.

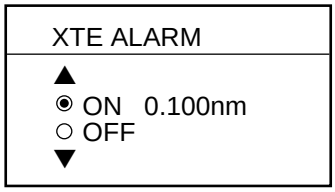

XTE alarm window

4. Press ▲ or ▼ to select ON.
5. Key in the alarm range desired. The XTE alarm range is 0.001 to 9.999 miles.
6. Press the ENTER soft key or the [ENTER] key to register your selection.

9.6 Speed Alarm

The speed alarm warns when your boat's speed is within or over/under the speed range set.

1. Press the [ALARM] key to open the alarm menu.
2. Press ▲ or ▼ to select SPEED ALARM.
3. Press the EDIT soft key to display the speed alarm window.

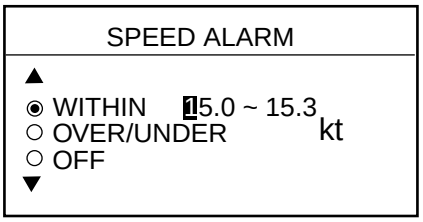

Speed alarm window

4. Press ▲ or ▼ to select WITHIN, OVER/UNDER, or OFF.
5. Key in the alarm range desired. The left field is for UNDER, the right is for OVER.
6. Press the ENTER soft key or the [ENTER] key to finish.

9.7 Proximity Alarm

The proximity alarm alerts you when your vessels nears a waypoint by the distance set for that waypoint on the waypoint list. You can globally activate or deactivate the proximity alarm here. Waypoints whose proximity alarm is active have a (⊘) mark near them. This alarm is not available for Quick waypoint.

1. Press the [ALARM] key to open the alarm menu.
2. Press ▲ or ▼ to select PROXIMITY ALARM.
3. Press the EDIT soft key to show the proximity alarm window.

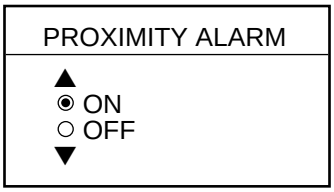

Proximity alarm window

4. Select ON or OFF by the cursor pad.
5. Press the ENTER soft key or the [ENTER] key to register your selection.

9.8 Alarm Information

When an alarm setting has been violated the buzzer sounds and the speaker icon appears. You can see which alarm has been violated, as well as silence the buzzer, on the alarm menu display.

1. Press the [ALARM] key.

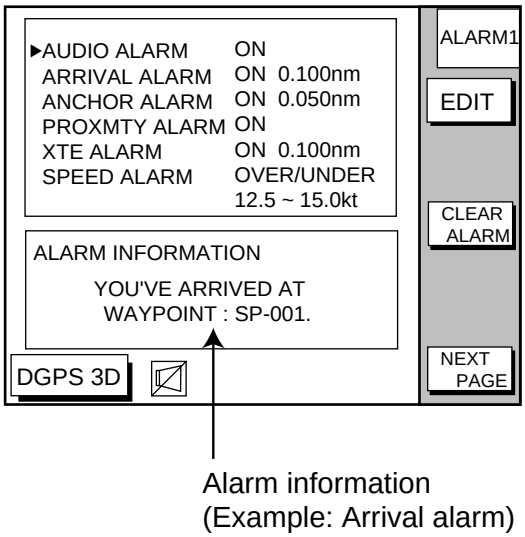

Alarm menu

2. Press the CLEAR ALARM soft key to silence the buzzer.

Note: If more than one alarm has been violated the message CONTINUE appears at the bottom of the display. In this case press the NEXT INFO soft key to see which other alarms have been violated.

Alarm messages

Alarm messages and their meanings

Message	Meaning
YOU HAVE ARRIVED AT WAYPOINT.	Arrival alarm setting violated.
YOU HAVE EXCEEDED ANCHOR WATCH LIMIT.	Anchor watch alarm setting violated.
YOU HAVE ENTYERED AN AVOIDANCE AREA.	Proximity alarm setting violated.
YOU HAVE EXCEEDED XTE LIMIT.	XTE alarm setting violated.
YOU HAVE EXCEEDED SPEED ALARM LIMIT.	Speed alarm setting violated.

10. SAVING AND LOADING DATA TO/FROM MEMORY CARD

The following data can be saved to memory card:

- Mark/line
- Waypoints/routes
- Track
- Configuration (menu settings)

10.1 Formatting Memory Cards

Before you can use a memory card it must be formatted. Note that formatting a used card erases all saved data.

1. Insert the memory card you want to format into the slot.
2. Press the [MENU] key followed by the CONFIGRATION, UPLOAD/ DOWNLOAD DATA and SAVE DATA TO MEMORY CARD soft keys.

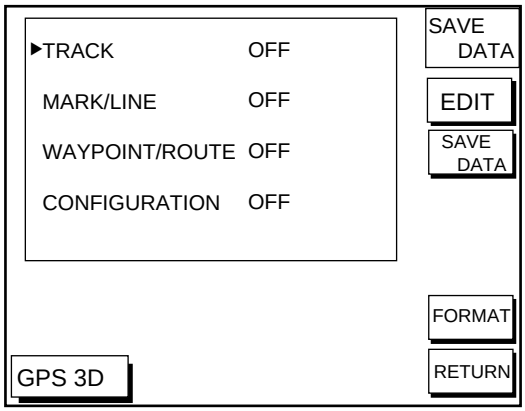

SAVE DATA display

3. Press the FORMAT soft key. You are asked if you are ready to format the memory card.
4. Press the [ENTER] key to format (or press the [CLEAR] key to escape). Now FORMATTING MEMORY CARD appears. Do not remove the card while it is being formatting. When the formatting is completed, FORMAT COMPLETED appears.
5. Press the [ENTER] key to finish. Now you can record data to the memory card.

Note: Chart cards cannot be formatted.

10.2 Saving Data to Memory Card

The memory card can save four items of data; track, mark/line, waypoint/route and configuration.

Saving data

1. Insert a formatted memory card into the slot.
2. Press the [MENU] key followed by the CONFIGURATION and UPLOAD/DOWNLOAD DATA soft keys.
3. Press the SAVE DATA TO MEMORY CARD soft key. The SAVE DATA display appears.
4. Press ▲ or ▼ to select item to save.
5. Press the EDIT soft key to open the TRACK, MARK/LINE, WAYPOINTS/ROUTES or CONFIGRATION window.
6. Press ▲ to select ON.
7. Press the ENTER soft key or the [ENTER] key.
8. Repeat from steps 4 to 7 to save other data if desired.
9. Press the SAVE DATA soft key. The following message appears and saving starts. Do not remove the memory card while data is being saved.

> NOW SAVING DATA TO MEMORY CARD. DO NOT TURN OFF THE POWER UNTIL SAVING COMPLETED.

SAVE DATA message

   When saving is completed, COMPLETE SAVING DATA appears.
10. Press the [ENTER] key.

Error message

Memory card not inserted

Press the [ENTER] key to return to the SAVE DATA display.

> MEMORY CARD NOT INSERTED. INSERT CARD
> PRESS "ENTER" key
> TO CONTINUE.

NOT INSERTED message

Unformatted memory card

Press the [ENTER] key to return to the SAVE DATA display. And format it referring to the previous page.

> MEMORY CARD NOT FORMATTED
> PRESS "ENTER" key
> TO CONTINUE.

NOT FORMATTED message

Wrong card inserted

Appears when a chart card is inserted. Press the [ENTER] key to return to the SAVE DATA display. Replace it with a formatted memory card.

> WRONG CARD INSERTED.
> INSERT MEMORY CARD.
> PRESS "ENTER" key
> TO CONTINUE.

WRONG CARD message

Data overwrite

Data type to be recorded exists on memory card. (Two or more of same data type cannot be recorded.) Press the [ENTER] key to overwrite same data type on the card, or press the [CLEAR] key to escape.

> ⚠ OVERWRITE FOLLOWING DATA. OK?
> (TRACK)
> YES ... "ENTER" key
> NO ... "CLEAR" key

OVERWRITE message

10.3 Loading Data from Memory Card

Data (track, marks, waypoints, configuration) can be loaded from a memory card and displayed on the screen. This feature is useful for observing past data and setting up the equipment for a specific purpose (with "configuration").

1. Press the [MENU] key followed by the CONFIGURATION and UPLOAD/DOWNLOAD DATA soft keys.
2. Press the LOAD DATA FROM MEMORY CARD soft key to show the LOAD DATA display.

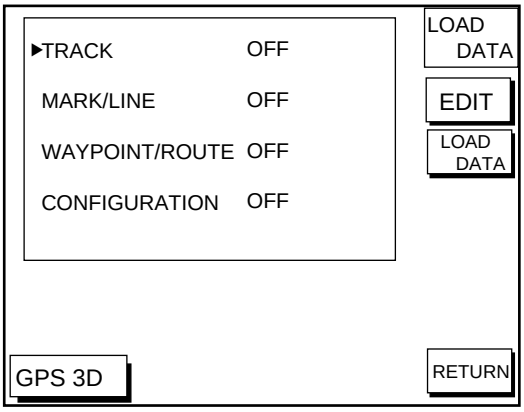

LOAD DATA display

3. Press ▲ or ▼ to select item to load.
4. Press the EDIT soft key to show the ON/OFF selection window.
5. Press ▲ to select ON. Press the ENTER soft key or the [ENTER] key. If the memory card does not contain the item selected, the buzzer sounds and ON cannot be selected.
6. After you select all items desired, press the LOAD DATA soft key to load data. The following message appears.

> NOW LOADING DATA FROM MEMORY CARD. DO NOT TURN OFF THE POWER UNTIL LOADING COMPLETE.

LOAD DATA message

After loading is completed, the following message appears.

> COMPLETE LOADING DATA.
> PRESS "ENTER" KEY
> TO CONTINUE.

COMPLETE message

7. Press the [ENTER] key.

Note on loading data

Track

Since loaded track data is added to internal track, oldest track will be entered when the track memory capacity is exceeded.

Waypoint/route

The loaded data substitutes for previously stored.

Mark/line

The loaded data is added to internal data. When the mark/line memory becomes full no marks may be entered.

Configuration

The loaded data replaces current configuration settings. Press the [ENTER] key to restart. If the memory card is ejected while loading or data could not be loaded, press the [ENTER] key to restart with default settings. Note that track memory capacity is not saved or loaded.

This page is intentionally left blank.

11. CUSTOMIZING YOUR UNIT

This section describes the various options which allow you to set up your unit to suit your needs.

11.1 CHART SETUP OPTIONS menu

The chart offset options menu provides three menus: chart offset, track control, and chart details.

1. Press the [MENU] key to open the main menu.
2. Press the CHART SETUP OPTIONS soft key.

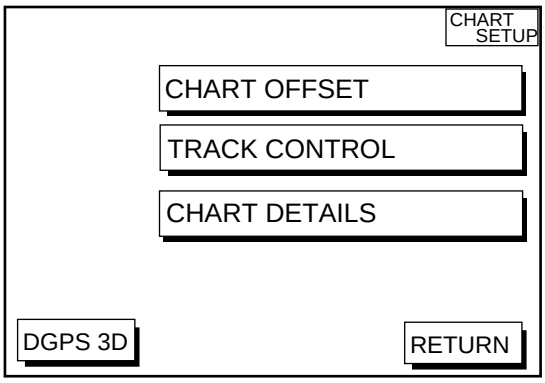

Chart setup options menu

CHART OFFSET menu

In some instances position may be off by a few minutes. For example, the position of the ship is shown to be at sea while it is in fact moored at a pier. You can compensate for this error by offsetting chart position as follows:

1. Press the [MENU] key followed by the CHART SETUP OPTIONS and CHART OFFSET soft keys.

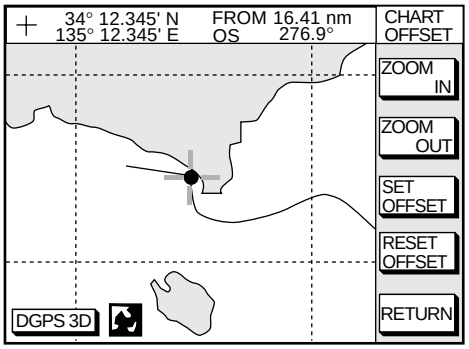

Plotter display, chart offset selected

2. Use the cursor pad to place the cursor where to offset chart position.
3. Press the SET OFFSET soft key.
4. Press the RETURN soft key to finish.

To cancel chart offset, press the RESET OFFSET soft key at step 3 in the above procedure.

TRACK CONTROL menu

This menu mainly controls track plotting interval. For further details see Chapter 4.

CHART DETAILS menu

1. Press the [MENU] key followed by the CHART SETUP OPTIONS and CHART DETAILS soft keys.

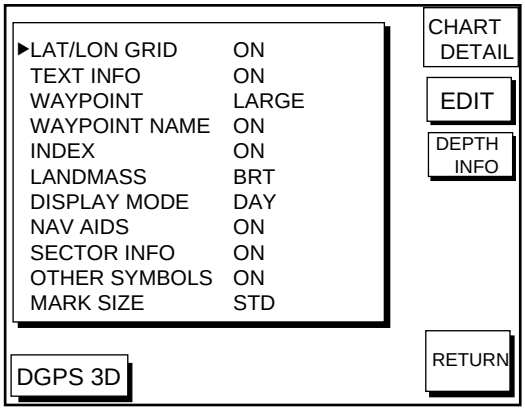

Chart details menu

2. Use the cursor pad to select item and press the EDIT soft key.
3. Select option with cursor pad and press the RETURN soft key to finish.

Chart details menu description

LAT/LONG GRID: Turns lat/long grid on/off.

TEXT INFO: Turns geographic name display on/off.

WAYPOINT: Turns waypoint on or off and selects size to large or small. “LARGE” displays waypoint in shape selected; “SMALL” shows waypoints as an X regardless of actual shape. “OFF” only display waypoints when they are used in navigation.

WAYPOINT NAME: Turns waypoint name on/off.

INDEX: Turns chart indices on/off.

LANDMASS: Selects brightness of landmass.

DISPLAY MODE: Select display mode to normal (DAY) or inverse video (NIGHT).

NAV AIDS: Turns aids to navigation symbols (for example, buoys) on/off. When OFF is selected, symbols are displayed and information is not.

SECTOR INFO: Turns lighthouse viewable angle indication on FURUNO charts on/off. Viewing angle is shown as an arc extending from lighthouse position. This feature is available with selected charts

OTHER SYMBOLS: Selects other chart symbols ON or OFF.

MARK SIZE: Selects the mark size STD (standard) or SMALL.

DEPTH INFO soft key: Turns depth info display on/off. You can change the settings for contour line.

11.2 DISPLAY OPTIONS menu

This menu contains items for setting up the plotter display.

1. Press the [MENU] key.
2. Press the DISPLAY OPTIONS soft key. The display setup1 menu appears.

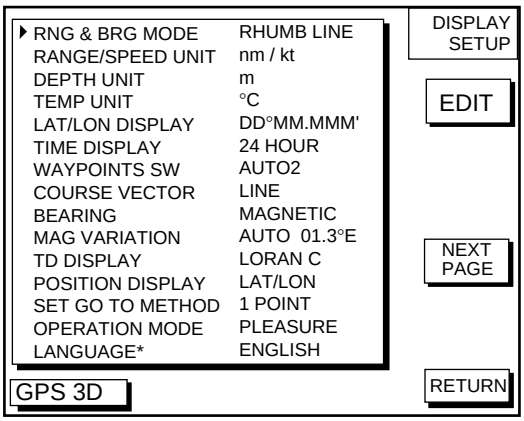

*: Not avairable for C-MAP NT model.

Display setup menu

Display setup menu description

RNG & BRG MODE

The GPS receiver calculates the range, bearing, cross track error (XTE) and ETA to waypoint when you set a destination. The range and bearing can be calculated by GREAT CIRCLE (straight line between two points) or RHUMB LINE (straight line between two points on nautical chart) method.

RANGE/SPEED UNIT

Selects the unit for range and speed; nm/kt, km/ km/h, sm/ sm/h.

DEPTH UNIT

Selects unit of depth measurement among, feet, fathoms, and meters.

TEMP UNIT

Selects unit of water temperature measurement between Celsius or Fahrenheit.

LAT/LON DISPLAY

Displays the seconds of latitude and longitude positions in hundredths, thousandths or ten thousandths.

TIME DISPLAY

Selects time display format for 12 hour or 24 hour.

WAYPOINT SW

Provides automatic or manual waypoint switching when following a route. For further details, see page 8-5.

COURSE VECTOR

You may extend a line from the own ship position to show ship's course. The line can be a vector (the length depends on the ship's speed.) or a line (course bar). Note that this bar may be hidden when the landmass is set to BRT (bright).

BEARING

A navigation device outputs both true and magnetic bearings. A magnetic bearing is true bearing plus (or minus) earth's magnetic deviation. Thus the equation for finding magnetic bearing is;

true bearing ± x (magnetic variation)° = magnetic bearing

You can display your ship's course and bearing to waypoint in true or magnetic bearing.

MAG VARIATION

The magnetic variations for all areas of the earth are preprogrammed into this unit. The preprogrammed variation is accurate for most instances, however you may wish to manually enter a variation.

1. Select MAG VARIATION, and press the EDIT soft key to show the mag variation window.

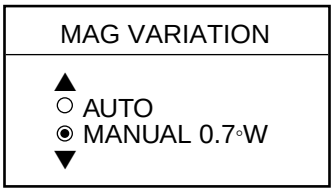

Mag variation window

2. Select MANUAL.
3. Key in magnetic deviation value.
4. Press the W<-->E soft key to switch between East and West and vice versa, if necessary.
5. Press the ENTER soft key or the [ENTER] key to finish.

TD DISPLAY

Position may be shown in Loran C TDs or Decca TDs. To display position in TDs select Loran C or Decca here and choose TD at "POSITION DISPLAY" below. You can select the Loran C or Decca chain to use on the TD SETUP menu. For details see "TD SETUP menu" on page 11-7.

POSITION DISPLAY

Displays position in latitude and longitude (default setting) or Loran C or Decca TDs.

SET GO TO METHOD

Selects the method for entering the quick point: 1 POINT, 35 POINT (2-35 points), or WPT/PORT SER. For further details see pages 8-1 and 8-2.

OPERATION MODE

Selects the operation mode between PLEASURE, FISHING 1 and FISHING 2.

Mode	Remarks
PREASURE	Mark cannot be entered.
FISHING 1	Mark can be entered. MOB mark is entered with the normal waypoint mark by pressing the [MOB/SAVE] key down.
FISHING 2	Mark can be entered. When pressing the [MOB/SAVE] key, the waypoint edit window appears. If the waypoint edition is not necessary, press the [MOB/SAVE] key again to enter the MOB mark.

LANGUAGE (Not available for C-map)

You can select the language shown on display, English or French.

DISPLAY SETUP 2 menu description

The display setup2 menu contains video sounder-related items which the user may adjust as desired. Set up these items as follows:

1. Press the [MENU] key.
2. Press the DISPLAY OPTIONS soft key.
3. Press the NEXT PAGE.

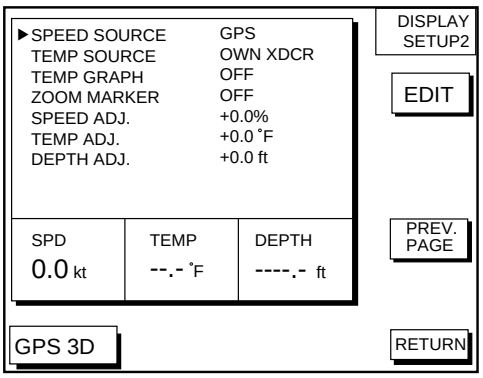

Page 2

Display setup2 menu

SPEED SOURCE

Selects the speed source input; OWN PDDWHL (speed sensor) or GPS (external).

TEMP SOURCE

Selects source of water temperature input; NMEA (external) or OWN XDCR (water temperature sensor, default setting).

TEMP GRAPH

Displays water temperature in line graph form. Requires water temperature data.

ZOOM MARKER

The zoom marker appears in the normal, bottom marker and bottom zoom displays and marks the area which is expanded in the bottom marker and bottom zoom pictures. You can turn on/off the marker as desired.

SPEED ADJ.

In the speed sensor-generated speed indication is wrong, you can correct it here. (NMEA format speed data cannot be adjusted.) For example, if the speed indication is 10% lower than actual speed, press ▲ to display +10.

TEMP ADJ.

If the water temperature sensor-generated water temperature indication is wrong, you can correct it here (NMEA format water temperature data cannot be adjusted.) For example, if the water temperature indication is 2˚ higher than actual water temperature, press ▼ to display –02.0.

DEPTH ADJ.

The depth indication can be offset to increase accuracy. The procedure is similar to that for TEMP ADJ and speed ADJ.

11.3 GPS/DGPS/TD OPTIONS menu

This menu sets up GPS and WAAS/DPGS receivers and enables display of position in Loran C or Decca TDs.

1. Press the [MENU] key.
2. Press the GPS/DGPS/TD OPTIONS soft key to display the GPS/DGPS/TD options menu.

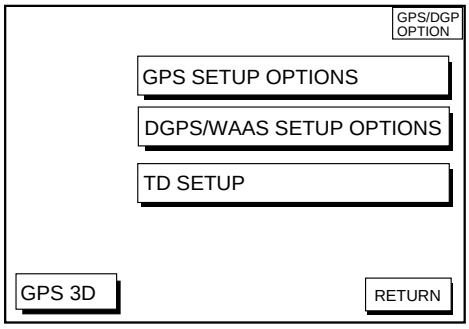

GPS/DGP option menu

GPS SETUP OPTIONS menu description

This menu provides items for setting up the GPS receiver. To display it, show the menu shown in above, and then press the GPS SETUP OPTIONS soft key.

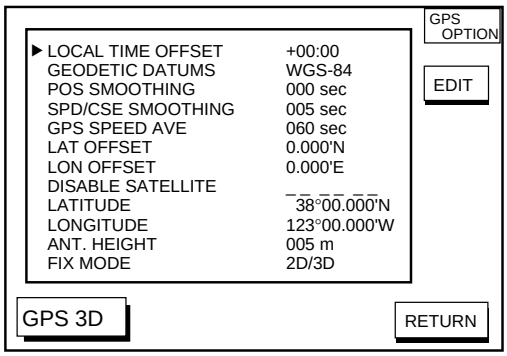

GPS options menu

LOCAL TIME OFFSET

GPS uses UTC time. If you would rather use local time, enter the time difference between local time and UTC time. Use the +<-->- soft key to switch from plus to minus and vice versa.

GEODETIC DATUM

The GP-1640F is preprogrammed with most of the major chart systems of the world. Although the WGS-84 system, the GPS standard, is now widely used other categories of charts still exist. Select the chart system used, not the area where your boat is sailing. The default chart system is WGS-84.

1. Select GEODETIC DATUMS.
2. Press the EDIT soft key to show the geodetic datum window.

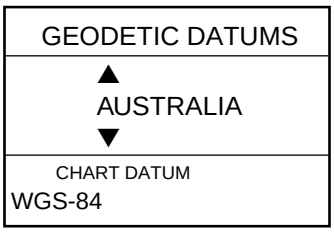

Geodetic datum window

3. Press ▲ or ▼ to select the chart system you are using. If no chart datum exists for geodetic datum selected UNKNOWN appears in the CHART DATUM window. In this case select a different chart system.
4. Press the ENTER soft key or the [ENTER] key to register your selection.

POS SMOOTHING

When the DOP or receiving condition is unfavorable, the GPS fix may change greatly, even if the vessel is dead in water. This change can be reduced by smoothing the raw GPS fixes. A setting between 000 to 999 is available. The higher setting the more smoothed the raw data, however too high a setting shows response time to change in latitude and longitude. This is especially noticeable at high ship's speeds. 000 is the normal setting; increase the setting if the GPS fix changes greatly.

SPD/CSE SMOOTHING

During position fixing, ship's velocity (speed and course) is directly measured by receiving GPS satellite signals. The raw velocity data may change randomly depending on receiving conditions and other factors. You can reduce this random variation by increasing the smoothing. Like with latitude and longitude smoothing, the higher the speed and course smoothing the more smoothed the raw data. If the setting is too high, however, the response to speed and course change slows. For no smoothing, enter all zeroes. The default setting is 5 (sec).

GPS SPEED AVE

Calculation of ETA is based on average ship's speed over a given period. If the period is too long or too short calculation error will result. Change this setting if calculation error occurs. The default setting is 60 seconds, which is suitable for most conditions.

LAT OFFSET, LON OFFSET

GPS generated position may be off by some seconds due to GPS signal variation. You may apply an offset to GPS position to refine position accuracy.

DISABLE SATELLITE

Every GPS satellite is broadcasting abnormal satellite number(s) in it's Almanac, which contains general orbital data about all GPS satellites, including those which are malfunctioning. Using this information, the GPS receiver automatically eliminates any malfunctioning satellite from the GPS satellite schedule. However, the Almanac sometimes may not contain this information. If you hear about a malfunctioning satellite from another source, you can disable it manually. Enter satellite number (max. 3 satellites) in two digits and press the ENTER soft key or the [ENTER] key.

LATITUDE, LONGITUDE

The default latitude and longitude position is San Francisco, USA (38.00.00'N, 123.00.000'W). When the unit is turned on first the first time it begins searching for its actual position. To lessen the time required to find position, you may enter your position manually. To switch from North to South and vice versa, use the N<-->S soft key, and to switch from West to East and vice versa, use the soft key W<-->E. Finally, press the ENTER soft key or the [ENTER] key.

ANT. HEIGHT

Enter the height of the antenna unit above sea surface. For further details refer to the installation manual. The default setting is 5 m.

FIX MODE

You can choose the position-fixing mode from 2D or 2D/3D. 2D requires three satellites to fix position; 2D/3D requires three or four satellites, whichever is available. The default setting is 2D/3D.

DGPS/WAAS SETUP OPTIONS menu description

This menu sets the using WAAS or when the DGPS beacon receiver GR-80 is connected. To display it, press the [MENU] key followed by the GPS/DPGS/TD OPTIONS and DGPS/WAAS SETUP OPTIONS soft keys.

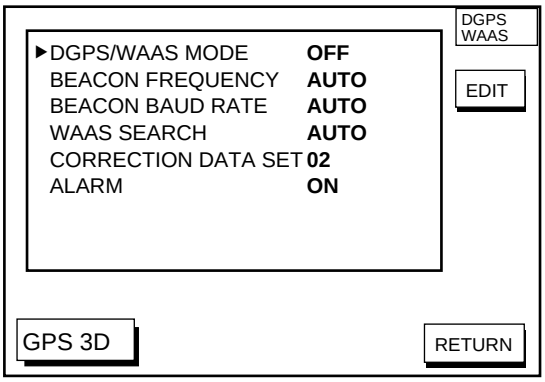

DGPS setup options menu

DGPS/WAAS MODE

Select DGPS, WAAS or AUTO (Position is fixed by DGPS beacon receiver. Position is fixed by WAAS when DGPS correction data is not available.) For DGPS, a DGPS beacon receiver connection is required.

BEACON FREQUENCY (for DGPS)

DGPS reference station can be searched automatically or manually. For manual search, select MANUAL here, and use the cursor pad to select frequency of DGPS reference station. The default setting is AUTO. The external DGPS receiver connection is required.

BEACON BAUD RATE (for DGPS)

Selects the transmission rate of the DGPS reference station nearest you, among AUTO (default setting), 50, 100 or 200 bps. This setting is only effective when the DGPS mode is “manual”; baud rate cannot be changed in automatic DGPS mode. The external DGPS receiver connection is required.

WAAS SEARCH (for WAAS)

Choose AUTO for automatic search or MANUAL for manual search. For MANUAL, enter appropriate WAAS satellite number, referring to the illustration below.

AUTO mode and GEO satellite (in MAY 2002)

Provider	GEO Satellite	Longitude
WAAS	POR (134)	178˚E
	AOR-W (122)	54˚W
EGNOS	AOR-E (120)	15.5˚W
	IOR (131)	64.5˚E

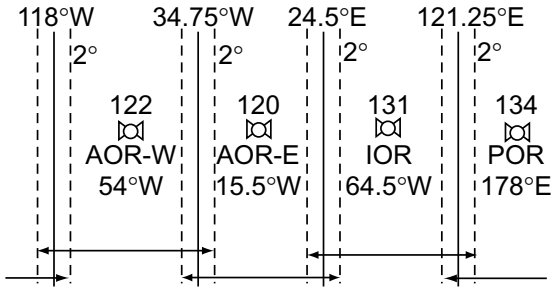

One-degree threshold

Longitude Range	Satellite
120.25°E to 117°W	134
119°W to 33.75°W	122
35.75°W to 25.5°E	120
23.5°E to 122.25°E	131

GEO satellite and coverage area

CORRECTIONS DATA SET (for WAAS)

Determines how to use the WAAS signal, currently in the test mode. Enter appropriate two-digit numeric (default: 02). Use “02 (default setting) until the WAAS System changes from its current “Testing Status” to “Operational Status”.

ALARM

This alarm alerts you by aural and visual alarms when the WAAS/DGPS signal is lost.

TD SETUP menu description

This menu selects the Loran C or Decca chain to use to display position in TDs. To display it, press the [MENU] key followed by the GPS/DPGS/TD OPTIONS and TD SETUP soft keys.

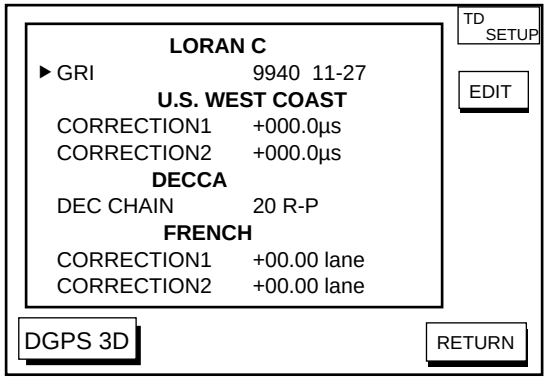

TD setup menu

Displaying LORAN C TDs

1. Select GRI and press the EDIT soft key to show the GRI & sta. pair window.

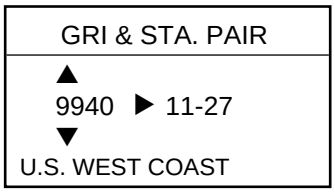

GRI & sta. pair window

2. Press ▲ or ▼ to select GRI code. Press ▶ to enable selection of station pair, and then press ▲ or ▼ to select station pair. See the Loran C chain list at the end of this manual for GRI and station pairs.
3. Press the ENTER soft key or the [ENTER] key to register your selection.
4. If necessary, you may enter a position offset to refine Loran C position. Select LORAN C CORRECTION1 or CORRECTION2 and press the EDIT soft key. Enter correction value and press the ENTER soft key or the [ENTER] key. Use the + <--> - soft key to switch from plus to minus and vice versa.

Displaying DECCA TDs

1. Select DEC CHAIN and press the EDIT soft key to show the chain sta. pair window.

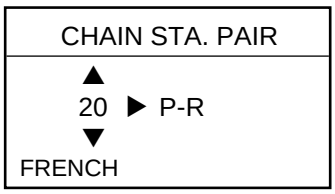

Chain sta. pair window

2. Press ▲ or ▼ to select Decca chain number. Press ▶ to enable selection of lane, and then press ▲ or ▼ to select lane pair (R: red, G: green and P: purple). Refer to the Decca chain list at the end of this manual.
3. Press the ENTER soft key or the [ENTER] key to register your selection.
4. If necessary, you may enter position offset to refine Decca position. Select DECCA CORRECTION1 or CORRECTION2 and press the EDIT soft key. Enter correction value and press the ENTER soft key or the [ENTER] key. Use the + <--> - soft key to switch from plus to minus and vice versa.

11.4 SOUNDER SETUP OPTIONS menu

This menu provides video sounder facilities such as noise and interference reduction, range setup and system setup.

1. Press the [MENU] key.
2. Press the SOUNDER SETUP OPTIONS soft key.

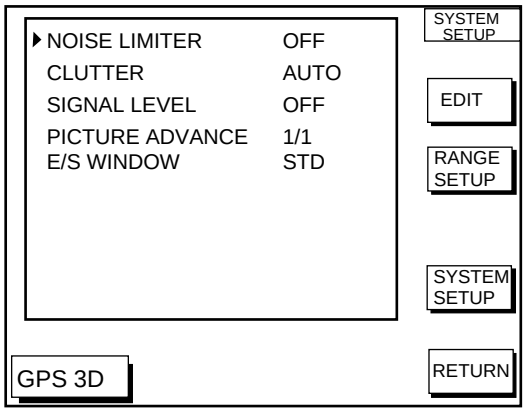

Sounder setup menu

SOUNDER SETUP OPTIONS menu description

NOISE LIMITER

Suppress interference from other acoustic equipment operating nearby or other electronic on your boat.

CLUTTER

Suppresses low level noise due to dirty water or noise, and the default setting is AUTO. This setting is available when MANUAL is selected at MODE/FREQonly.

SIGNAL LEVEL

Erases selected echo level.

PICTURE ADVANCE

Selects picture advance speed.

E/S WINDOW

Selects the width of the sounder display.

RANGE SETUP soft key

Ranges, zoom range and bottom-lock range are preset at factory and are suitable for most fishing conditions. However, you may change them as follows to suit your needs.

1. Press the [MENU] key.
2. Press the SOUNDER SETUP OPTINS, RANGE SETUP soft keys.

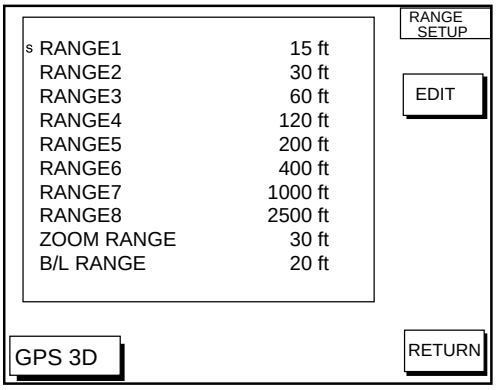

Range setup menu

3. Select a range, ZOOM RANGE or B/L RANGE, and press the EDIT soft key. ZOOM RANGE selects the range to zoom in the marker and bottom zoom modes. The setting range is 7 to 5000 feet, and the default setting is 30 feet. B/L RANGE sets the expansion width for the bottom-lock display, 10 or 20 feet. The default setting is 20 feet.
4. Adjust the range with the cursor pad.
5. Press the RETURN soft key to go to back to the RANGE SETUP menu.

SYSTEM SETUP soft key

The system setup menu provides functions for selection of fish alarm sensitively, TX power selection, TVG adjustment, echo level offset and seabed echo offset.

1. Press the [MENU] key.
2. Press the SOUNDER SETUP OPTIONS, SYSTEM SETUP soft keys.

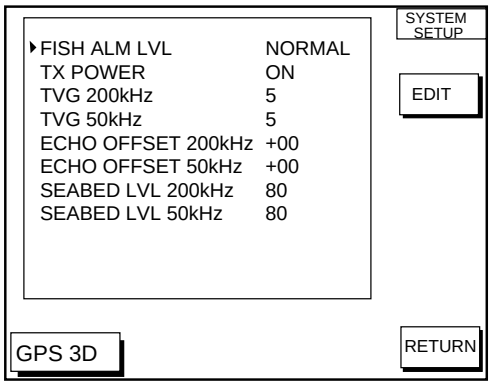

System setup menu

SYSTEM SETUP menu description

FISH ALM LVL: Sets the fish alarm sensitivity; namely, which echo strength will trigger the alarm. HIGH, only the strongest echoes trigger the alarm; NORMAL, echoes from strong to medium strength trigger the alarm, LOW, any echo triggers the alarm.

TX POWER: Turns TX power on/off.

TVG 200 kHz, TVG 50 kHz: TVG (Time varied Gain) compensates for propagation attenuation of the ultrasonic waves. It does this by equalizing echo presentation so that fish schools of the same size appear in the same density in both shallow and deep waters. In addition, it reduces surface noise. Note that if the TVG level is set too high short range echoes may not be displayed.

ECHO OFF SET 200 kHz, ECHO OFFSET 50 kHz: If the on-screen echo level appears to be too weak or too strong and the level cannot be adjusted satisfactorily with the gain control, adjust echo offset to compensate for too weak or strong echoes.

SEABED LVL 200 kHz, SEABED LVL 50 kHz: If the depth indication is unstable in automatic operation or the bottom echo cannot be displayed by adjusting the gain control in manual operation, you may adjust the bottom echo level detection circuit, for both 50 kHz and 200 kHz, to stabilize the indication. Note that if the level is set too low weak echoes may

be missed and if set too high the depth indication will not be displayed.

11.5 CONFIGURATION menu

The configuration menu has facilities for setting up data ports, uploading/downloading data, self test, demonstration mode setup, and memory clearing.

1. Press the [MENU] key.
2. Press the CONFIGURATION soft key to display the configuration menu.

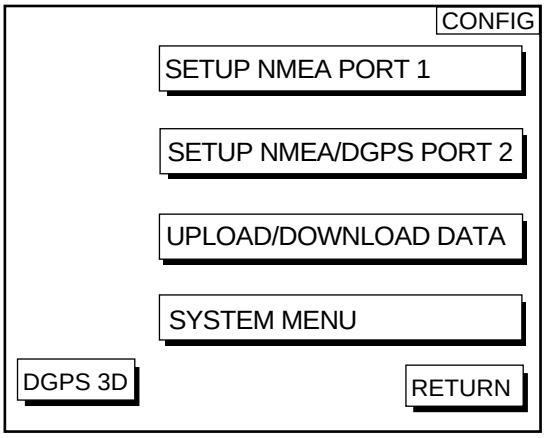

Configuration menu

SETUP NMEA PORT 1 menu description

This menu sets up DATA PORT 1 according to the specifications of the equipment connected to it. The menu can be displayed by pressing the [MENU] key followed by the CONFIGURATION and SETUP NMEA PORT 1 soft keys. For detailed information, see the installation manual.

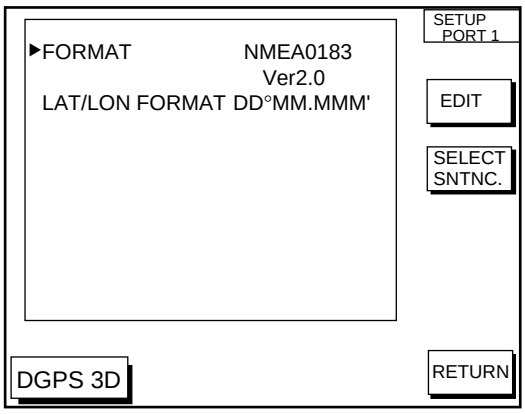

Setup NMEA port 1 (or 2) menu

FORMAT

Selects NMEA 0183 version 1.5 or 2.0. If you are unsure of the version of external equipment try both and choose the one which outputs data correctly. (The default setting is version 2.0.)

LAT/LON FORMAT (GGA only)

Selects the seconds of latitude and longitude positions in hundredths, thousandths or ten thousandths.

SELECT SNTNC Soft key

This key enables/disables input/output of data sentences.

SETUP NMEA/DGPS PORT 2 menu description

This menu should be set according to the specifications of the equipment connected to connectors PORT 1 (NMEA) and PORT 2 (DGPS) at the rear of the display unit. The menu can be displayed by pressing the [MENU] key followed by the CONFIGURATION and SETUP NMEA PORT 2 soft keys. For detailed information, see the installation manual.

FORMAT

Selects data format of connected equipment; NMEA 0183 version 1.5, version 2.0 or RTCM104 EXTRN, for external DGPS receiver connection).

The procedure for setting LAT/LON FORMAT are similar to those for PORT 1. Note that you cannot setup data sentences when you select RTCM104 (EXTRN) as the format.

LAT/LON FORMAT (GGA only)

Selects the seconds of latitude and longitude positions in hundredths, thousandths or ten thousandths.

UPLOAD/DOWNLOAD DATA menu

This menu allows you to upload waypoint and route data to a PC or download the same data from a PC, via the DGPS connector at the back of display unit. The menu can be displayed by pressing the [MENU] key followed by the CONFIGURATION and UPLOAD/DOWNLOAD DATA soft keys. For detailed information, see the installation manual.

For memory card, see chapter 10.

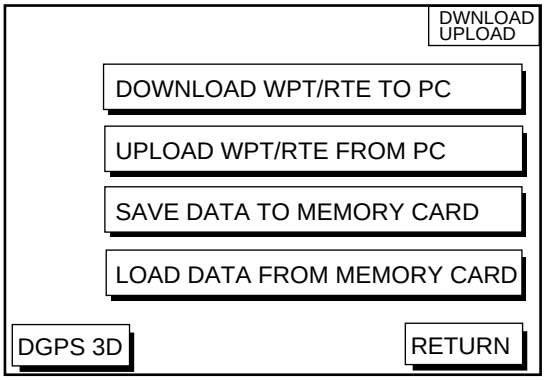

Upload/download menu

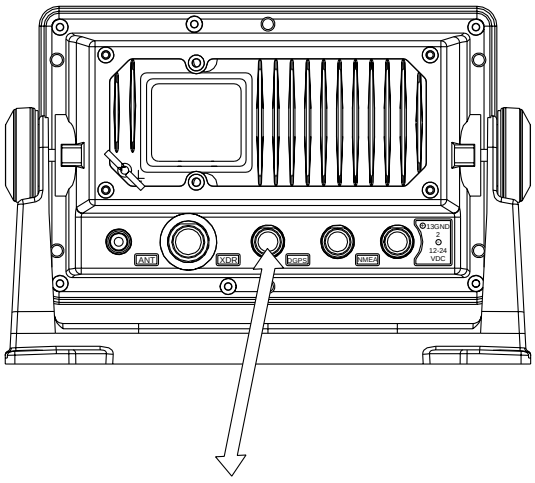

Connect PC to DGPS.

Display unit, rear view

Set communication software on the PC as follows:

Baud Rate:	4800 bps
Character Length:	8 bit
Stop bit:	1 bit
Parity:	None
X Control:	XON/XOFF

The following data can be downloaded/uploaded between a personal computer and this equipment.

- Waypoint data (In alphanumeric order)
- Route data (In order of route number)
- End of sentence

Note 1: There are two kinds of data for route data: route data and route comment data.

Note 2: DGPS position fix is not available when uploading or downloading data.

Download waypoint/route to PC

1. Connect the PC to the equipment as shown on the next page.
2. Press the DOWNLOAD WPT/RTE TO PC soft key. You are asked if you are ready to download waypoints and routes.
3. Press the [ENTER] key to download.

Upload waypoint/route from PC

Note that all waypoint and route data stored in your unit will be deleted when data is uploaded.

1. Connect the PC to the equipment as shown below.
2. Press the UPLOAD WPT/RTE FROM PC soft key. You are asked if you are ready to upload waypoints and routes.
3. Press the [ENTER] key to upload.

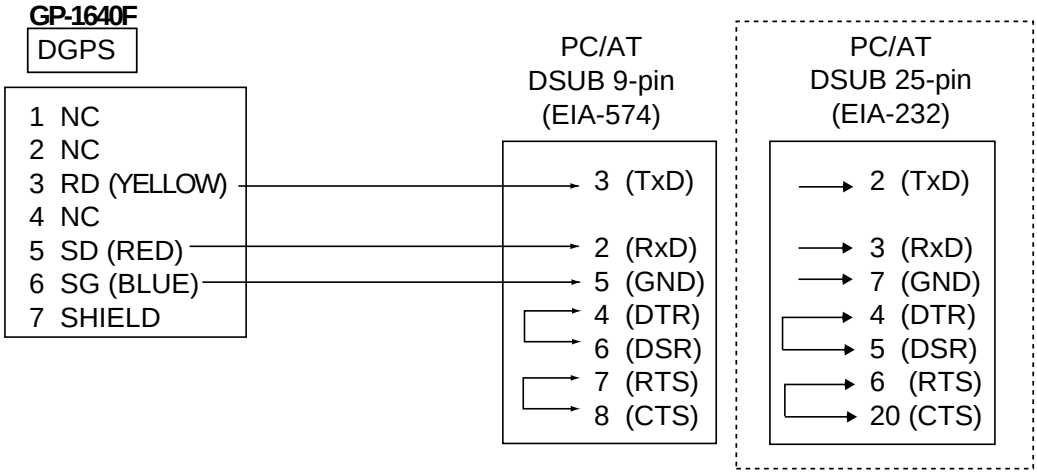

Connection of GP-1640F to PC

Waypoint data format

PFEC, GPwpl, llll.llll, a, yyyyy.yyy, a, c----c, Y, c----c, a <CR><LF>
1 2 3 4 5 6 7 8

Waypoint data format

1: Waypoint latitude
2: N/S
3: Waypoint longitude
4: E/W
5: Waypoint name (Number of characters is fixed to 6 and space code is placed when the number of characters are less than 6.)
6: Waypoint color (On color monitor, displayed in yellow. Not changed.)
7: Waypoint comment (1 byte for mark code + 13 characters of comment.)
1st byte of mark code: Fixed to '@'.
2nd byte of mark code: Internal mark code. See Note 1.
8. Information of marking waypoint. Always set to "A".
"A": Displayed
"V": Not displayed

Note 1: Following characters can be used for comments:

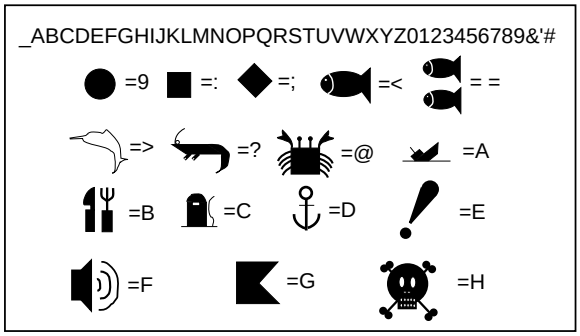

Character available for comment

Route data menu

$GPRTE, x, x, a, ccc, c----c, c----c, ... , c----c <CR><LF>
1 2 3 4 5 6 12

Route data format

1: Number of sentences required for one complete route data (1 to 4). See Note 2.
2: Number of sentences currently used (1 to 4)
3: Message mode (Always set to C)
4: Route No. (001 to 300, 3 digits required)
5 through 12: Waypoint name (Max. 8 names, length of each waypoint name is fixed to 7 byte)

Note 2: A route can may contain 35 waypoints and GPRTE sentence for one route data may exceed 80 byte limitation. In this case, route data is divided into several GPRTE sentences (Max. 4 sentences). This value shows the number of sentences the route data has been divided.

Route comment data format

```
$PFEC, GPrtc,  xx,  c----c <CR><LF>
                1     2
```

Route comment format

1: Route No. (01 to 200, 3 digits required)
2: Route comment (Max. 16 characters, variable length)

The same characters of the comment for waypoint comment can be used.

End of sentence

```
$PFEC, GPxfr,  CTL, E <CR><LF>
```

End of sentence

SYSTEM menu

This menu provides testing facilities, demonstration mode setup and memory/trip clear. You may display it by pressing the [MENU] key followed by the CONFIGURATION and SYSTEM MENU soft keys.

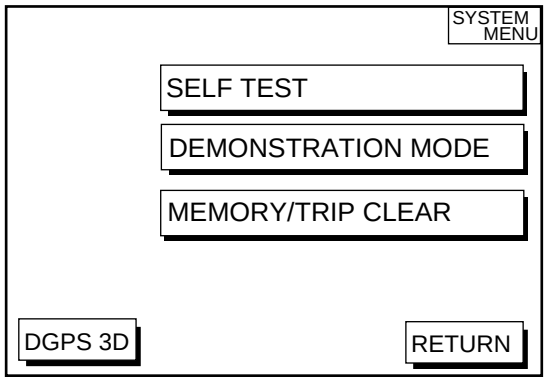

System menu

SYSTEM MENU description

SELF TEST, MEMORY/TRIP CLEAR: SELF TEST and MEMORY/TRIP CLEAR are described in Chapter13.

DEMONSTRATION MODE: This sets the parameters for the demonstration display. For further details see page 1-5 .

This page is intentionally left blank.

12. USING C-MAP NT MODEL

The GP-1640F C-MAP NT series uses FURUNO mini chart card and C-MAP NT-FP chart card. These charts show accurate coastlines, depth contours, place names, aids to navigation such as buoys and lighthouses, and other navigational marks.

12.1 Inserting Chart Card

Insert an appropriate chart card before turning on the power.

1. Push down the lid catch to open the chart card slot cover.

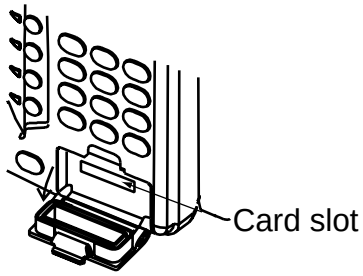

Location of chart card slot cover

2. Insert appropriate chart card groove side up.
3. Close the slot cover to protect the chart drive. (Keep the slot cover closed at all times.)

Note1: Turn off the power before inserting or ejecting the chart card.

Note2: When using C-MAP NT-FP card, do not eject it while a chart is being drawn. This may cause the equipment to stop working.

12.2 Cursor and Data Display

Besides its fundamental functions of providing position data, the cursor can also show caution area, depth area, source of data, etc. Further, you can display information about an icon by placing the cursor on it.

1. Press the cursor pad to turn the cursor on.

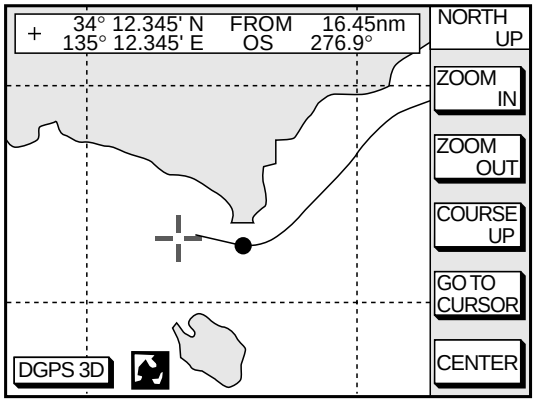

Plotter display

2. Use the cursor pad to place the cursor on the position desired.
3. Press the [ENTER] key to open the Objects window. For example the following window appears.

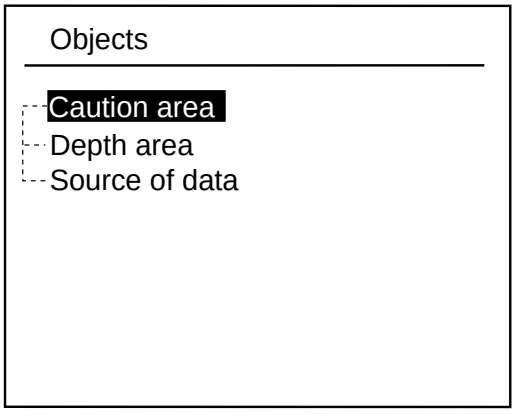

Objects window

4. Press ▲ or ▼ to select the item desired.
5. Press the ENTER soft key or the [ENTER] key to display details for object selected Objects.

Caution area
Information
LEUCHTFEUER DIE KARTE ENTHAEL T NUR DIE LAGEN DER WICHTIGEN FEUER. LIGHTS ONLY THE PRINC IPAL LIGHTS ARE SHOWN ON THIS CHART. MISSWEISUNG SIEHE K ARTEN GROESSEREN MASSSTABS. M AGNETIC VARIATION LOCAL MAGNE TIC ANOMALIES SEE LARGER SCAL E CHARTS.

Example of caution area window

6. Press the CANCEL soft key to close the window.
7. Repeat step 4 to 6 to select other item.
8. Press the CANCEL soft key to close the Objects window.

When you place the cursor on any icon, its information appears.

1. Place the cursor on a lighthouse icon.

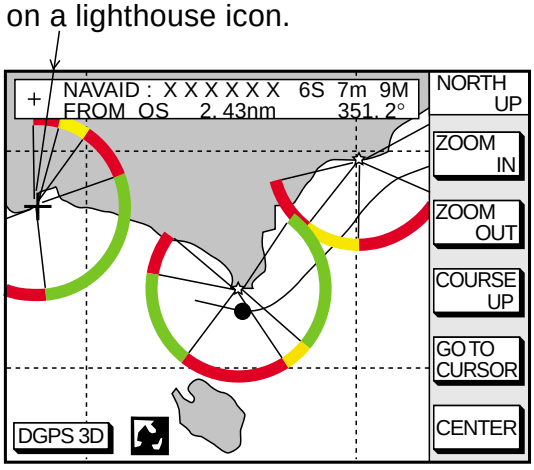

Lighthouse icon

2. Press the [ENTER] key. For example, the following window appears.

Objects
- Navigation mark, fixed
  - Extended navigational aid, ge
  - Light
  - Light
  - Light
  - Light
- Depth contour
- Land area
- Source of data



Object windows

3. Press ▲ or ▼ to select the item desired.
4. Press the [ENTER] key to display detailed information.

Navigation mark, fixed
Light.

Color
white
Height
7.00 Meters
Light characteristic
occulting
XXXXXXXX
XXXXXXXX

Sample lighthouse data

5. Press the CANCEL soft key to close the Objects window.

12.3 Tidal Information

The C-MAP NT-FP chart card provides for calculation of the tide heights for any date. Additionally it displays the times of sunrise and sunset.

1. Press the cursor pad to place the cursor on a Tide icon.

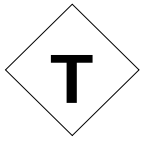

Tide icon

2. Press the [ENTER] key to open the Objects window.

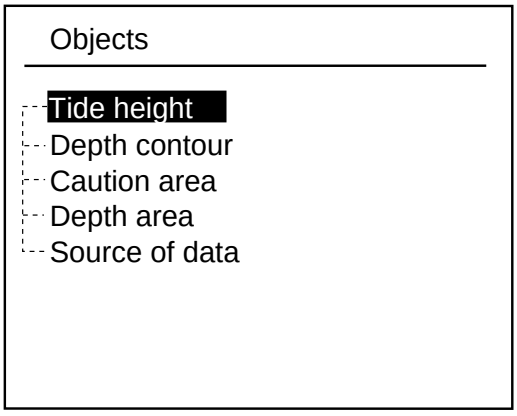

Objects window

3. Press ▲ or ▼ to select Tide height.
4. Press the ENTER soft key or the [ENTER] key to open the TIDE window.

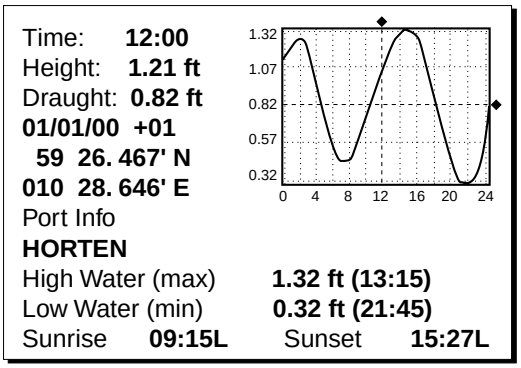

TIDE window

5. Press the DATE soft key to open the DATE window.

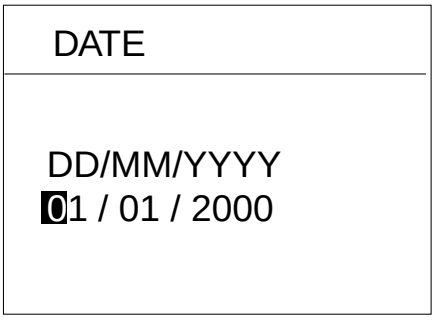

DATE window

6. Use ◄ or ► to position the cursor where desired and then press the appropriate numeric keys to enter a date.
7. Press the ENTER soft key or the [ENTER] key to show the tidal graph for entered date.
8. Press ◄ or ► to locate the vertical cursor on the time desired. Time and height are shown to the left of the graph.
9. Press ▲ or ▼ to shift the level cursor. Draught is shown to the left of the graph.
10. Press the CANCEL soft key to close the TIDE window.

12.4 Navigating to Ports, Port Services

The C-MAP NT-FP chart provides detailed information on aids to navigation (buoy, lighthouse) and port service information that you specify with the cursor. The port service information includes the availability of water and fuel supplies, shipyards and first aid, etc. You can use the list to set destination as follows:

1. Press the [MENU] key to open the main menu.
2. Press the DISPLAY OPTIONS soft key.
3. Press ▼ to select SET GO TO METHOD and press the EDIT soft key. The SET GO TO METHOD window appears.

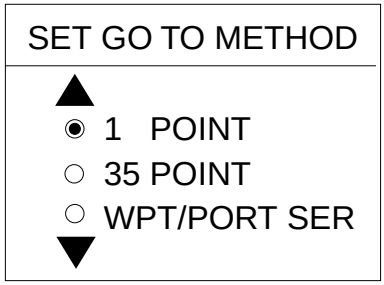

SET GO TO METHOD window

4. Press ▼ to select WPT/PORT SER and press the ENTER soft key or the [ENTER] key.
5. Press the [PLOT] key once or twice to return the plotter display.

6. Press the GO TO soft key. Soft key titles change. If GO TO key is not displayed, press the cursor pad.

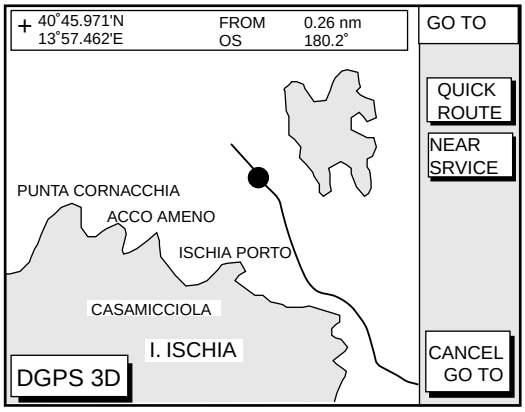

Plotter display

7. Press the NEAR SRVICE soft key.
   The SELECT PORT SERVICE window appears.

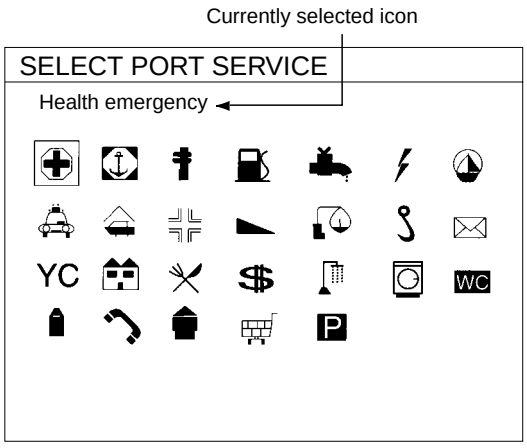

SELECT PORT SERVICE window

8. Use the cursor pad to select service mark desired. Currently selected icon is circumscribed. The name of currently selected icon appears at the top of the window. Refer to the user's manual of C-MAP NT for details about the icons.
9. Press the ENTER soft key or the [ENTER] key. Then, the display shows the locations of those services nearest you.

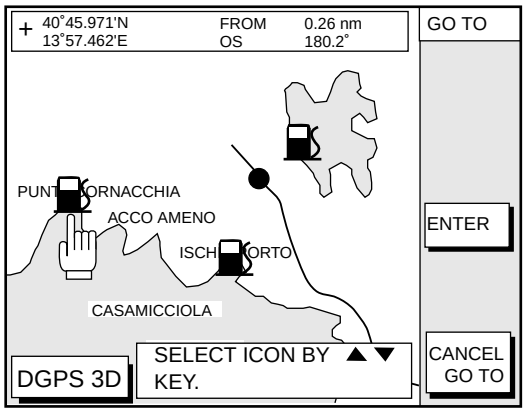

Sample filling station locations

10. Press ▲ or ▼ to place the "hand cursor" on the port service icon desired and press the ENTER soft key or the [ENTER] key.

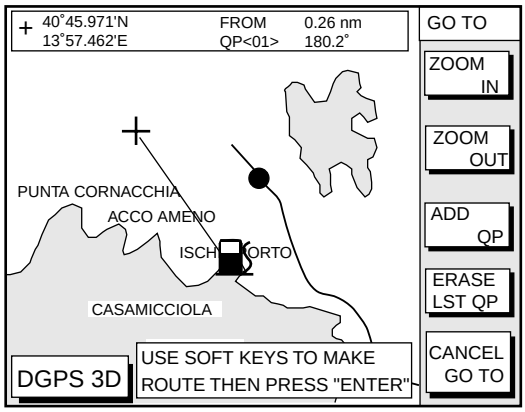

Make route window

11. Do one of the following:

Go directly to port service selected:
Press the [ENTER] key. The own ship and the port service is connected by a line. The range and bearing form own ship to the port service appears at the navigation data display.

You can go to the port service directly by steerings the ship to the hearing indicated.

Go to port service selected via waypoints, make a route as follows:

a) Move the cursor to the nearest waypoint of the port service.
b) Press the ADD QP soft key.
c) Repeat the above steps a) and b) to enter other waypoints.

d) Press the [ENTER] key to finish.
A line connects between own ship and the port service. And the range and bearing from own ship to first waypoint appears.

Note: Destination is automatically cancelled if there is no port for service selected.

12.5 Setting Chart Setup Options

CHART DETAILS menu

1. Press the [MENU] key followed by the CHART SETUP OPTIONS and CHART DETAILS soft keys.

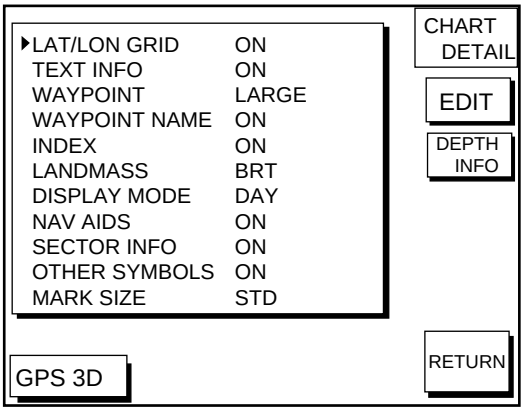

Chart details menu

2. Press ▲ or ▼ to select item and press the EDIT soft key.
3. Select option with cursor pad and press the ENTER soft key or the [ENTER] key.
4. Press the RETURN soft key to finish.

Items which are concerned with C-MAP NT-FP chart card are described here.

LANDMASS: Selects brightness of land. The default settings are bright (BRT).

NAV AIDS: Turns aids to navigation symbols (for example, buoys) on/off. The default setting is ON. When OFF is selected, symbols are displayed but information is not displayed (at the upper part of the screen).

SECTOR INFO: Turns lighthouse viewable angle indication on C-MAP NT-FP chart on/off. Viewing angle is shown as an arc extending from lighthouse position. This feature is available with selected charts. The default setting is ON. When you select OFF, the visual information is not displayed and the lighthouse is displayed as "!".

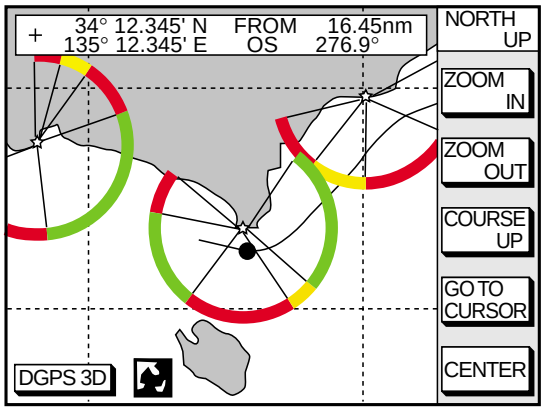

SECTOR INFO

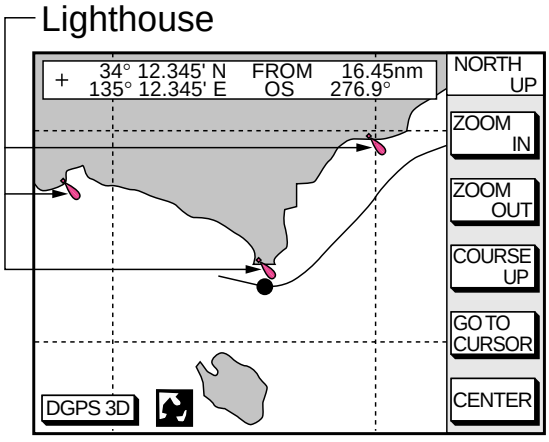

Lighthouse appearance when SECTOR INFO is off

OTHER SYMBOLS: When you select OFF, navaid icons are not displayed but alarm icons are displayed.

DEPTH INFO soft key: Turns the DEPTH INFO display on/off, or selects the depth areas limit and spot sounding & bathymetric range in C-MAP NT-FP chart.

1. While displaying chart details menu, press the DEPTH INFO soft key to show the following display.

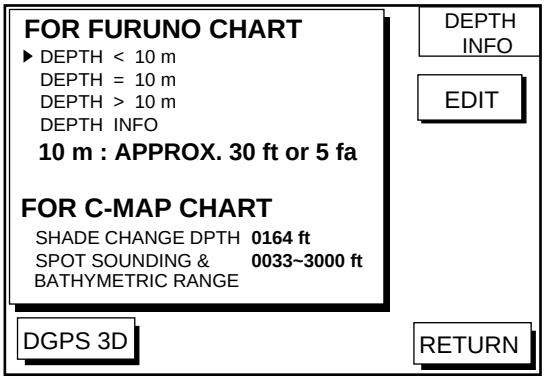

DEPTH INFO display

2. Press ▲ or ▼ to select item and press the EDIT soft key or enter the appropriate value by using numeric keys.
3. Select option with cursor pad and press the ENTER soft key or the [ENTER] key.
4. Press the RETURN soft key several times to finish.

SHADE CHANGE DPTH: Sets value in the range of Depth Limit on the DEPTH INFO display when the C-MAP NT-FP chart is used. The Depth Area (0 to entered value) is shown on the screen in dark tone.

Note : Depth data depends on the registered value at "depth area".

SPOT SOUNDING & BATHYMETRIC RANGE: Sets the depth range to display the spot sounding on the C-MAP NT-FP chart. The depth range you set is displayed line.

12.6 Selecting Chart Scale/Range

Chart scale (range) may be selected with the ZOOM IN or ZOOM OUT soft key. ZOOM IN expands the chart; ZOOM OUT shrinks it. The range selected is momentarily displayed at the lower left-hand corner.

Note: When the display is expanded or shrunk beyond the range of the chart card in use the chart is not displayed, and an appropriate chart icon appears.

12.7 Displaying Program Number

1. Press the [MENU] key to open the main menu.
2. Press the CONFIGURATION soft key to show the configuration menu.
3. Press the SYSTEM MENU soft key to open the system menu.
4. Press the SELF TEST soft key to open the test menu.
5. Press the MEMORY, I/O TEST soft keys to start the test. Test results and program numbers. are shown as below.

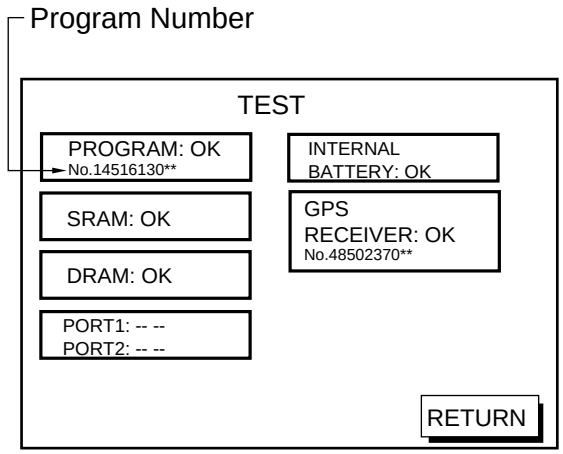

Memory, I/O test results

This page is intentionally left blank.

13. MAINTENANCE & TROUBLESHOOTING

13.1 Maintenance

Regular maintenance is essential for good performance. A maintenance program should be established and should at least include the items listed in Table 13-1.

Note: The equipment may restart when certain metallic parts on the rear of the display unit are touched. This is caused by static electricity. No operational error occurs.

⚠ WARNING

Do not open the equipment.

Hazardous voltage which can cause electrical shock, burn or serious injury exists inside the equipment. Only qualified personnel should work inside the equipment.

Table 13-1 Recommended maintenance program

Item	Check point	Remedy
Antenna	Check for loosened and corroded bolts.	Tighten loosened bolts. Replace heavily corroded bolts.
Antenna cable	Check connection point for watertightness.	Replace damaged parts.
	Check connector for tightness and corrosion.	
	Check cables for damage.	
Display unit connectors	Check for tight connection and corrosion.	Tighten loosened connectors.
Ground terminal	Check for tight connection and corrosion.	Clean or replace as necessary.
Display unit	Dust and foreign material on the display unit and screen.	Dust or dirt on the display unit can be removed with a soft cloth. If desired, a water-moistened cloth may be used. Use special care when cleaning the LCD since it scratches easily. Do not use chemical cleaners to clean the display unit - they can remove paint and markings.
Transducer	Check the transducer face yearly for marine life, which can reduce sensitivity.	Gently scrape off any marine life from the transducer with a piece of wood.

13.2 Replacement of Fuse, Battery

The fuse on the power cable protects the system from reverse polarity of the ship's mains and equipment fault. If the fuse blows, find the cause before replacing it. Use only a 3 A fuse. Using the wrong fuse will damage the unit and void the warranty.

A battery installed on a circuit board inside display unit preserves data when the power is turned off. The life of the battery is about three years. When the battery voltage is low the battery icon (🔋) appears on the display. When this happens, contact your dealer to request replacement of the battery.

⚠ CAUTION

Use the correct fuse.

Use of a wrong fuse can cause fire or equipment damage.

	Type	Code Number
Lithium battery	CR2450-F2 ST2L	000-144-941

13.3 Simple Troubleshooting

Below are simple troubleshooting procedures which the user can follow to restore normal operation.

Table 13-2 Simple troubleshooting (plotter)

If…	Then…
You cannot turn on the power	Check for blown fuse.
	Check that the power connector is firmly tightened.
	Check for damaged power cable.
	Check battery for proper voltage output (10.8 to 31.2 V).
Power is on but nothing appears	Press the [POWER/BRILL] key and then the cursor pad to adjust display brilliance and tone.
There is no response when a key is pressed	Turn on the power again.
Position is not fixed within 3 minutes.	Check for loosened antenna connector.
	Check GPS receiver status indication.
Position is wrong	Check that the correct geodetic chart system is selected on the GPS/DGPS/TD OPTIONS menu.
	Enter GPS position offset on the GPS/DGPS/TD OPTIONS menu.
Track is not plotted	Plotting is stopped. ("H" appears on the plotter display.)
Bearing is wrong	Check that correct magnetic variation is entered on the DISPLAY OPTIONS menu.
Loran or Decca TDs do not appear	Check that proper Loran or Decca chain codes are entered on the GPS/DGPS/TD OPTIONS menu.
Loran TDs are wrong	Enter TD offset on the GPS/DGPS/TD OPTIONS menu.
Ship's speed display is not zero after ship is stopped	Try to decrease GPS speed smoothing setting on the GPS/DGPS/TD OPTIONS menu.

Table 13-3 Simple troubleshooting (sounder)

If…	Then…
No picture but marks and characters appear	Check if picture advance speed is set to “STOP” on the sounder setup options menu.
	Check for loosened transducer connector.
Picture appears but no zero line	If using manual video sounder operation, range is shifted; set shifting to zero to correct.
Picture sensitivity is too low	Check gain setting, if using manual operation.
	Marine life or air bubbles may be clinging to transducer face.
	Water may be dirty.
	Bottom may be too soft to return a suitable echo.
Depth is not displayed	Adjust gain to display bottom echo in dark tone.
Noise or interference obstructs the display	Check if transducer cable is near ship’s engine. If it is, relocate it.
	Check ground.
	Other video sounders may be operating nearby and on same frequency.
Water temperature graph appears but no or wrong readout.	Check for loosened sensor cable.

13.4 Error Messages

This equipment displays the following error messages on the alarm menu to alert you to possible trouble.

Table 13-4 Error messages

Error message	Meaning, remedy
NO GPS FIX	No GPS signal
VOLTAGE OF INTERNAL BATTERY IS LOW.	Voltage of internal battery is low. Request replacement of battery.

13.5 Diagnostic Tests

Memory, I/O port test

This test conducts a general check of the display unit and the antenna unit. The unit displays the results for each device or component checked as OK or NG (No Good).

1. Press the [MENU] key to open the main menu.
2. Press the CONFIGURATION soft key to show the configuration menu.

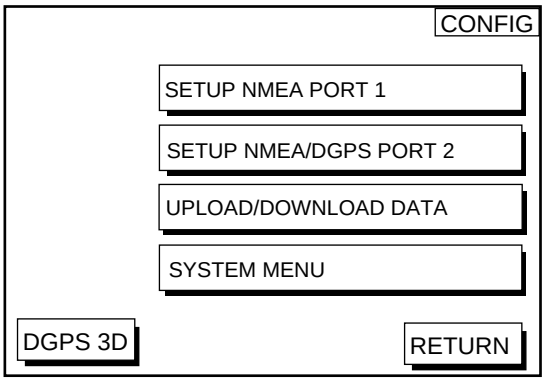

Configuration menu

3. Press the SYSTEM MENU soft key to open the system menu.

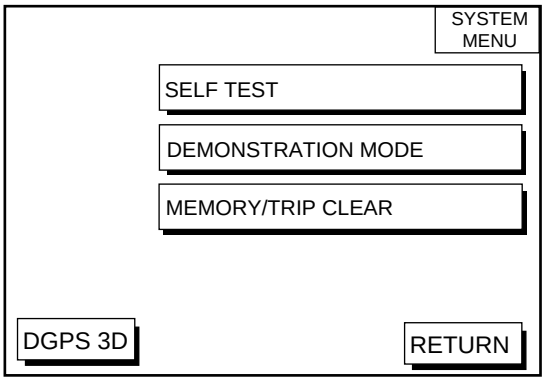

System menu

4. Press the SELF TEST soft key to open the test menu.

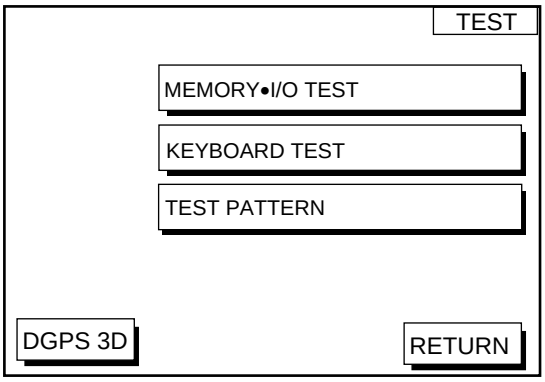

Test menu

5. Press the MEMORY•I/O TEST soft key to start the test. The test results appears as below.

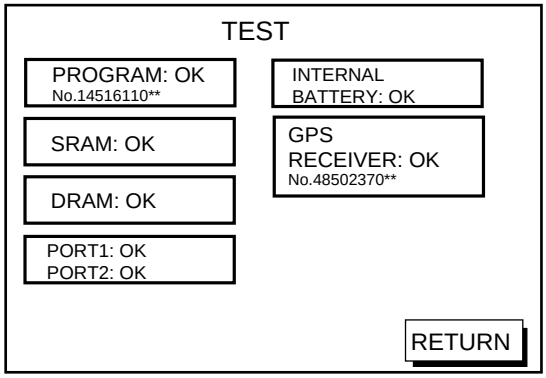

: Special connections are required to check these ports. Otherwise, "--" appears.
**: Program Version No.

Memory, I/O test results

6. The test runs continuously. To return to the self test menu, press the RETURN soft key.

Keyboard test

This test checks all controls for proper operation.

1. Press the [MENU] followed by the CONFIGURATION, SYSTEM MENU and SELF TEST soft keys to display the self test menu.
2. Press the KEYBOARD TEST soft key to display the screen for testing the keyboard.

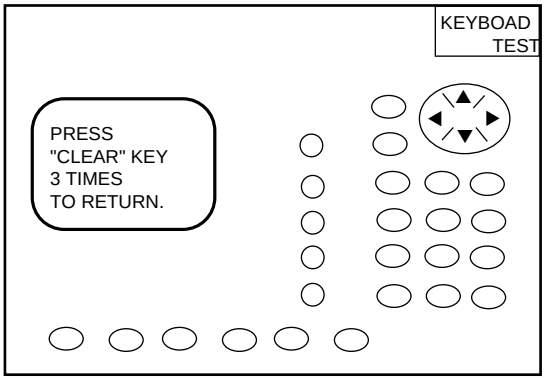

Keyboard test

3. Press any key. The pressed key's on-screen location turns black if the key is functioning properly.
4. To escape, press the [CLEAR] key three times.

Display test

1. Press the [MENU] key followed by the CONFIGURATION, SYSTEM MENU and SELF TEST soft keys to display the self test menu.
2. Press the TEST PATTERN soft keys to open the test pattern display.
3. Press the [ENTER] key to change the test pattern.

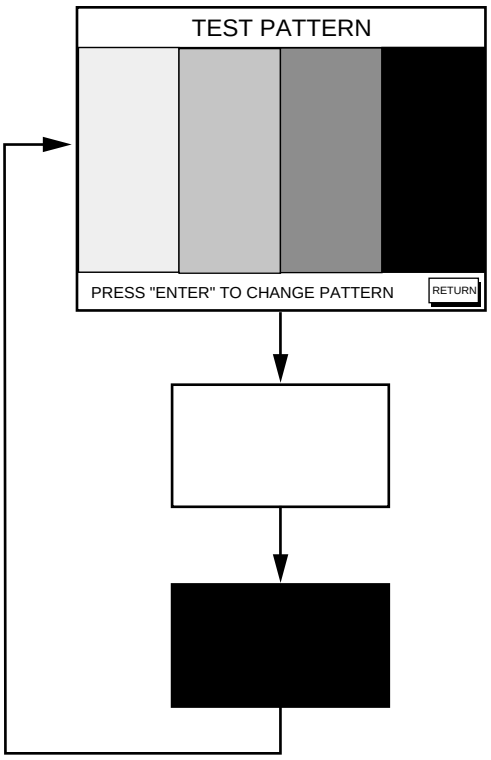

Display test pattern

13.6 Clearing Memories

The memory, which stores marks, tracks and initial settings, can be cleared to start afresh. When this done all default settings are restored.

1. Press the [MENU] key followed by the soft keys CONFIGURATION and SYSTEM MENU.
2. Press the MEMORY/TRIP CLEAR soft key to open the clear memory menu.

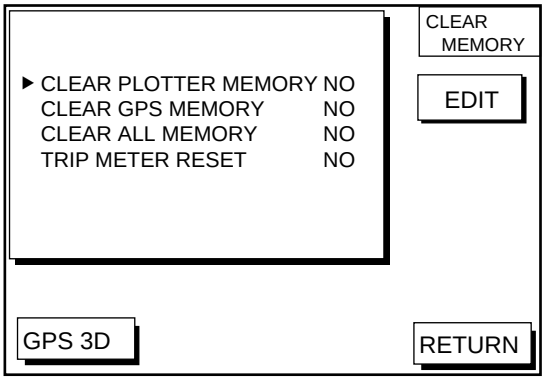

Clear memory menu

3. Press ▲ or ▼ to select memory/trip to clear.
4. Press the EDIT soft key.
5. Press ▲ to select YES.
6. Press the ENTER soft key or the [ENTER] key to clear memory selected.

Note: For PLOTTER MEMORY and CLEAR ALL MEMORY, all waypoints and routes are cleared and default settings are restored. If you require this data, save it to a PC.

Menu Tree

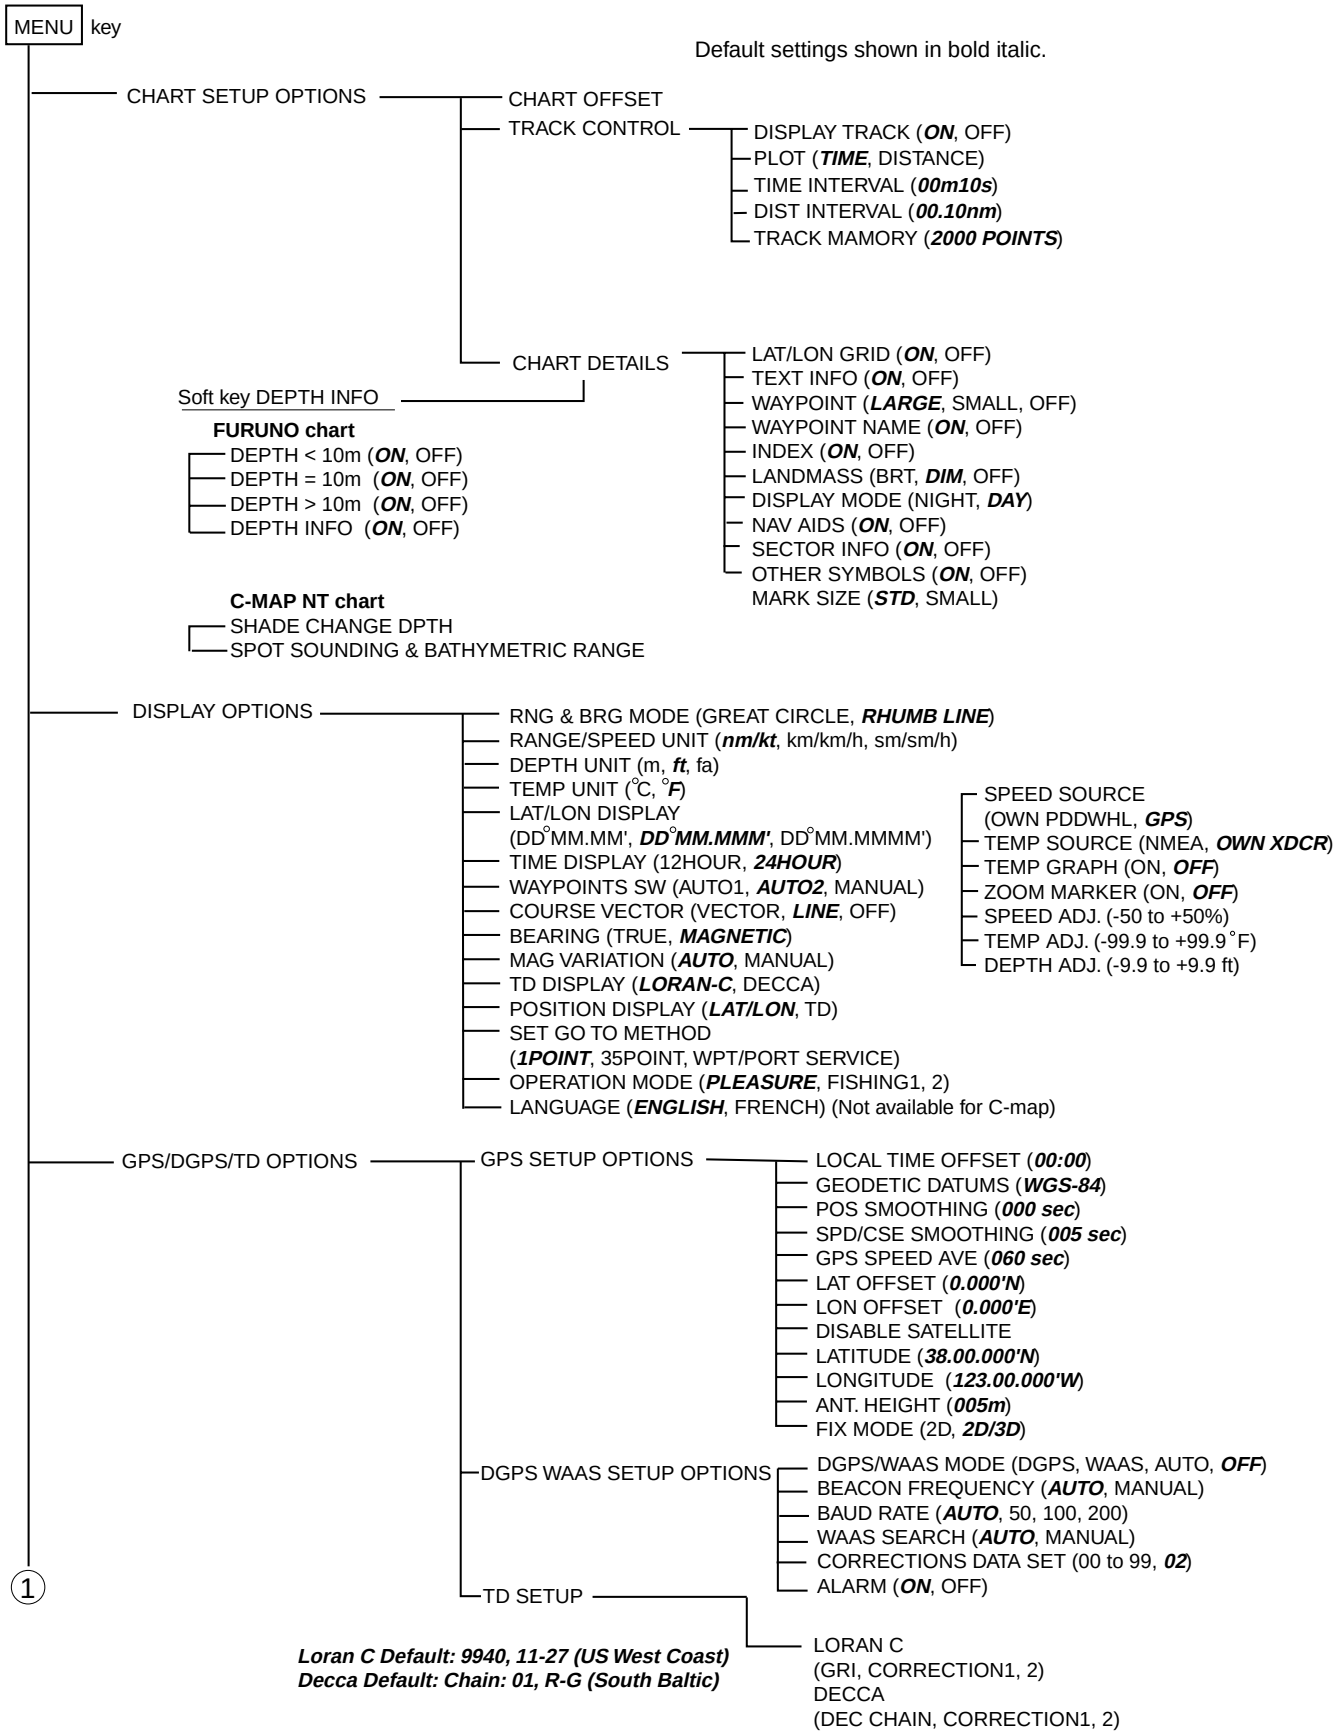
MENU key
Default settings shown in bold italic.
CHART SETUP OPTIONS
CHART OFFSET
TRACK CONTROL
DISPLAY TRACK (ON, OFF)
PLOT (TIME, DISTANCE)
TIME INTERVAL (00m10s)
DIST INTERVAL (00.10nm)
TRACK MAMORY (2000 POINTS)
CHART DETAILS
LAT/LON GRID (ON, OFF)
TEXT INFO (ON, OFF)
WAYPOINT (LARGE, SMALL, OFF)
WAYPOINT NAME (ON, OFF)
INDEX (ON, OFF)
LANDMASS (BRT, DIM, OFF)
DISPLAY MODE (NIGHT, DAY)
NAV AIDS (ON, OFF)
SECTOR INFO (ON, OFF)
OTHER SYMBOLS (ON, OFF)
MARK SIZE (STD, SMALL)
Soft key DEPTH INFO
FURUNO chart
DEPTH < 10m (ON, OFF)
DEPTH = 10m (ON, OFF)
DEPTH > 10m (ON, OFF)
DEPTH INFO (ON, OFF)
C-MAP NT chart
SHADE CHANGE DPTH
SPOT SOUNDING & BATHYMETRIC RANGE
DISPLAY OPTIONS
RNG & BRG MODE (GREAT CIRCLE, RHUMB LINE)
RANGE/SPEED UNIT (nm/kt, km/km/h, sm/sm/h)
DEPTH UNIT (m, ft, fa)
TEMP UNIT (°C, °F)
LAT/LON DISPLAY
(DD°MM.MM', DD°MM.MMM', DD°MM.MMMM')
TIME DISPLAY (12HOUR, 24HOUR)
WAYPOINTS SW (AUTO1, AUTO2, MANUAL)
COURSE VECTOR (VECTOR, LINE, OFF)
BEARING (TRUE, MAGNETIC)
MAG VARIATION (AUTO, MANUAL)
TD DISPLAY (LORAN-C, DECCA)
POSITION DISPLAY (LAT/LON, TD)
SET GO TO METHOD
(1POINT, 35POINT, WPT/PORT SERVICE)
OPERATION MODE (PLEASURE, FISHING1, 2)
LANGUAGE (ENGLISH, FRENCH) (Not available for C-map)
SPEED SOURCE
(OWN PDDWHL, GPS)
TEMP SOURCE (NMEA, OWN XDCR)
TEMP GRAPH (ON, OFF)
ZOOM MARKER (ON, OFF)
SPEED ADJ. (-50 to +50%)
TEMP ADJ. (-99.9 to +99.9°F)
DEPTH ADJ. (-9.9 to +9.9 ft)
GPS/DGPS/TD OPTIONS
GPS SETUP OPTIONS
LOCAL TIME OFFSET (00:00)
GEODETIC DATUMS (WGS-84)
POS SMOOTHING (000 sec)
SPD/CSE SMOOTHING (005 sec)
GPS SPEED AVE (060 sec)
LAT OFFSET (0.000'N)
LON OFFSET (0.000'E)
DISABLE SATELLITE
LATITUDE (38.00.000'N)
LONGITUDE (123.00.000'W)
ANT. HEIGHT (005m)
FIX MODE (2D, 2D/3D)
DGPS WAAS SETUP OPTIONS
DGPS/WAAS MODE (DGPS, WAAS, AUTO, OFF)
BEACON FREQUENCY (AUTO, MANUAL)
BAUD RATE (AUTO, 50, 100, 200)
WAAS SEARCH (AUTO, MANUAL)
CORRECTIONS DATA SET (00 to 99, 02)
ALARM (ON, OFF)
TD SETUP
LORAN C
(GRI, CORRECTION1, 2)
DECCA
(DEC CHAIN, CORRECTION1, 2)
Loran C Default: 9940, 11-27 (US West Coast)
Decca Default: Chain: 01, R-G (South Baltic)
1

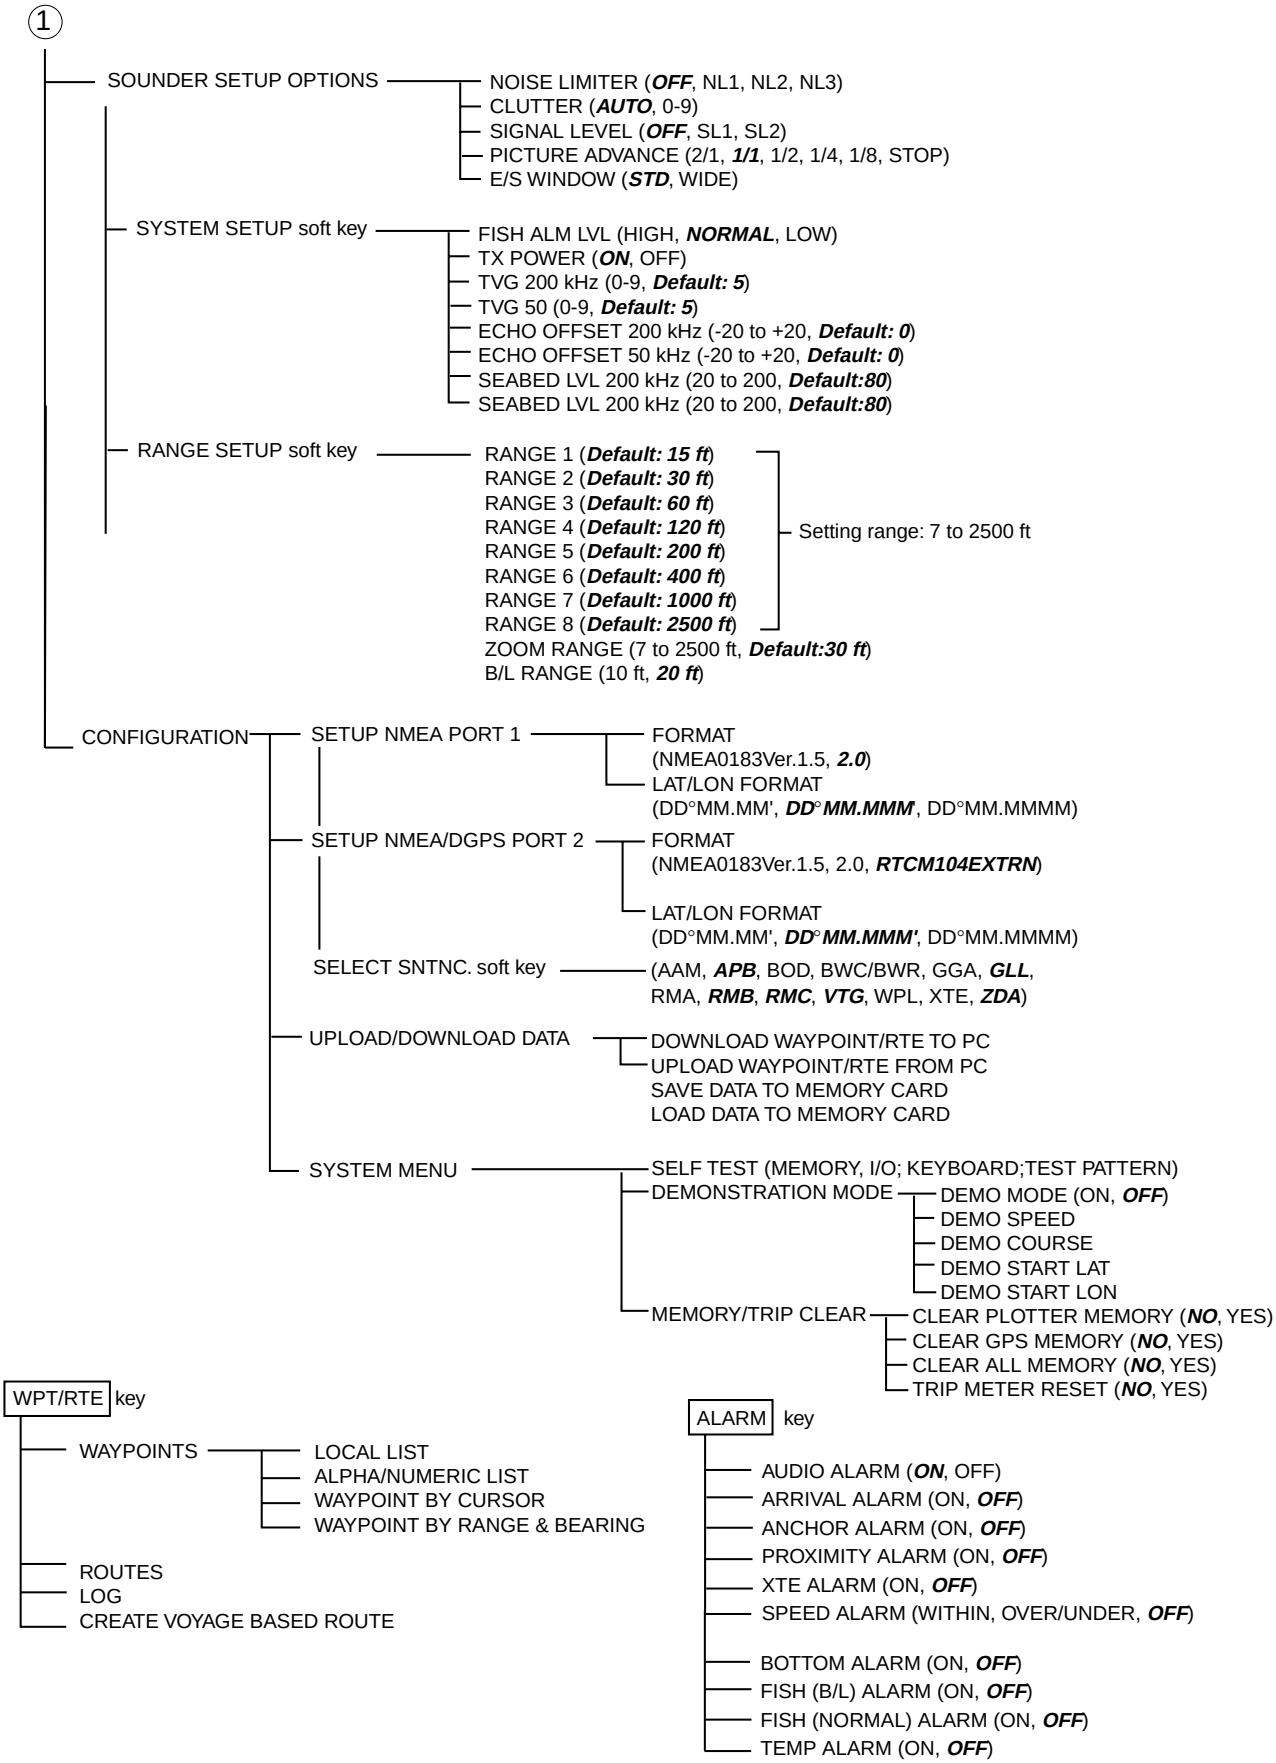
①
SOUNDER SETUP OPTIONS
NOISE LIMITER (OFF, NL1, NL2, NL3)
CLUTTER (AUTO, 0-9)
SIGNAL LEVEL (OFF, SL1, SL2)
PICTURE ADVANCE (2/1, 1/1, 1/2, 1/4, 1/8, STOP)
E/S WINDOW (STD, WIDE)
SYSTEM SETUP soft key
FISH ALM LVL (HIGH, NORMAL, LOW)
TX POWER (ON, OFF)
TVG 200 kHz (0-9, Default: 5)
TVG 50 (0-9, Default: 5)
ECHO OFFSET 200 kHz (-20 to +20, Default: 0)
ECHO OFFSET 50 kHz (-20 to +20, Default: 0)
SEABED LVL 200 kHz (20 to 200, Default:80)
SEABED LVL 200 kHz (20 to 200, Default:80)
RANGE SETUP soft key
RANGE 1 (Default: 15 ft)
RANGE 2 (Default: 30 ft)
RANGE 3 (Default: 60 ft)
RANGE 4 (Default: 120 ft)
RANGE 5 (Default: 200 ft)
RANGE 6 (Default: 400 ft)
RANGE 7 (Default: 1000 ft)
RANGE 8 (Default: 2500 ft)
Setting range: 7 to 2500 ft
ZOOM RANGE (7 to 2500 ft, Default:30 ft)
B/L RANGE (10 ft, 20 ft)
CONFIGURATION
SETUP NMEA PORT 1
FORMAT
(NMEA0183Ver.1.5, 2.0)
LAT/LON FORMAT
(DD°MM.MM', DD°MM.MMM, DD°MM.MMMM)
SETUP NMEA/DGPS PORT 2
FORMAT
(NMEA0183Ver.1.5, 2.0, RTCM104EXTRN)
LAT/LON FORMAT
(DD°MM.MM', DD°MM.MMM', DD°MM.MMMM)
SELECT SNTNC. soft key
(AAM, APB, BOD, BWC/BWR, GGA, GLL,
RMA, RMB, RMC, VTG, WPL, XTE, ZDA)
UPLOAD/DOWNLOAD DATA
DOWNLOAD WAYPOINT/RTE TO PC
UPLOAD WAYPOINT/RTE FROM PC
SAVE DATA TO MEMORY CARD
LOAD DATA TO MEMORY CARD
SYSTEM MENU
SELF TEST (MEMORY, I/O; KEYBOARD;TEST PATTERN)
DEMONSTRATION MODE
DEMO MODE (ON, OFF)
DEMO SPEED
DEMO COURSE
DEMO START LAT
DEMO START LON
MEMORY/TRIP CLEAR
CLEAR PLOTTER MEMORY (NO, YES)
CLEAR GPS MEMORY (NO, YES)
CLEAR ALL MEMORY (NO, YES)
TRIP METER RESET (NO, YES)
WPT/RTE key
WAYPOINTS
LOCAL LIST
ALPHA/NUMERIC LIST
WAYPOINT BY CURSOR
WAYPOINT BY RANGE & BEARING
ROUTES
LOG
CREATE VOYAGE BASED ROUTE
ALARM key
AUDIO ALARM (ON, OFF)
ARRIVAL ALARM (ON, OFF)
ANCHOR ALARM (ON, OFF)
PROXIMITY ALARM (ON, OFF)
XTE ALARM (ON, OFF)
SPEED ALARM (WITHIN, OVER/UNDER, OFF)
BOTTOM ALARM (ON, OFF)
FISH (B/L) ALARM (ON, OFF)
FISH (NORMAL) ALARM (ON, OFF)
TEMP ALARM (ON, OFF)

Loran C Chains

Chain	GRI	S1	S2	S3	S4	S5
Central Pacific	4990	11	29	–	–	–
Canadian East Coast	5930	11	25	38	–	–
Commando Lion (Korea)	5970	11	31	42	–	–
Canadian West Coast	5990	11	27	41	–	–
South Saudi Arabia	7170	11	26	39	52	–
Labrador Sea	7930	11	26	–	–	–
Eastern Russia	7950	11	30	46	61	–
Gulf of Alaska	7960	11	26	44	–	–
Norwegian Sea	7970	11	26	46	60	–
Southeast USA	7980	11	23	43	59	–
Mediterranean Sea	7990	11	29	47	–	–
Western Russia	8000	10	25	50	65	–
North Central USA	8290	11	27	42	–	–
North Saudi Arabia	8990	11	25	40	56	69
Great Lakes	8970	11	28	44	59	–
South Central USA	9610	11	25	40	52	65
West Coast USA	9940	11	27	40	–	–
Northeast USA	9960	11	25	39	54	–
Northwest Pacific (old)	9970	11	30	55	81	–
Icelandic	9980	11	30	–	–	–
North Pacific	9990	11	29	43	–	–
Suez	4991	10	24			
England, France	8940	12	30			
Northwest Pacific	8930	11	30	50	70	
Newfoundland East Coast	7270	11	25			
Lessay	6731	10	39			
BØ	7001	11	27			
Sylt	7499	11	26			
Ejde	9007	10	23	38		
Saudia Arabia North	8830	11	25	39	56	
Saudia Arabia South	7030	11	25	37	55	

Decca Chains

Chain No.	Chain	Chain code	Location	Chain no.	Chain	Chain code	Location
01	South Baltic	0A	Europe	34	Kanto	8C	Japan
02	Vestlandet	0E	"	35	Shikoku	4C	"
03	Southwest British	1B	"	36	Hokuriku	2C	"
04	Northumbrian	2A	"	37	Kita Kyushu	7C	"
05	Holland	2E	"	38	Namaqualand	4A	Southern Africa
06	North British	3B	"	39	Cape	6A	"
07	Lofoten	3E	"	40	Eastern Province	8A	"
08		3F	"	41	South West Africa	9C	"
09	North Baltic	4B	"	42	Natal	10C	"
10	North West	4C	"	43	Dampier	8E	Australia
11	Trondelag	4E	"	44	Port Headland	4A	"
12	English	5B	"	45	Anticosti	9C	Northern America
13	North Bothnian	5F	"	46	East Newfoundland	2C	"
14	Southern Spanish	6A	"	47	Cabot Strait	6B	"
15	North Scottish	6C	"	48	Nova Scotia	7C	"
16	Gulf of Finland	6E	"				
17	Danish	7B	"				
18	Irish	7D	"				
19	Finnmark	7E	"				
20	French	8B	"				
21	South Bothnian	8C	"				
22	Hebridean	8E	"				
23	Frisian Islands	9B	"				
24	Helgeland	9E	"				
25	Skagerrak	10B	"				
26	North Persian Gulf	5C	Persian Gulf & India				
27	South Persian Gulf	1C	"				
28	Bombay	7B	"				
29	Calcutta	8B	"				
30	Bangladesh	6C	"				
31	Saliyah	2F	"				
32	Hokkaido	9C	Japan				
33	Tohoku	6C	"				

World Time

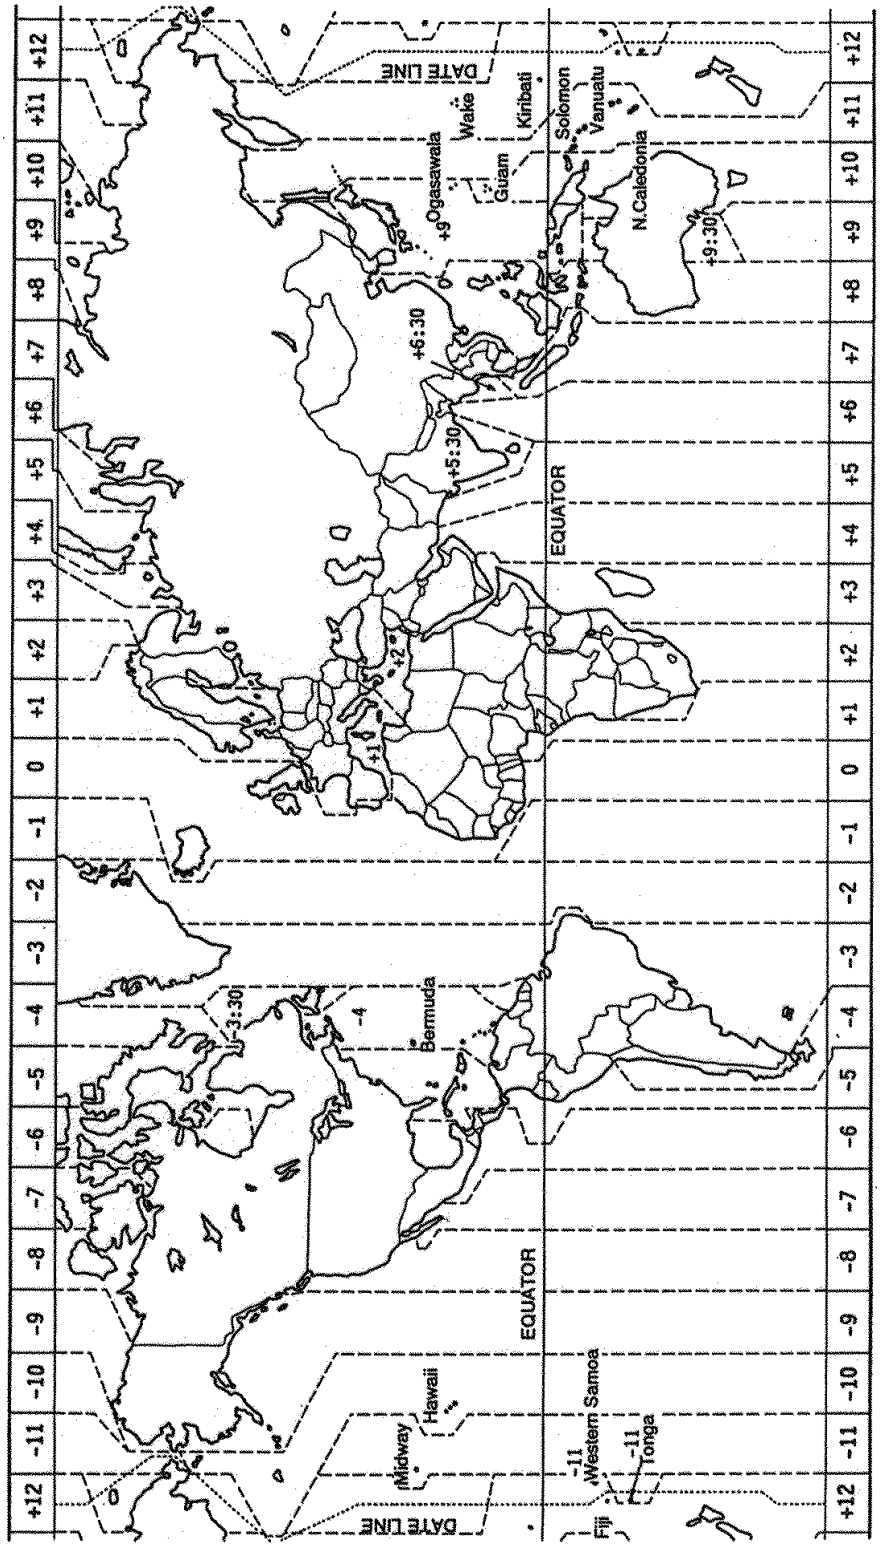
+12
+11
+10
+9
+8
+7
+6
+5
+4
+3
+2
+1
0
-1
-2
-3
-4
-5
-6
-7
-8
-9
-10
-11
+12
DATE LINE
Wake
Kiribati
Solomon
Vanuatu
Ogasawara
Guam
N.Caledonia
+9
+9:30
+6:30
+5:30
EQUATOR
+2
+1
-3:30
-4
Bermuda
EQUATOR
Midway
Hawaii
-11
Western Samoa
-11
Tonga
Fiji
DATE LINE

Geodetic Chart List

001: WGS84
002: WGS72
003: TOKYO : Mean Value (Japan, Korea & Okinawa)
004: NORTH AMERICAN 1927 : Mean Value (CONUS)
005: EUROPEAN 1950 : Mean Value
006: AUSTRALIAN GEODETIC 1984 : Australia & Tasmania
007: ADINDAN-MN : Mean Value (Ethiopia & Sudan)
008: ADINDAN-E : Ethiopia
009: ADINDAN-MA : Mali
010: ADINDAN-SE : Senegal
011 ADINDAN-SU : Sudan
012: AFG : Somalia
013: AIN EL ABD 1970 : Bahrain Is.
014: ANNA 1 ASTRO 1965 : Cocos Is.
015: ARC 1950-MN : Mean Value
016: ARC 1950-B : Botswana
017: ARC 1950-L : Lesotho
018: ARC 1950-M : Malawi
019: ARC 1950-S : Swaziland
020: ARC 1950-ZR : Zaire
021: ARC 1950-ZM : Zambia
022: ARC 1950-ZB : Zimbabwe
023: ARC 1960-MN : Mean Value (Kenya & Tanzania)
024: ARC 1960-K : Kenya
025: ARC 1960-T : Tanzania
026: ASCENSION IS. 1958 : Ascension Is.
027: ASTRO BEACON "E" : Iwo Jima Is.
028: ASTRO B4 SOR. ATOLL : Tern Is.
029: ASTRO POS 71/4 : St. Helena Is.
030: ASTRONOMIC STATION 1952 : Marcus Is.
031: AUSTRALIAN GEODETIC 1966 : Australia & Tasmania
032: BELLEVUE (IGN) : Efate & Erromango Islands
033: BERMUDA 1957 : Bermuda Islands
034: BOGOTA OBSERVATORY : Columbia
035: GAUPO INCHAUSPE : Argentina
036: CANTON IS. 1966 : Phoenix Islands
037: CAPE : South Africa
038: CAPE CANAVERAL : Mean Value (Florida & Bahama Islands)
039: CARTHAGE : Tunisia
040: CHATHAM 1971 : Chatham Is. (New Zealand)
041: CHUA ASTRO : Paraguay
042: CORREGO ALEGRE : Brazil
043: DJAKARTA (BATAVIA) : Sumatra Is. (Indonesia)
044: DOS 1968 : Gizo Is. (New Georgia Is.)
045: EASTER IS. 1967 : Easter Is.
046: EUROPEAN 1950-WE : Western Europe
047: EUROPEAN 1950-CY : Cyprus
048: EUROPEAN 1950-EG : Egypt
049: EUROPEAN 1950-ESC : England, Scotland, Channel & Shetland Islands
050: EUROPEAN 1950-EIS : England, Ireland, Scotland, & Shetland Islands
051: EUROPEAN 1950-GR : Greece
052 EUROPEAN 1950-IR : Iran
053: EUROPEAN 1950-SA : Italy, Sardinia
054: EUROPEAN 1950-SI : Italy, Sicily
055: EUROPEAN 1950-NF : Norway & Finland
056: EUROPEAN 1950-PS : Portugal & Spain
057: EUROPEAN 1979 : Mean Value
058: GANDAJIKA BASE : Republic of Maldives
059: GEODETIC DATUM 1949 : New Zealand
060: GUAM 1963 : Guam Is.
061: GUX 1 ASTRO : Guadalcanal Is.
062: HJORSEY 1955 : Iceland
063: HONG KONG 1363 : Hong Kong
064: INDIAN-TV : Thailand & Vietnam
065: INDIAN-BIN : Bangladesh, India & Nepal
066: IRELAND 1965 : Ireland
067: ISTS 073 ASTRO 1969 : Diego Garcia
068: JOHNSTON IS. 1961 : Johnston Is.
069: KANDAWALA : Sri Lanka
070: KERGUELEN IS. : Kerguelen Is.
071: KERTAU 1948 : West Malaysia & Singapore
072: LA REUNION : Mascarene Is.
073: L. C. 5 ASTRO : Cayman Brac Is.
074: LIBERIA 1964 : Liberia
075: LUZON : Philippines (excl. Mindanao Is.)
076: LUZON-M : Mindanao Is.
077: MAHE 1971 : Mahe Is.
078: MARCO ASTRO : Salvage Islands
079: MASSAWA : Eritrea (Ethiopia)
080: MERCHICH : Morocco
081: MIDWAY ASTRO 1961 : Midway Is.
082: MINNA : Nigeria
083: NAHRWAN-O : Masirah Is. (0man)
084: NAHRWAN-UAE : United Arab Emirates
085: NAHRWAN-SA : Saudi Arabia
086: NAMIBIA : Namibia
087: MAPARIMA, BWI : Trinidad & Tobago
088: NORTH AMERICAN 1927WU : Western United States
089: NORTH AMERICAN 1927EU : Eastern United States
090: NORTH AMERICAN 1927AK : Alaska
091: NORTH AMERICAN 1927BH : Bahamas (excl. San Salvador Is.)
092: NORTH AMERICAN 1927SS : Bahamas, San Salvador Is.
093: NORTH AMERICAN 1927CN : Canada (incl. Newfoundland Is.)
094: NORTH AMERICAN 1927AB : Alberta & British Columbia
095: NORTH AMERICAN 1927EC : East Canada
096: NORTH AMERICAN 1927MO : Manitoba & Ontario
097: NORTH AMERICAN 1927NE : Northwest Territories & Saskatchewan
098: NORTH AMERICAN 1927YK : Yukon
099: NORTH AMERICAN 1927CZ : Canal Zone
100: NORTH AMERICAN 1927CR : Caribbean
101: NORTH AMERICAN 1927CA : Central America
102: NORTH AMERICAN 1927CU : Cuba
103: NORTH AMERICAN 1927GR : Greenland
104: NORTH AMERICAN 1927MX : Mexico
105: NORTH AMERICAN 1983AK : Alaska
106: NORTH AMERICAN 1983CN : Canada
107: NORTH AMERICAN 1983CS : CONUS
108: NORTH AMERICAN 1983MX : Mexico, Central America
109: OBSERVATORIO 1966 : Corvo & Flores Islands (Azores)
110: OLD EGYPTIAN 1930 : Egypt
111: OLD HAWAIIAN-MN : Mean Value
112: OLD HAWAIIAN-HW : Hawaii
113: OLD HAWAIIAN-KA : Kauai
114: OLD HAWAIIAN-MA : Maui
115: OLD HAWAIIAN-OA : Oahu
116: OMAN : Oman
117: ORDNANCE SURVEY OF GREAT BRITAIN 1936-MN: Mean Value
118: ORDNANCE SURVEY OF GREAT BRITAIN 1936-E: England
119: ORDNANCE SURVEY OF GREAT BRITAIN 1936-IM: England, Isle of Man & Wales
120: ORDNANCE SURVEY OF GREAT BRITAIN 1936-SSI: Scotland, & Shetland Islands
121: ORDNANCE SURVEY OF GREAT BRITAIN 1936-WL: Wales
122: PICO DE LAS NIVIES : Canary Islands
123: PITCAIRN ASTRO 1967 : Pitcairn Is.
124: PROVISIONS SOUTH CHILEAN 1963: South Chile (near 53°S)
125: PROVISIONAL SOUTH AMERICAN 1956MN: Mean Value
126: PROVISIONAL SOUTH AMERICAN 1956BO: Bolivia
127: PROVISIONAL SOUTH AMERICAN 1956NC: Chile-Northern Chile (near 19°S)
128: PROVISIONAL SOUTH AMERICAN 1956SC: Chile-Southern Chile (near 43°S)
129: PROVISIONAL SOUTH AMERICAN 1956CO: Columbia
130: PROVISIONAL SOUTH AMERICAN 1956EC: Ecuador
131: PROVISIONAL SOUTH AMERICAN 1956GY: Guyana
132: PROVISIONAL SOUTH AMERICAN 1956PR: Peru
133: PROVISIONAL SOUTH AMERICAN 1956VN: Venezuela
134: PUERTO RICO : Puerto Rico & Virgin Islands
135: QATAR NATIONAL : Qatar
136: QORNOQ : South Greenland
137: ROME 1940 : Sardinia Islands
138: SANTA BRAZ : Sao Maguel, Santa Maria Islands (Azores)
139: SANTO (DOS) : Espirito Santo Is.
140: SAPPER HILL 1943 : East Falkland Is.
141: SOUTH AMERICAN 1969MN : Mean Value
142: SOUTH AMERICAN 1969AG : Argentina
143: SOUTH AMERICAN 1969BO : Bolivia
144: SOUTH AMERICAN 1969BR : Brazil
145: SOUTH AMERICAN 1969CH : Chile
146: SOUTH AMERICAN 1969CO : Columbia
147: SOUTH AMERICAN 1969EC : Ecuador
148: SOUTH AMERICAN 1969GY : Guyana
149: SOUTH AMERICAN 1969PA : Paraguay
150: SOUTH AMERICAN 1969PR : Peru
151: SOUTH AMERICAN 1969TT : Trinidad & Tobago
152: SOUTH AMERICAN 1969VZ : Venezuela
153: SOUTH ASIA : Singapore
154: SOUTHEAST BASE : Porto Santo & Madeira Islands
155: SOUTHWEST BASE : Faial, Graciosa, Pico, Sao Jorge, & Terceira Is.
156: TIMBALAI 1948 : Brunei & East Malaysia (Sarawak & Sadah)
157: TOKYO JP : Japan
158: TOKYO KP : Korea
159: TOKYO OK : Okinawa
160: TRISTAN ASTRO 1968 : Tristan da Cunha
161: VITI LEVU 1916 : Viti Levu Is. (Fiji Islands)
162: WAKEENIWETOK 1960 : Marshall Islands
163: ZANDERIJ : Surinam
164: BUKIT RIMPAH : Bangka & Belitung Islands (Indonesia)
165: CAMP AREA ASTRO : Camp Mcmurdo Area, Antarctica
166: G. SEGARA : Kalimantan Is. (Indonesia)
167: HERAT NORTH : Afghanistan
168: HUTZUSHAN : Taiwan
169: TANANARIVE OBSERVATORY 1925: Madagascar
170: YACARE : Uruguay
171: RT-90 : Sweden
172: Pulkovo 1942 : Russia
173: Finish KKJ : Finland

SPECIFICATIONS OF GPS PLOTTER/SOUNDER
GP-1640F

1 GENERAL

1.1	Display	5.7-inch monochrome LCD
1.2	Projection	Mercator
1.3	Usable Area	85° latitude or below
1.4	Display Mode	Plotter, Video pilot, Highway display, Waypoint display
1.5	Alarms	Arrival and Anchor watch, Cross track error and proximity alarms, Ship's speed in and out alarms

2 GPS RECEIVER

2.1	Receiving Channels	
	GPS	12 channels parallel, 12 satellites tracking
	WAAS	1 channel
2.2	Rx Frequency	1575.42 MHz
2.3	Rx Code	C/A code, WAAS
2.4	Position Fixing System	All in view, 8-state Kalman filter
2.5	Position Accuracy	
	GPS	10 m (95% of the time, HDOP 4)
	DGPS	5 m (95% of the time, external data required)
	WAAS	3 m (95% of the time)
2.6	Tracking Velocity	999 kt
2.7	Position-fixing Time	Warm start: 12 s approx., Cold start: 90 s approx.
2.8	Position Update Interval	1 s

3 DISPLAY UNIT

3.1	Display Mode	monochrome, 5 levels (include base color)
3.2	Effective Area	115 (W) x 84.2 (H) mm
3.3	Display Pixels	320 (W) x 240 (H) dots

4 PLOTTER FUNCTIONS

4.1	Effective Projection Area	0.125 nm to 2,048 nm (at equatorial area)
4.2	Track Display	Plot interval: by time (1 s to 99 m 59 s) or by distance (0.01 nm to 99.99 nm)
4.3	Memory Capacity	Track/Mark: 5000 points, waypoint: 800 point
4.4	Storage Capacity	Simple route: 200 routes with 35 waypoints each
4.5	MOB	1 point

4.6	Quick routes	1 course
4.7	Electronic Chart Card	FURUNO/NAVIONICS or C-MAP NT Model available

5 INTERFACE

5.1	Input data sentences	IEC61162-1 and NMEA 0183 Ver1.5 $**DBT, $**DPT, $**MTW, $**TLL, $GPWPL
5.2	Output data sentences	IEC61162-1 or NMEA 0183 Ver1.5 selected on menu $GPAAM, $GPAPB, $GPBOD, $GPBWR/GPBWC, $GPGLL, $GPGGA, $GPRMA, $GPRMB, $GPRMC, $GPVTG, $GPXTE, $GPZDA, $GPWPL, $GPMTW, $GPDBT/DPT (GP-1640F only)

6 SOUNDER

6.1	Transmit Frequency	50/200 kHz
6.2	Transmission	600 Wrms
6.3	Display range	5/10/20/40/80/150/300/800 m, shift; 0-800 m
6.4	Extension Mode	Marker zoom, Bottom zoom, Bottom rock,
6.5	Auto Mode	Cruising/Fishing selected
6.6	Picture advance	6 steps

7 POWER SUPPLY

7.1	Display Unit	12-24 VDC: 1.2-0.2 A
7.2	Rectifier (PR-62 option)	100/110/115/220/230 VAC, 50/60 Hz, 1 phase

8 ENVIRONMENTAL CONDITION

8.1	Ambient Temperature	Antenna Unit: -20°C to +70°C Display Unit: -15°C to +55°C
8.2	Relative Humidity	95% or less at 40°C
8.3	Water proofing (IEC60529)	Antenna Unit: IPX5 Display Unit: IPX2
8.4	Vibration	IEC 60945

9 COATING COLOR

9.1	Antenna Unit	N9.5 (white)
9.2	Display Unit	Cover: 2.5GY5/1.5, Panel: N3.0

INDEX

A

Alarm information window 9-4
Alarm messages 9-4
Alarms
  alarm information window 9-4
  alarm message 9-4
  anchor watch alarm 9-2
  arrival alarm 9-1
  audio alarm 9-1
  proximity alarm 9-3
  speed alarm 9-3
  XTE alarm 9-2
Anchor watch alarm 9-2
Antenna height 11-6
Arrival alarm 9-1
Audio alarm 9-1
Auto course-up mode 3-1

B

Battery replacement 12-2
Beacon baud rate 10-6
Beacon frequency 10-6
Beacon information display 2-6
Brilliance adjustment 1-3
Buoy data 2-4

C

Chart details menu 11-2
Chart offset menu 11-1
Chart scale 3-2
Chart setup options menu 11-1–11-2
Configuration menu 11-10–11-13
Course vector 11-3
Course-up mode 3-1
Cross-track error alarm. See XTE alarm
Cursor 3-2
Cursor data 12-1

D

Decca chains A-4
DECCA station selection 11-8
Demonstration display 1-5
Depth info 10-2
DEPTH INFO soft key 11-2
Depth unit 11-3
DGPS beacon information display 3-6
DGPS/WAAS mode 10-6
Diagnostics
  display test 13-5
  keyboard test 13-5
  memory, I/O test 13-4
Display mode 11-2
Disable satellite 11-6
Display options menu 11-2–11-4
Display setup menu 11-2–11-4
Display test 13-5
Downloading data 11-11

E

Error messages 13-3

F

Fix mode 11-6
Fuse replacement 13-2

G

Geodetic datum 11-5
GPS satellite monitor display 3-5
GPS/DGPS/TD options menu 11-4–11-7
Great circle 11-2

H

Highway display 3-7

I

Indications
  enlargement of nav data 3-5

K

Keyboard test 13-5

L
Lat/lon display 11-3
Lighthouse data 3-4
Local time 11-5
Loran C chains A-3
Loran C station selection 11-7

M
Magnetic bearing 11-3
Magnetic variation 11-3
Maintenance 13-1
Mark
displaying 5-2
entering 5-1
erasing 5-3
line 5-2
shape 5-2
Memory card
formatting 10-1
saving data 10-1
loading 10-2
Memory/trip clear 13-6
Memory, I/O port test 13-4
MENU key 1-4
Menu tree A-1–A-2
Mini chart cards
aids to navigation data 2-4
buoy data 3-4
chart scale 3-2
chart symbols 3-3
depth info 11-2
grid 11-2
Indices 11-2
indices 3-3
inserting 1-2
lighthouse data 3-4
nav aids 11-2
port service icons (NAVIONICS) 3-4
text info 11-2

N
Nav data display 3-5
Navigation
cancelling 8-5
multiple quick points 8-1
ports, port service 8-2
quick points 8-1–8-5
restarting 8-4
route 8-3
route in reverse order 8-3
single quick point 8-1
specific route leg 8-3
switching route waypoints 8-4
waypoints 8-2
North-up mode 3-1

O
Object 12-1
Operation mode 3-8

P
Port services
description 3-4
navigating to 8-2,12-3
Position format selection 11-4
Power on/off 1-2
POWER/BRILL key 1-3
Presentation modes 3-1
Program number 12-7,13-4
Proximity alarm 9-3
activating, deactivating 9-3
setting radius for individual waypoints 6-3

Q
Quick points
entry method 8-1
multiple points 8-1
single point 8-1

R
Range selection
plotter 3-2
Range unit 11-3
Rhumb line 11-3
Routes
connecting (two) 7-2
entering by cursor 7-2
entering through route list 7-1
entering track based 7-4
erasing 7-5
inserting waypoints on the plotter display 7-3
inserting waypoints through route list 7-2
navigating 8-3
navigating in reverse order 8-3
navigating specific leg 8-3
removing from plotter display 7-4
removing waypoints through route list 8-3
restarting navigation of 8-4

switching waypoints 8-4

S

SAVE/MOB key 6-1
Sector info (lighthouse viewable angle) 11-2
Setup NMEA port 1 menu 11-10
Setup NMEA port 2 menu 11-10
Smoothing
position 11-5
speed/course 11-6
Soft keys 1-4
Sounder
bottom alarm 2-9
bottom-lock display 2-3
bottom-zoom display 2-3
clutter 2-7
dual-frequency display 2-4
display mode 2-3
fish alarm 2-9
gain 2-6
marker zoom display 2-3
noise limiter 2-7
water temperature alarm 2-9
picture advance speed 2-8

Speed
GPS speed averaging 11-6
input 8-4
unit 11-4
Speed alarm 9-3
Steering display 3-6
System configuration v
System menu 11-13

T

TD setup menu 11-7–11-8
TDs selection 11-3
Temperature unit 11-3
Tidal Information 12-2
Time
display selection 11-3
local 11-5
Trip 3-8
Tone adjustment 1-3
Track
displaying 4-1
erasing all 4-3
plotting interval 4-2
stopping/restarting plotting of 4-1
Track based route 7-4
Track and markpoints 5-2
Troubleshooting 13-2

U

Upload/download data menu 11-11
Uploading data 11-12

W

Waypoints
changing data 6-4
changing position at entry 5-3
changing position on plotter screen 6-5
comments 6-3
entering at MOB position 6-1
entering at own ship's position 6-1
entering by cursor 6-1
entering by latitude and longitude position 6-3
entering by range and bearing 6-3
erasing individual by cursor 6-4
erasing individual through waypoint list 6-4
mark size 6-5
name entry 6-3
name on/off 11-2
navigating by 8-2
proximity alarm radius 6-3
searching 6-5
shape 6-2
size 11-2
World time A-5
WPT/RTE key 6-1

X

XTE alarm 9-2
XTE scale 3-7

FURUNO ELECTRIC CO., LTD.
9-52 Ashihara-Cho, Nishinomiya City, 662-8580, Hyogo, Japan
Tel: +81 798-65-2111 Fax: +81 798-65-4200

Pub NO. DOC-477

Declaration of Conformity CE 0560

We FURUNO ELECTRIC CO., LTD.

(Manufacturer)

9-52 Ashihara-Cho, Nishinomiya City, 662-8580, Hyogo, Japan

(Address)

declare under our sole responsibility that the product

GPS Plotter/Sounder Models GP-1640 and GP-1640F

(Model name, serial number)

is in conformity with the essential requirements as described in the Directive 1999/5/EC of the European Parliament and of the Council of 9 March 1999 on radio equipment and telecommunications terminal equipment (R&TTE Directive) and satisfies all the technical regulations applicable to the product within this Directive

EN 60945: 1997-01 (IEC 60945 Third edition: 1996-11)
EN 60950 (IEC 60950 Third edition: 1999-04)

(title and/or number and date of issue of the standard(s) or other normative document(s))

For assessment, see

- Statement of Opinion N° 002214104/AA/00 of 5 June 2002 issued by Telefication, The Netherlands
- EMC Test Report FLI 12-02-017 of 7 May 2002 prepared by Furuno Labotech International Co., Ltd.
- Safety Test Report FLI 12-02-018 of 10 May 2002 prepared by Furuno Labotech International Co., Ltd.

On behalf of Furuno Electric Co., Ltd.

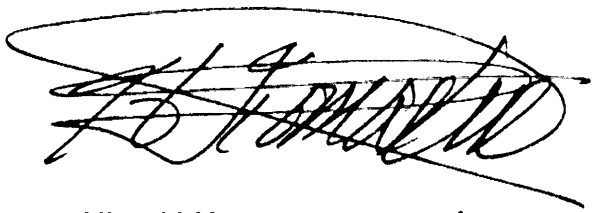

Hiroaki Komatsu
Manager,
International Rules and Regulations

Nishinomiya City, Japan
June 25, 2002

(Place and date of issue)

(name and signature or equivalent marking of authorized person)